

ET982

**COM Express Type 6 (Rev. 3.1) Module
with 13th Gen Intel® Core™
Mobile Processors**

User's Manual

Version 1.0
(August 2026)



Copyright

© 2026 IBASE Technology, Inc. All rights reserved.

No part of this publication may be reproduced, copied, stored in a retrieval system, translated into any language or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without the prior written consent of IBASE Technology, Inc. (hereinafter referred to as "IBASE").

Disclaimer

IBASE reserves the right to make changes and improvements to the products described in this document without prior notice. While every effort has been made to ensure the accuracy of the information in this document, IBASE does not guarantee that it is free of errors.

IBASE assumes no liability for incidental or consequential damages that may arise from the misapplication or inability to use the product or the information contained herein, nor for any infringements of rights of third parties, resulting from its use.

Trademarks

All the trademarks, registered trademarks, and brands mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Compliance



This product has passed CE tests for environmental specifications and limits. This product is in accordance with the directives of the European Union (EU). In a domestic environment, this product may cause radio interference in which case users may be required to take adequate measures.



This product has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the manufacturer's instructions, may cause harmful interference to radio communications.

WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive for waste electrical and electronic equipment (WEEE - 2012/19/EU). Instead, it should be disposed of by returning it to a municipal recycling collection point. Check local regulations for disposal of electronic products.

Green IBASE



This product complies with RoHS 2 restrictions, which prohibit the use of certain hazardous substances in electrical and electronic equipment. The following substances must not exceed the specified concentrations:

- Hexavalent chromium: 1,000 ppm
- Poly-brominated biphenyls (PBBs): 1,000 ppm
- Poly-brominated diphenyl ethers (PBDEs): 1,000 ppm
- Cadmium: 100 ppm
- Mercury: 1,000 ppm
- Lead: 1,000 ppm
- Bis(2-ethylhexyl) phthalate (DEHP): 1,000 ppm
- Butyl benzyl phthalate (BBP): 1,000 ppm
- Dibutyl phthalate (DBP): 1,000 ppm
- Diisobutyl phthalate (DIBP): 1,000 ppm

Important Safety Information

Carefully read the precautions before using the board.

Environmental conditions:

- Use this product only within the operating temperature range specified for the applicable product model.
- Do not leave this product in an environment where the storage temperature may be below -20°C or above 80°C. To prevent damage, the product must be used in a controlled environment.

Care for your IBASE products:

- Disconnect all power sources before cleaning the PCB.
- Clean the PCB with a circuit board cleaner or degreaser, or use cotton swabs and alcohol.
- Vacuum the dust with a computer vacuum cleaner to prevent the fan from being clogged.



WARNING

Attention during use:

- Do not use this product near water.
- Do not spill water or any other liquids on this product.
- Do not place heavy objects on this product.

Anti-static precautions

- Wear an anti-static wrist strap to avoid electrostatic discharge.
- Place the PCB on an anti-static surface or mat.
- Hold the edges of the PCB when moving or manipulating it.
- When handling the product, avoid touching component leads, contacts, or the surface of the PCB.
- Ground yourself by frequently touching a grounded metal object to discharge any static.



CAUTION

There is a danger of explosion if the internal lithium-ion battery is replaced with an incorrect type. Only replace the battery with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions or recycle them at a local recycling facility or battery collection point.

Warranty Policy

- **IBASE standard products:**

24-month (2-year) warranty from the date of shipment. If the date of shipment cannot be ascertained, the product serial numbers can be used to determine the approximate shipping date.

- **Third-party parts:**

12-month (1-year) warranty from the date of delivery for third-party parts not manufactured by IBASE.

However, products that fail due to misuse, accident, improper installation, or unauthorized repair shall be considered out of warranty, and customers will be billed for repair and shipping charges.

Technical Support & Services

1. Visit the IBASE website at www.ibase.com.tw to find the latest information about the product.
2. If you need further assistance from your distributor or sales representative, prepare the following product information and provide a detailed description of the problem.
 - Product model name
 - Product serial number
 - Detailed description of the problem
 - Any error messages, in text or screenshots, if available
 - The arrangement of the peripherals
 - Software in use (such as OS and application software, including the version numbers)
3. If repair service is required, please log in to the RMA system of the website or contact your distributor or sales representative for assistance.

Table of Contents

Chapter 1	General Information.....	1
1.1	Introduction	2
1.2	Features	2
1.3	Packing List	3
1.4	Optional Accessories	3
1.5	Specifications	3
1.6	Block Diagram	5
1.7	Board View	6
1.8	Dimensions	8
Chapter 2	Hardware Configuration	9
2.1	Installing the Memory	10
2.2	Switch & Connector Locations	11
2.3	Switch & Connector Quick Reference	12
2.3.1	ATX / AT Mode (SW1)	12
2.3.2	COM Express Module Type 6 Connector	13
Chapter 3	Drivers Installation.....	17
3.1	Introduction	18
3.2	Intel® Chipset Software Installation Utility	18
3.3	Graphics Driver Installation	20
3.4	Audio Driver Installation	22
3.5	LAN Driver Installation	24
3.6	Intel® Management Engine Drivers Installation	25
3.7	Intel® Serial IO Drivers Installation	26
Chapter 4	BIOS Setup	27
4.1	Introduction	28
4.2	BIOS Setup	28
4.3	Main Settings	29
4.4	Advanced Settings	30
4.5	Chipset Settings	43
4.6	Security Settings	46
4.7	Boot Settings	47
4.8	Save & Exit Settings	48
Appendix		49
A.	I/O Port Address Map	50
B.	Interrupt Request Lines (IRQ)	52
C.	Watchdog Timer Configuration	53

Chapter 1

General Information

The information provided in this chapter includes:

- Features
- Packing List
- Optional Accessories
- Specifications
- Block Diagram
- Board View
- Dimensions

1.1 Introduction

The ET982 COM Express module is a high-performance embedded solution based on 13th Gen Intel® Core™ processors (i7/i5/i3), compliant with the COM Express Type 6 Rev. 3.1 specification for compatibility with modern carrier board designs. It supports up to 64GB of DDR5 memory via dual SO-DIMM sockets, providing enhanced bandwidth and system responsiveness. The module enables up to three independent displays through HDMI, DisplayPort, VGA, LVDS, or eDP interfaces, supporting flexible multi-display configurations. Comprehensive I/O connectivity includes a single 2.5GbE Ethernet, multiple USB ports, SATA III, and serial COM interfaces for a wide range of applications. For expansion, it offers PCI Express Gen3 lanes, including 1x PCIe x16, 1x PCIe x4, and 4x PCIe x1, ensuring high-speed integration with peripheral devices. Security is enhanced with the integrated Nuvoton NPCT760AABYX TPM 2.0 module, while features such as a Watchdog Timer and system monitoring ensure reliable operation.



1.2 Features

- Onboard 13th Gen Intel® Core™ i7/i5/i3 processors
- 2x DDR5-5200 SO-DIMM sockets, Max. 64GB
- Supports 3x independent displays (HDMI / DP / VGA / LVDS or eDP)
- 1x onboard 2.5 GbE LAN
- 4x USB 3.2, 8x USB 2.0, 2x SATA III, 2x COM
- 1x PCIe x16, 1x PCIe x4, 4x PCIe x1 signals to carrier board
- Watchdog timer, Digital I/O, TPM (2.0)
- Supports wide-range operating temperature from -40°C to 75°C (Only ET982LV-I7PRE)

1.3 Packing List

Your ET982 package should include the items listed below. If any of the items below is missing, contact the distributor or dealer from whom you purchased the product.

- ET982 COM Express Module
- Quick installation guide (drivers and manual available via IBASE website)

1.4 Optional Accessories

- **IP414** - ATX COM Express Type-6 carrier board, supports ATX
- **IP414-DC** - ATX COM Express Type-6 carrier board, supports DC-in
- **HSET982-A** - Heatsink with fan for ET981/ET982
- **HSET982-3** - Heat spreader for ET981/ET982

1.5 Specifications

Product Models	
ET982LV-I7PRE	Intel® i7-1370PRE with LVDS support
ET982LV-I7P	Intel® i7-1370PE with LVDS support
ET982-I7U	Intel® i7-1365UE with eDP support


System	
CPU	BGA1744 for 13th Gen Intel® Core i7/i5/i3 mobile processors (SoC)
PCH	Integrated in SoC
Memory	2x DDR5-5200 SO-DIMM sockets, Max. 64GB
BIOS	AMI
Watchdog Timer	256 levels
H/W Monitor	Yes
Storage Interface	N/A

Expansion Slots	1x PCIe(x16), 1x PCIe(x4), 4x PCIe(x1) to carrier board
Graphics Controller	13th Gen Intel® Core processors integrated graphics
Video Output	HDMI, DisplayPort, VGA, LVDS or eDP on carrier board
Ethernet	1x Intel® I226LM 2.5GbE (RJ45 via carrier board)
I/O Chipset	Fintek F81804U-I onboard
Serial Port	2x COM ports (Tx/Rx only) via carrier board
USB 2.0	8x USB 2.0 via carrier board
USB 3.X	4x USB 3.2 (10 Gbps) via carrier board
Serial ATA	2x SATA III via carrier board
Audio	Integrated HD Audio controller
TPM	Nuvoton NPCT760AABYX (TPM 2.0)
Others	Digital I/O (4-in/4-out) / Watchdog Timer
Dimensions (L x W)	95mm x 125mm (3.74" x 4.92")
Power Consumption	TBD

Environment	
Operating Temperature	0°C ~ 60°C (32°F ~ 140°F) (standard models) -40°C ~ 75°C (ET982LV-I7PRE)
Storage Temperature	-20°C ~ 80°C (-4°F ~ 176°F)
Relative Humidity	90% RH (non-condensing @ 60°C)


All specifications are subject to change without prior notice.

1.6 Block Diagram

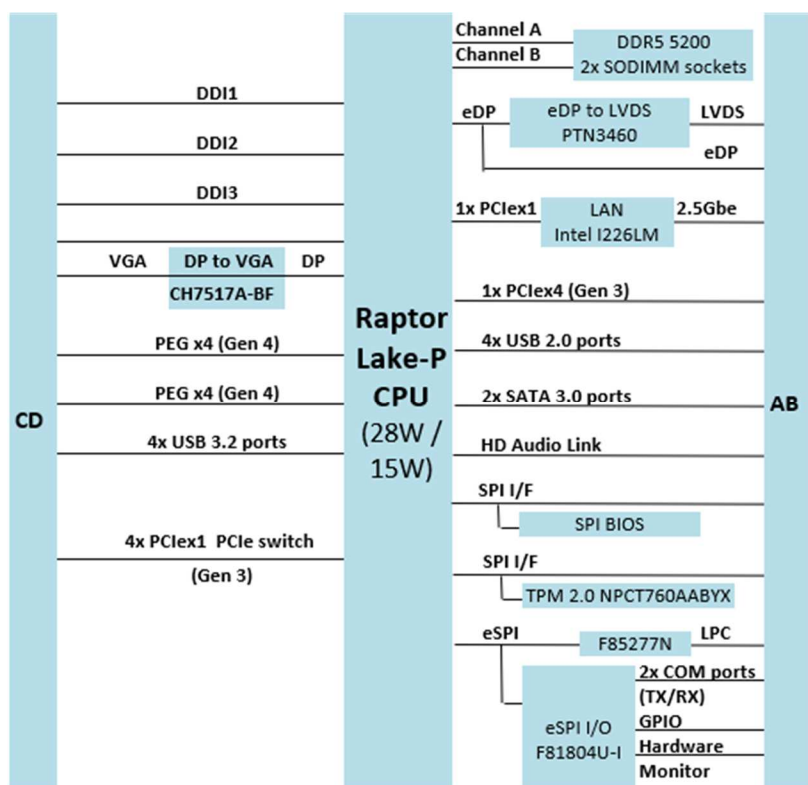


1.7 Board View

Top View

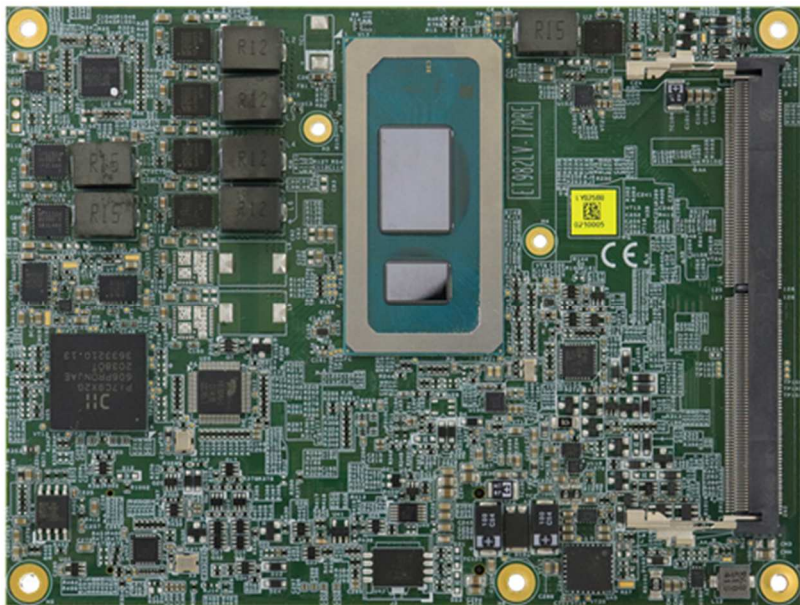


Bottom View

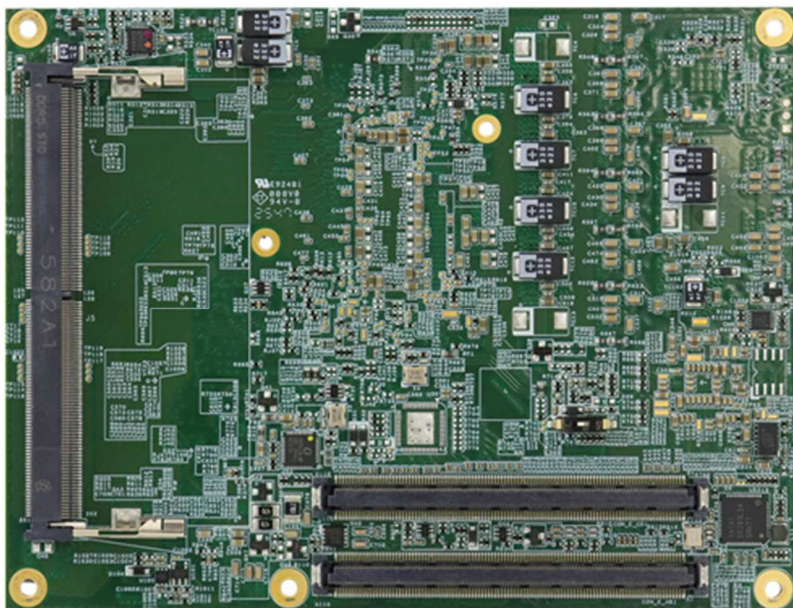

* The pictures are for reference only. Some minor components may differ.

1.8 Dimensions

Unit: mm

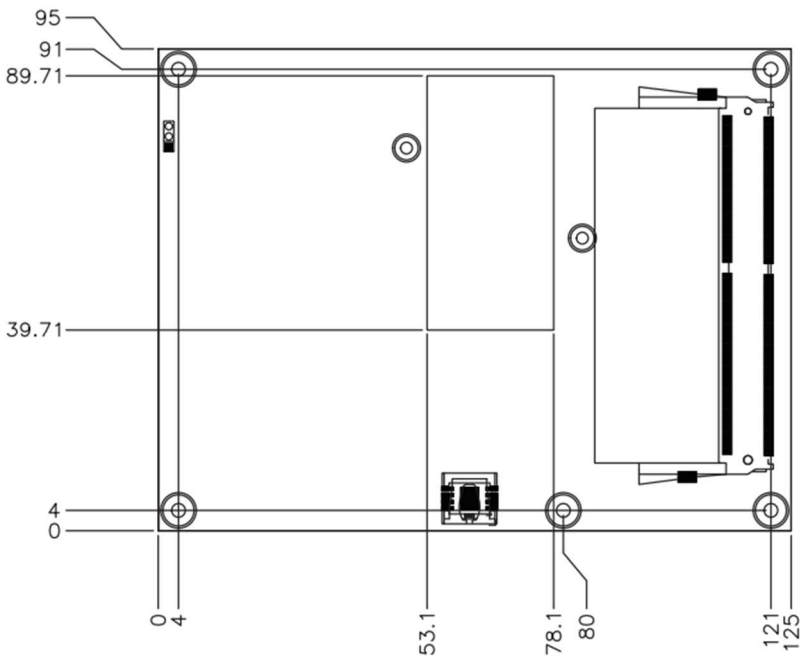

Chapter 2


Hardware Configuration

This section provides information on jumper settings and connectors on the ET982 for system setup. Memory must be installed before using the product. The topics covered are:

- Installations
- Jumpers and connector locations and information

2.1 Installing the Memory

To replace or install a memory module, locate the memory slot (J2, J4) on the board and perform the following steps:

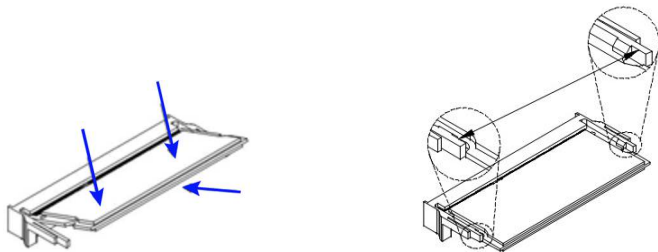


1. Align the key of the memory module with that on the memory slot and insert the module at an angle.
2. Gently press the module down until the retaining clips snap into place, securing it in the slot.


To remove the module, press the clips outwards simultaneously with both hands, and the module will pop up.

2.2 Switch & Connector Locations

Top View

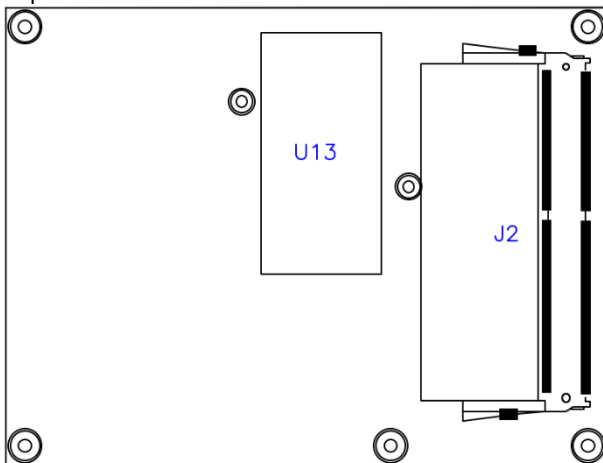

Bottom View

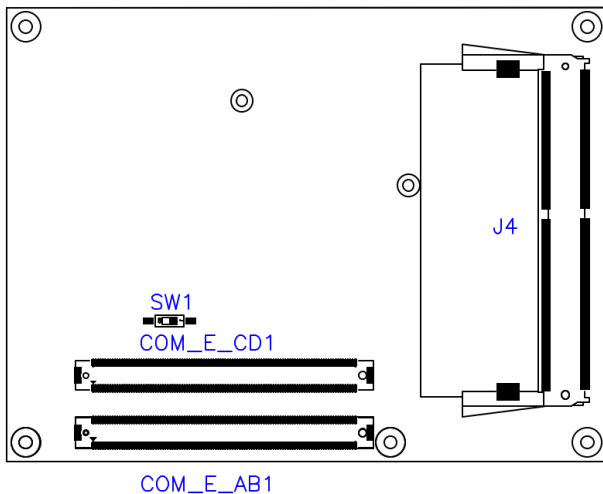

Remarks:

SW1: ATX / AT Mode

J2, J4: SO-DIMM Sockets


COM_E_AB1, COM_E_CD1: COM Express Module Type 6 Connector

2.3 Switch & Connector Quick Reference

Function	Jumper	Page
ATX / AT Mode	SW1	12
COM Express Module Type 6 Connector	(COM_E_AB1, COM_E_CD1)	13


2.3.1 ATX / AT Mode (SW1)

Function	Setting	Illustration
ATX (default)	P1-OFF	
AT	P1-ON	

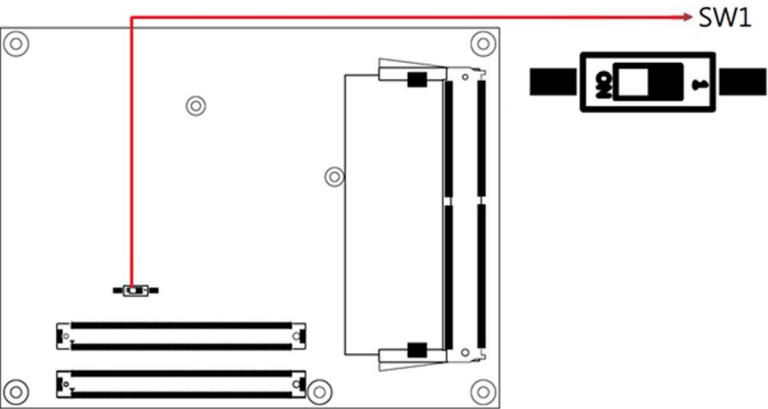

Note: AT: Auto power on; ATX: Manual power on

2.3.2 COM Express Module Type 6 Connector

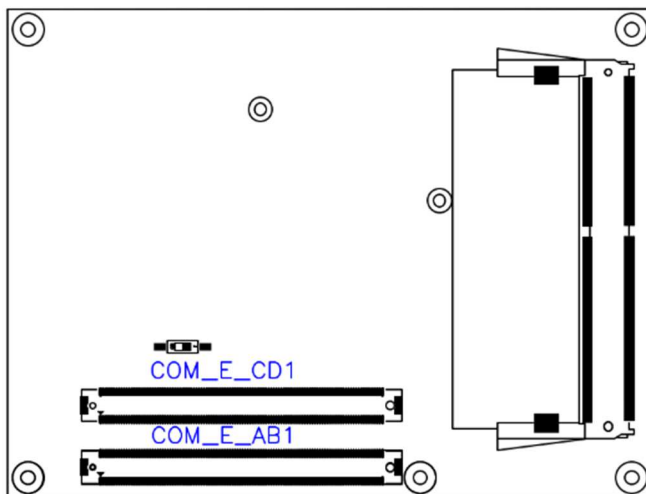

Row A		Row B		Row C		Row D	
Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
A1	GND (FIXED)	B1	GND (FIXED)	C1	GND (FIXED)	D1	GND (FIXED)
A2	GBE0 MDI3-	B2	GBE0 ACT#	C2	GND	D2	GND
A3	GBE0 MDI3+	B3	LPC FRAME#	C3	USB SSRX0-	D3	USB SSTX0-
A4	GBE0 LINK100#	B4	LPC AD0	C4	USB SSRX0+	D4	USB SSTX0+
A5	GBE0 LINK1000#	B5	LPC AD1	C5	GND	D5	GND
A6	GBE0 MDI2-	B6	LPC AD2	C6	USB SSRX1-	D6	USB SSTX1-
A7	GBE0 MDI2+	B7	LPC AD3	C7	USB SSRX1+	D7	USB SSTX1+
A8	GBE0 LINK#	B8	LPC DRQ0#	C8	GND	D8	GND
A9	GBE0 MDI1-	B9	NC	C9	USB SSRX2-	D9	USB SSTX2-
A10	GBE0 MDI1+	B10	LPC CLK	C10	USB SSRX2+	D10	USB SSTX2+
A11	GND (FIXED)	B11	GND (FIXED)	C11	GND (FIXED)	D11	GND (FIXED)
A12	GBE0 MDI0-	B12	PWRBTN#	C12	USB SSRX3-	D12	USB SSTX3-
A13	GBE0 MDI0+	B13	SMB CK	C13	USB SSRX3+	D13	USB SSTX3+
A14	GBE0 CTREF	B14	SMB DAT	C14	GND	D14	GND
A15	SUS_S3#	B15	SMB_ALERT#	C15	NC	D15	DDI1_CTRLCLK_A UX+
A16	SATA0_TX+	B16	SATA1_TX+	C16	NC	D16	DDI1_CTRLDATA_AUX-
A17	SATA0_TX-	B17	SATA1_TX-	C17	RSVD	D17	RSVD
A18	SUS_S4#	B18	NC	C18	GND	D18	RSVD
A19	SATA0_RX+	B19	SATA1_RX+	C19	PCIE_RX6+	D19	PCIE_TX6+
A20	SATA0_RX-	B20	SATA1_RX-	C20	PCIE_RX6-	D20	PCIE_TX6-
A21	GND (FIXED)	B21	GND (FIXED)	C21	GND (FIXED)	D21	GND (FIXED)
A22	NC	B22	NC	C22	PCIE_RX7+	D22	PCIE_TX7+
A23	NC	B23	NC	C23	PCIE_RX7-	D23	PCIE_TX7-
A24	SUS_S5#	B24	PWR_OK	C24	DDI1_HP	D24	GND
A25	NC	B25	NC	C25	SML0_CLK	D25	GND
A26	NC	B26	NC	C26	SML0_DAT	D26	DDI1_PAIR0+
A27	BATLOW#	B27	WDT	C27	SML1_CLK	D27	DDI1_PAIR0-
A28	SATA_ACT#	B28	NC	C28	SML1_DAT	D28	RSVD
A29	HDA_SYNC	B29	NC	C29	NC	D29	DDI1_PAIR1+
A30	HDA_RST#	B30	HDA_SDINO	C30	NC	D30	DDI1_PAIR1-

Row A		Row B		Row C		Row D	
Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
A31	GND (FIXED)	B31	GND (FIXED)	C31	GND (FIXED)	D31	GND (FIXED)
A32	HDA_BITCLK	B32	NC	C32	DDI2_CTRLCLK_AUX+	D32	DDI1_PAIR2+
A33	HDA_SDOUT	B33	I2C_CK	C33	DDI2_CTRLDATA_AUX-	D33	DDI1_PAIR2-
A34	BIOS_DIS0#	B34	I2C_DAT	C34	DDI2_DDC_AUX_SEL	D34	DDI1_DDC_AUX_SEL
A35	THRMTRIP#	B35	THRM#	C35	RSVD	D35	RSVD
A36	USB6-	B36	USB7-	C36	DDI3_CTRLCLK_AUX+	D36	DDI1_PAIR3+
A37	USB6+	B37	USB7+	C37	DDI3_CTRLDATA_AUX-	D37	DDI1_PAIR3-
A38	USB_6_7_OC#	B38	USB_4_5_OC#	C38	DDI3_DDC_AUX_SEL	D38	GND
A39	USB4-	B39	USB5-	C39	DDI3_PAIR0+	D39	DDI2_PAIR0+
A40	USB4+	B40	USB5+	C40	DDI3_PAIR0-	D40	DDI2_PAIR0-
A41	GND (FIXED)	B41	GND (FIXED)	C41	GND (FIXED)	D41	GND (FIXED)
A42	USB2-	B42	USB3-	C42	DDI3_PAIR1+	D42	DDI2_PAIR1+
A43	USB2+	B43	USB3+	C43	DDI3_PAIR1-	D43	DDI2_PAIR1-
A44	USB_2_3_OC#	B44	USB_0_1_OC#	C44	DDI2_HPD	D44	DDI2_HPD
A45	USB0-	B45	USB1-	C45	RSVD	D45	RSVD
A46	USB0+	B46	USB1+	C46	DDI3_PAIR2+	D46	DDI2_PAIR2+
A47	VCC_RTC	B47	NC	C47	DDI3_PAIR2-	D47	DDI2_PAIR2-
A48	RSMRST_OUT#	B48	NC	C48	RSVD	D48	GND
A49	GBE0_SDP	B49	SYS_RESET#	C49	DDI3_PAIR3+	D49	DDI2_PAIR3+
A50	LPC_SERIRQ	B50	CB_RESET#	C50	DDI3_PAIR3-	D50	DDI2_PAIR3-
A51	GND (FIXED)	B51	GND (FIXED)	C51	GND (FIXED)	D51	GND (FIXED)
A52	PCIE_TX5+	B52	PCIE_RX5+	C52	RSVD	D52	RSVD
A53	PCIE_TX5-	B53	PCIE_RX5-	C53	RSVD	D53	RSVD
A54	GPI0	B54	GPO1	C54	NC	D54	NC
A55	PCIE_TX4+	B55	PCIE_RX4+	C55	RSVD	D55	RSVD
A56	PCIE_TX4-	B56	PCIE_RX4-	C56	RSVD	D56	RSVD
A57	GND	B57	GPO2	C57	NC	D57	TYPE2#
A58	PCIE_TX3+	B58	PCIE_RX3+	C58	RSVD	D58	RSVD
A59	PCIE_TX3-	B59	PCIE_RX3-	C59	RSVD	D59	RSVD
A60	GND (FIXED)	B60	GND (FIXED)	C60	GND (FIXED)	D60	GND (FIXED)
A61	PCIE_TX2+	B61	PCIE_RX2+	C61	RSVD	D61	RSVD
A62	PCIE_TX2-	B62	PCIE_RX2-	C62	RSVD	D62	RSVD
A63	GPI1	B63	GPO3	C63	GND	D63	GND
A64	PCIE_TX1+	B64	PCIE_RX1+	C64	GND	D64	GND
A65	PCIE_TX1-	B65	PCIE_RX1-	C65	RSVD	D65	RSVD
A66	GND	B66	WAKE0#	C66	RSVD	D66	RSVD
A67	GPI2	B67	WAKE1#	C67	NC	D67	GND
A68	PCIE_TX0+	B68	PCIE_RX0+	C68	RSVD	D68	RSVD
A69	PCIE_TX0-	B69	PCIE_RX0-	C69	RSVD	D69	RSVD
A70	GND (FIXED)	B70	GND (FIXED)	C70	GND (FIXED)	D70	GND (FIXED)
A71	LVDS_A0+/ eDP_TX2+	B71	LVDS_B0+	C71	RSVD	D71	RSVD
A72	LVDS_A0-/ eDP_TX2-	B72	LVDS_B0-	C72	RSVD	D72	RSVD
A73	LVDS_A1+/ eDP_TX1+	B73	LVDS_B1+	C73	GND	D73	GND
A74	LVDS_A1-/ eDP_TX1-	B74	LVDS_B1-	C74	RSVD	D74	RSVD
A75	LVDS_A2+/ eDP_TX0+	B75	LVDS_B2+	C75	RSVD	D75	RSVD

Row A		Row B		Row C		Row D	
Pin	Signal	Pin	Signal	Pin	Signal	Pin	Signal
A76	LVDS_A2-/eDP_TX0-	B76	LVDS_B2-	C76	GND	D76	GND
A77	LVDS_VDD_EN/eDP_VDD_EN	B77	LVDS_B3+	C77	GND	D77	GND
A78	LVDS_A3+	B78	LVDS_B3-	C78	PEG_RX8+	D78	PEG_TX8+
A79	LVDS_A3-	B79	LVDS_BKLT_EN/eDP_BKLT_EN	C79	PEG_RX8-	D79	PEG_TX8-
A80	GND (FIXED)	B80	GND (FIXED)	C80	GND (FIXED)	D80	GND (FIXED)
A81	LVDS_A_CK+/eDP_TX3+	B81	LVDS_B_CK+	C81	PEG_RX9+	D81	PEG_TX9+
A82	LVDS_A_CK-/eDP_TX3-	B82	LVDS_B_CK-	C82	PEG_RX9-	D82	PEG_TX9-
A83	LVDS_I2C_CK/eDP_AUX+	B83	LVDS_BKLT_CTRL	C83	GND	D83	GND
A84	LVDS_I2C_DAT/eDP_AUX-	B84	VCC_5V_SBY	C84	GND	D84	GND
A85	GPI3	B85	VCC_5V_SBY	C85	PEG_RX10+	D85	PEG_TX10+
A86	RSVD	B86	VCC_5V_SBY	C86	PEG_RX10-	D86	PEG_TX10-
A87	eDP_HPDP	B87	VCC_5V_SBY	C87	GND	D87	GND
A88	PCIE_CLK_REF+	B88	BIOS_DIS1#	C88	PEG_RX11+	D88	PEG_TX11+
A89	PCIE_CLK_REF-	B89	VGA_RED	C89	PEG_RX11-	D89	PEG_TX11-
A90	GND (FIXED)	B90	GND (FIXED)	C90	GND (FIXED)	D90	GND (FIXED)
A91	SPI_POWER	B91	VGA_GRN	C91	PEG_RX12+	D91	PEG_TX12+
A92	SPI_MISO	B92	VGA_BLU	C92	PEG_RX12-	D92	PEG_TX12-
A93	GPO0	B93	VGA_HSYNC	C93	GND	D93	GND
A94	SPI_CLK	B94	VGA_VSYNC	C94	PEG_RX13+	D94	PEG_TX13+
A95	SPI_MOSI	B95	VGA_I2C_CK	C95	PEG_RX13-	D95	PEG_TX13-
A96	TPM_PP	B96	VGA_I2C_DAT	C96	GND	D96	GND
A97	NC	B97	SPI_CS#	C97	GND	D97	GND
A98	SER0_TX	B98	RSVD	C98	PEG_RX14+	D98	PEG_TX14+
A99	SER0_RX	B99	RSVD	C99	PEG_RX14-	D99	PEG_TX14-
A100	GND (FIXED)	B100	GND (FIXED)	C100	GND (FIXED)	D100	GND (FIXED)
A101	SER1_TX	B101	FAN_PWMOUT	C101	PEG_RX15+	D101	PEG_TX15+
A102	SER1_RX	B102	FAN_TACHIN	C102	PEG_RX15-	D102	PEG_TX15-
A103	NC	B103	NC	C103	GND	D103	GND
A104	VCC_12V	B104	VCC_12V	C104	VCC_12V	D104	VCC_12V
A105	VCC_12V	B105	VCC_12V	C105	VCC_12V	D105	VCC_12V
A106	VCC_12V	B106	VCC_12V	C106	VCC_12V	D106	VCC_12V
A107	VCC_12V	B107	VCC_12V	C107	VCC_12V	D107	VCC_12V
A108	VCC_12V	B108	VCC_12V	C108	VCC_12V	D108	VCC_12V
A109	VCC_12V	B109	VCC_12V	C109	VCC_12V	D109	VCC_12V
A110	GND (FIXED)	B110	GND (FIXED)	C110	GND (FIXED)	D110	GND (FIXED)

This page is intentionally left blank.

Chapter 3

Drivers Installation

This chapter introduces installation of the following drivers:

- Intel® Chipset Software Installation Utility
- Graphics Driver
- HD Audio Driver
- LAN Driver
- Intel® Management Engine Drivers
- Intel® Serial IO Drivers

3.1 Introduction

This section describes the installation procedures of the software drivers. The software drivers are available at the IBASE website. Go to the download page of the product. Copy the compressed drivers file to your computer. Double-click the file to decompress it. Run “CDGuide” to go to the main drivers page as shown in the next steps.

Note: After installing the Windows operating system, install the Intel® Chipset Software Installation Utility before proceeding with drivers installation.

3.2 Intel® Chipset Software Installation Utility

The Intel® Chipset drivers should be installed first before the software drivers to install INF files for Plug & Play function for Intel chipset components. Follow the instructions below to complete the installation.


1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) Chipset Software Installation Utility**.



3. When the **Welcome** screen to the Intel® Chipset Device Software appears, click **Next** to continue.
4. Accept the software license agreement.
5. On the **Readme File Information** screen, click **Install**.

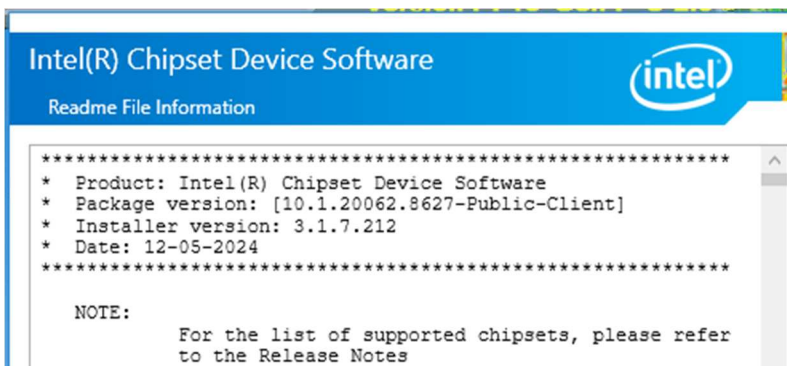

6. After completing the installation, click **Finish**.

3.3 Graphics Driver Installation


1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.




2. Click **Intel(R) HD Graphics Driver**.




3. Click **Begin installation**.

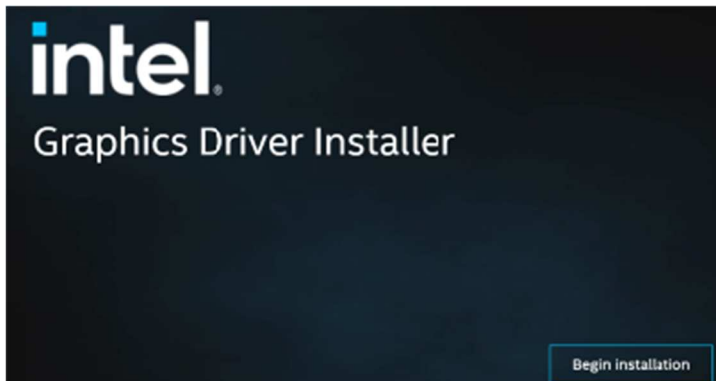

4. Click **I agree** in the INTEL SOFTWARE LICENSE AGREEMENT screen.
5. Click **Start** to install the graphics driver.

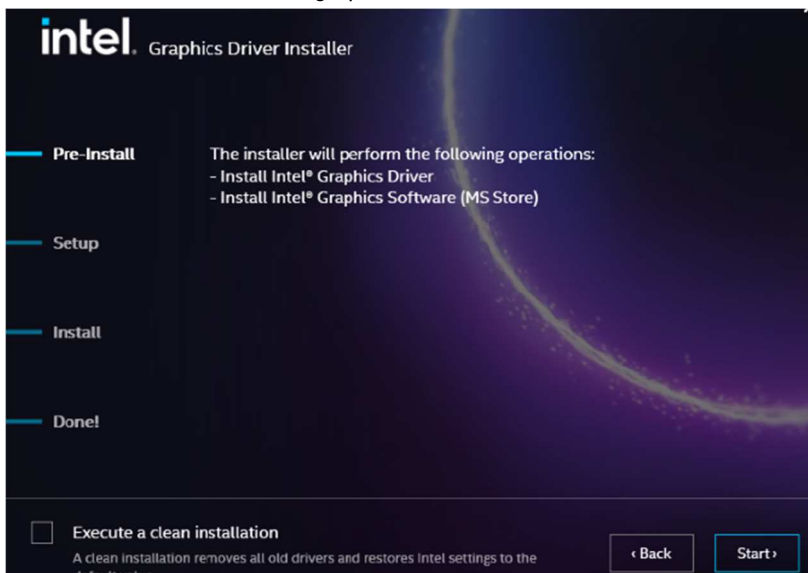

6. When installation has been completed, click **Finish**.

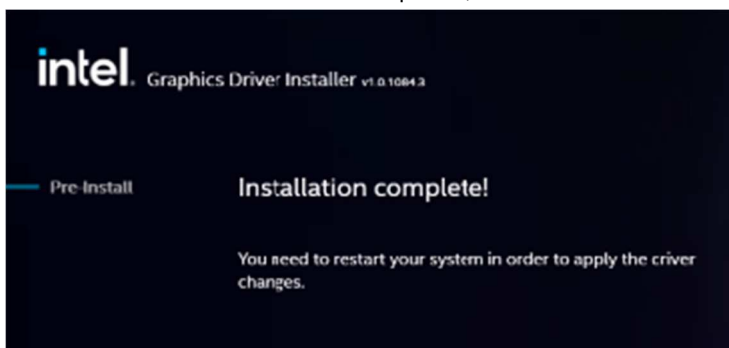

3.4 Audio Driver Installation

1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.




2. Click **Realtek Audio Drivers**.




3. Click **Realtek High Definition Audio Driver**.



4. When the **Welcome** screen appears, click **Next** to continue.

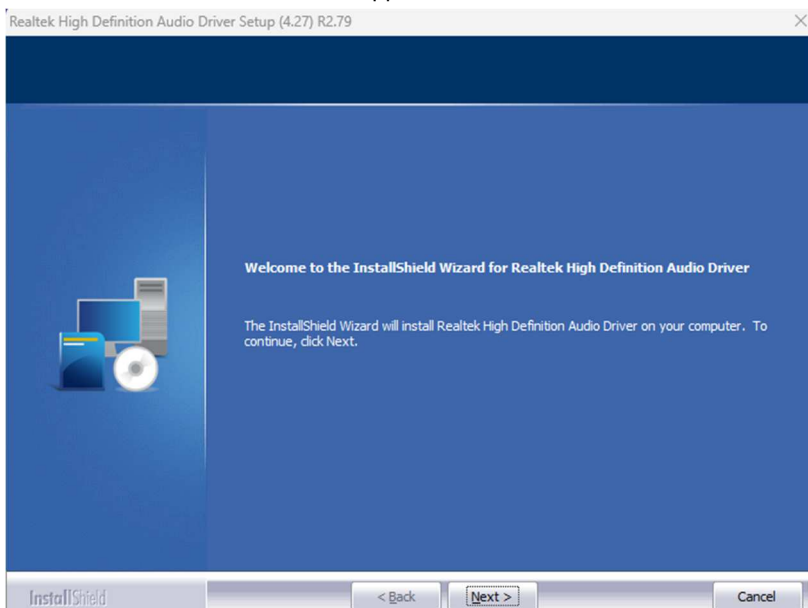

5. When the installation has been completed, click **Finish**.

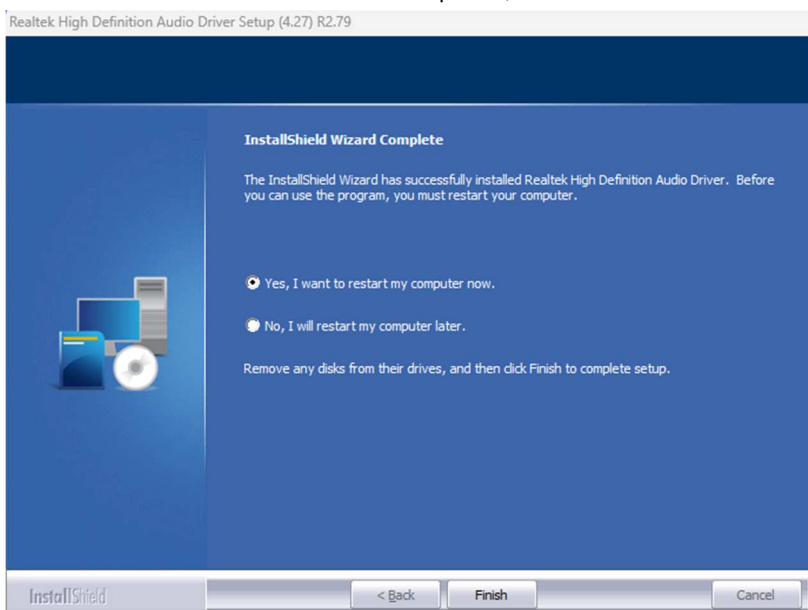

3.5 LAN Driver Installation

1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.




2. Click **Intel(R) PRO LAN Network Drivers**.



3. Follow the installation steps as shown in the image to the setup.



4. When the InstallShield Wizard has completed the installation, press any key.

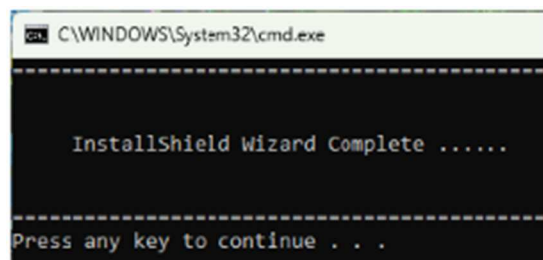

3.6 Intel® Management Engine Drivers Installation


1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.



2. Click **Intel(R) ME Drivers**.



3. When the Welcome screen appears, click **Next** to continue.
4. Accept the terms in the License Agreement by checking the box and click **Next**.
5. Click **Next** to install to the default folder, or click **Change** to choose another destination folder.
6. When the Setup has been completed, click **Finish**.

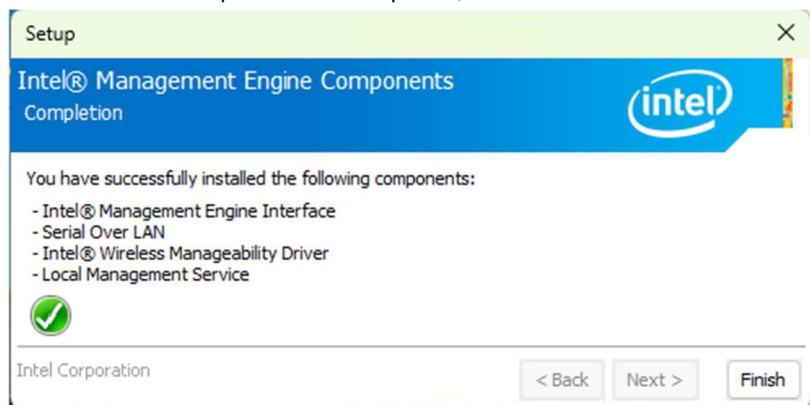


3.7 Intel® Serial IO Drivers Installation

1. Click **Intel** on the left pane and then **Intel(R) RaptorLake-P/PS/U Chipset Drivers** on the right pane.
2. Click **Intel(R) Serial IO Drivers**.



3. When the **Welcome** screen appears, click **Next** to continue.



You are about to install the following product:

Intel® Serial IO 30.100.2237.26

4. Accept the terms in the License Agreement by checking the box and click **Next**.
5. In the **Readme File Information** screen, click **Next**.
6. In the **Confirmation** screen, click **Next**.



You are about to install the following components:

- Intel® Serial IO GPIO Driver
- Intel® Serial IO I2C Driver

After completing the installation, click **Finish**.

Chapter 4

BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

- Main Settings
- Advanced Settings
- Chipset Settings
- Security Settings
- Boot Settings
- Save & Exit

4.1 Introduction

The BIOS (Basic Input/Output System) installed in the ROM of your computer system provides critical low-level support for standard devices such as disk drives and serial ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

4.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Press the key immediately to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup.

To enter Setup after POST, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system off and back on again.

The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```

Generally, use arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help, and <Esc> to quit.

When you enter the BIOS Setup utility, the *Main Menu* screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Warning: It is strongly recommended that you avoid making any changes to the chipset defaults.

These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could make the system unstable and crash in some cases.


4.3 Main Settings



BIOS Setting	Description
System Language	Choose the system default language.
System Date	Sets the date. Use the <Tab> key to switch between the date elements.
System Time	Set the time. Use the <Tab> key to switch between the time elements.

4.4 Advanced Settings

This section allows you to configure, improve your system and allows you to set up some system features according to your preference.

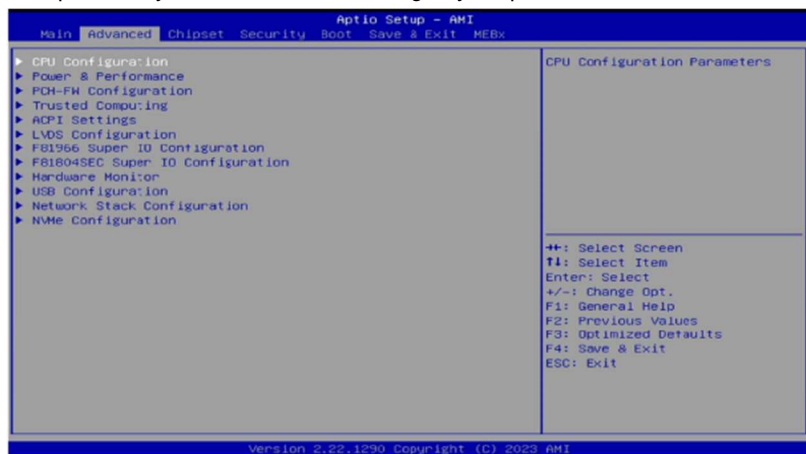

4.4.1 CPU Configuration

CPU Configuration	
► Efficient-core Information	
► Performance-core Information	
ID	0xB06A2
Brand String	13th Gen Intel(R) Core(TM) i7-1370PRE
VMX	Supported
SMX/TXT	Supported
Intel (VMX) Virtualization Technology	[Enabled]
Active Performance-cores	[Show All Item]
Active Efficient-cores	[Show All Item]
Hyper-Threading	[Enabled]
AES	[Enabled]


Efficient-core Information	
L1 Data Cache	32 KB × 8
L1 Instruction Cache	64 KB × 8
L2 Cache	2048 KB × 2
L3 Cache	18 MB

Performance-core Information	
L1 Data Cache	48 KB × 4
L1 Instruction Cache	32 KB × 4
L2 Cache	1280 KB × 4
L3 Cache	18 MB



BIOS Setting	Description
Efficient-core Information	Displays the E-core Information
Performance-core Information	Displays the P-core Information
Intel (VMX) Virtualization Technology	Enables / Disables Intel Virtualization Technology, which allows VMM to utilize additional hardware capabilities provided by Vanderpool Technology.
Active Performance-Cores	Number of P-cores to enable in each processor package. Note: Number of Cores and E-cores are looked at together. When both are [0,0], Pcode will enable all cores.
Active Efficient-cores	Number of E-cores to enable in each processor package. Note: Number of Cores and E-cores are looked at together. When both are [0,0], Pcode will enable all cores.
Hyper-Threading	Enables / Disables Hyperthreading Technology.
AES	Enables / Disables AES (Advanced Encryption Standard).

4.4.2 Power & Performance

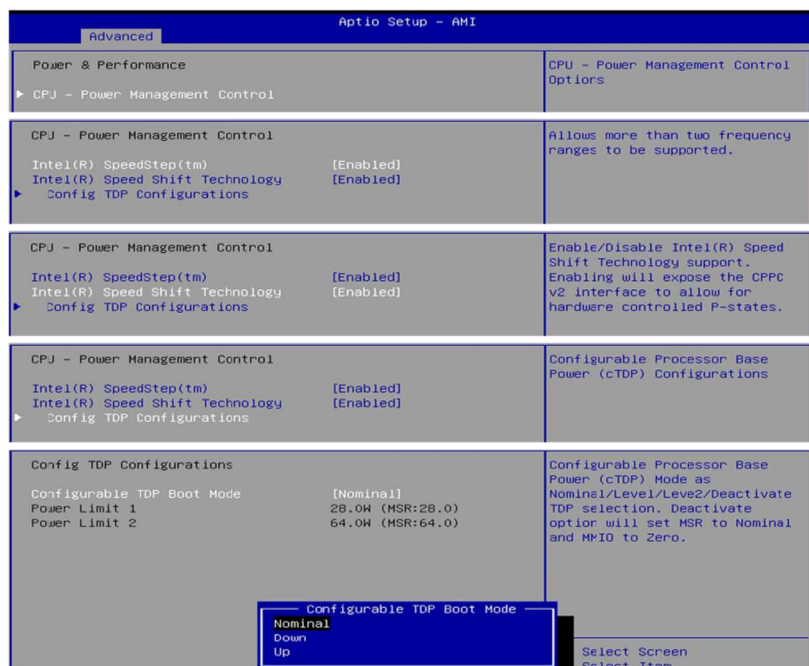

BIOS Setting	Description
Intel(R) SpeedStep(tm)	Allows more than two frequency ranges to be supported.
Intel(R) Speed Shift Technology	Enables / Disables Intel(R) Speed Shift Technology support. Enabling will expose the CPPC v2 interface to allow for hardware controlled P-states.
Config TDP Configurations	Configurable Processor Base Power (cTDP) Configurations
Configurable TDP Boot Mode	Configurable Processor Base Power (cTDP) Mode as Nominal/Level/Level2/Deactivate TDP selection. Deactivate option will set MSR to Nominal and MMIO to Zero.

4.4.3 PCH-FW Configuration

Advanced		Aptio Setup - AMI	
ME Firmware Version		16.1.25.1865	
ME Firmware Mode		Normal Mode	
ME Firmware SKU		Corporate SKU	


Displays the information of PCH firmware, such as the firmware version, mode, and SKU.

4.4.4 Trusted Computing




BIOS Setting	Description
Security Device Support	Enables / Disables BIOS support for security device. OS will not show security device. TCG EFI protocol and INTIA interface will not be available.
SHA256/SHA384 PCR Bank	Enables / Disables SHA256/SHA384 PCR Bank.
Pending operation	Schedule an operation for the security device. Note: Your computer will reboot during restart in order to change state of security device.
Platform Hierarchy	Enables / Disables platform hierarchy.
Storage Hierarchy	Enables / Disables storage hierarchy.
Endorsement Hierarchy	Enables / Disables endorsement hierarchy.
Physical Presence Spec Version	Selects to show the PPI Spec Version (1.2 or 1.3) that the OS supports. Note: Some HCK tests might not support 1.3.
Device Select	TPM 1.2 will restrict support to TPM 1.2 devices only. TPM 2.0 will restrict support to TPM 2.0 devices only. Auto will support both with the default being set to TPM 2.0 devices if not found, and TPM 1.2 device will be enumerated.

4.4.5 ACPI Settings

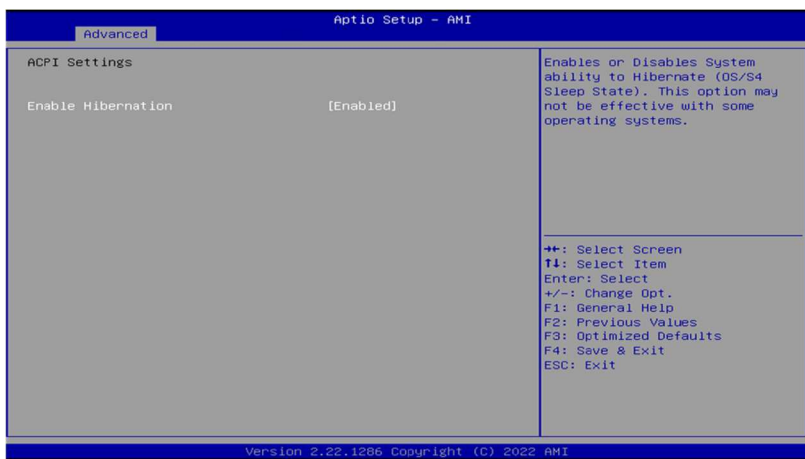

BIOS Setting	Description
Enable Hibernation	Enables / Disables the system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some OS.

4.4.6 LVDS Configuration

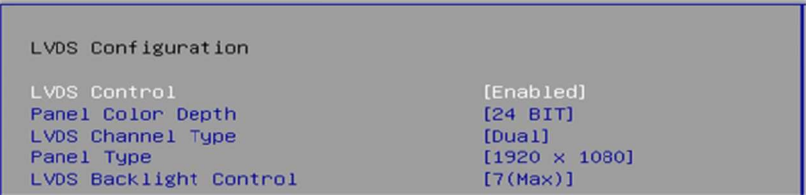

BIOS Setting	Description
LVDS Control	Enabled / Disabled
Panel Color Depth	18 BIT / 24 BIT
LVDS Channel Type	Single / Dual
Panel Type	Options: 800 x 480 / 800 x 600 / 1024 x 768 / 1280 x 768 / 1280 x 960 / 1280 x 1024 / 1366 x 768 / 1440 x 900 / 1600 x 900 / 1600 x 1200 / 1680 x 1050 / 1920 x 1080 / 1920 x 1200
LVDS Backlight Control	Options: 0 (Min) ~ 7 (Max)

4.4.7 F81966 Super IO Configuration

Aprio Setup - AMI		
Advanced		
F81966 Super IO Configuration Super IO Chip F81966 ▶ Serial Port 1 Configuration ▶ Serial Port 2 Configuration		Set Parameters of Serial Port 1 (COMA) ++: Select Screen F1: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Version 2.22.1290 Copyright (C) 2023 AMI		
Serial Port 1 Configuration Serial Port [Enabled] Device Settings IO=3F8h; IRQ=4; Change Settings [Auto]		Enable or Disable Serial Port (COM)
Serial Port 1 Configuration Serial Port [Enabled] Device Settings IO=3F8h; IRQ=4; Change Settings [Auto]		Select an optimal settings for Super IO Device
Change Settings Auto IO=3F8h; IRQ=4; IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;		Select Screen Select Item Enter: Select
Serial Port 2 Configuration Serial Port [Enabled] Device Settings IO=2F8h; IRQ=3; Change Settings [Auto]		Enable or Disable Serial Port (COM)
Serial Port 2 Configuration Serial Port [Enabled] Device Settings IO=2F8h; IRQ=3; Change Settings [Auto]		Select an optimal settings for Super IO Device
Change Settings Auto IO=2F8h; IRQ=3; IO=3F8h; IRQ=3,4,5,6,7,9,10,11,12; IO=2F8h; IRQ=3,4,5,6,7,9,10,11,12; IO=3E8h; IRQ=3,4,5,6,7,9,10,11,12; IO=2E8h; IRQ=3,4,5,6,7,9,10,11,12;		Select Screen Select Item Enter: Select

4.4.8 F81804SEC Super IO Configuration

Advanced

Aptio Setup - AMI

F81804SEC Super IO Configuration

Super IO Chip F81804SEC

Serial Port 1 Configuration

Serial Port 2 Configuration

Set Parameters of Serial Port 1 (COMA)

Serial Port 1 Configuration

Serial Port [Enabled]

Device Settings IO=240h; IRQ=10;

Change Settings [Auto]

Enable or Disable Serial Port (COM)

Serial Port 1 Configuration

Serial Port [Enabled]

Device Settings IO=240h; IRQ=10;

Change Settings [Auto]

Select an optimal settings for Super IO Device

Change Settings

Auto

IO=240h; IRQ=10;

IO=240h; IRQ=3,4,5,6,7,10,11,12;

IO=248h; IRQ=3,4,5,6,7,10,11,12;

Select Screen

Select Item

Serial Port 2 Configuration

Serial Port [Enabled]

Device Settings IO=248h; IRQ=11;

Change Settings [Auto]

Change Settings [Disable IR1 function]

Enable or Disable Serial Port (COM)

Serial Port 2 Configuration

Serial Port [Enabled]

Device Settings IO=248h; IRQ=11;

Change Settings [Auto]

Change Settings [Disable IR1 function]

Select an optimal settings for Super IO Device

Change Settings

Auto

IO=248h; IRQ=10;

IO=240h; IRQ=3,4,5,6,7,10,11,12;

IO=248h; IRQ=3,4,5,6,7,10,11,12;

Select Screen

Select Item

Serial Port 2 Configuration

Serial Port [Enabled]

Device Settings IO=248h; IRQ=11;

Change Settings [Auto]

Change Settings [Disable IR1 function]

Select an optimal settings for Super IO Device

Change Settings

Disable IR1 function

Enable IR1 function, active pulse 1.6uS

Enable IR1 function, active pulse 3/16 bit time

Screen


Item

4.4.9 Hardware Monitor

Advanced		Aptio Setup - AMI
Pc Health Status		
CPU Fan smart fan control		[Disabled]
CPU temperature	:	+30 C
System temperature	:	+31 C
CPU Fan Speed	:	4132 RPM
VCORE	:	+0.960 V
+5V	:	+5.003 V
+3.3V	:	+3.312 V

Displays the information of the computer health status.

4.4.10 USB Configuration


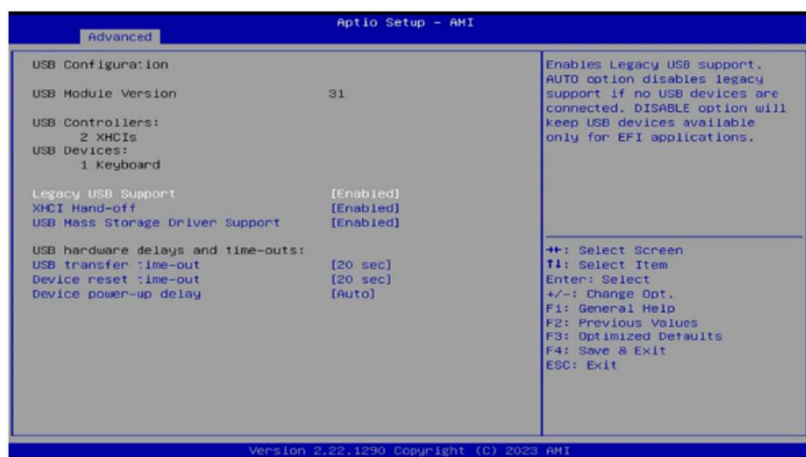


BIOS Setting	Description
Legacy USB Support	• Enabled enables Legacy USB support. • Auto disables legacy support if there is no USB device connected. • Disabled keeps USB devices available only for EFI applications.
XHCI Hand-off	This is a workaround for OSES without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.
USB Mass Storage Driver Support	Enables / Disables the support for USB mass storage driver.
USB Transfer time-out	The time-out value (1 / 5 10 / 20 secs) for Control, Bulk, and Interrupt transfers.
Device reset time-out	Gives seconds (10 / 20 / 30 / 40 secs) to delay execution of Start Unit command to USB mass storage device.
Device power-up delay	Maximum time the device will take before it properly reports itself to the Host Controller. "Auto" uses default value: for a root port it is 100 ms, for a hub port, the delay is taken from hub descriptor.


4.4.11 Network Stack Configuration

Aptio Setup - AMI		
Advanced		
Network Stack	[Disabled]	Enable/Disable UEFI Network Stack
Network Stack	[Enabled]	
IPv4 PXE Support	[Disabled]	Enable/Disable IPv4 PXE boot support. If disabled, IPv4 PXE boot support will not be available.
IPv4 HTTP Support	[Disabled]	
IPv6 PXE Support	[Disabled]	
IPv6 HTTP Support	[Disabled]	
PXE boot wait time	0	
Media detect count	1	
Network Stack	[Enabled]	
IPv4 PXE Support	[Disabled]	Enable/Disable IPv4 HTTP boot support. If disabled, IPv4 HTTP boot support will not be available.
IPv4 HTTP Support	[Disabled]	
IPv6 PXE Support	[Disabled]	
IPv6 HTTP Support	[Disabled]	
PXE boot wait time	0	
Media detect count	1	
Network Stack	[Enabled]	
IPv4 PXE Support	[Disabled]	Enable/Disable IPv6 PXE boot support. If disabled, IPv6 PXE boot support will not be available.
IPv4 HTTP Support	[Disabled]	
IPv6 PXE Support	[Disabled]	
IPv6 HTTP Support	[Disabled]	
PXE boot wait time	0	
Media detect count	1	
Network Stack	[Enabled]	
IPv4 PXE Support	[Disabled]	Enable/Disable IPv6 HTTP boot support. If disabled, IPv6 HTTP boot support will not be available.
IPv4 HTTP Support	[Disabled]	
IPv6 PXE Support	[Disabled]	
IPv6 HTTP Support	[Disabled]	
PXE boot wait time	0	
Media detect count	1	
Network Stack	[Enabled]	
IPv4 PXE Support	[Disabled]	Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value.
IPv4 HTTP Support	[Disabled]	
IPv6 PXE Support	[Disabled]	
IPv6 HTTP Support	[Disabled]	
PXE boot wait time	0	
Media detect count	1	
Network Stack	[Enabled]	
IPv4 PXE Support	[Disabled]	Number of times the presence of media will be checked. Use either +/- or numeric keys to set the value.
IPv4 HTTP Support	[Disabled]	
IPv6 PXE Support	[Disabled]	
IPv6 HTTP Support	[Disabled]	
PXE boot wait time	0	
Media detect count	1	


4.4.12 NVMe Configuration

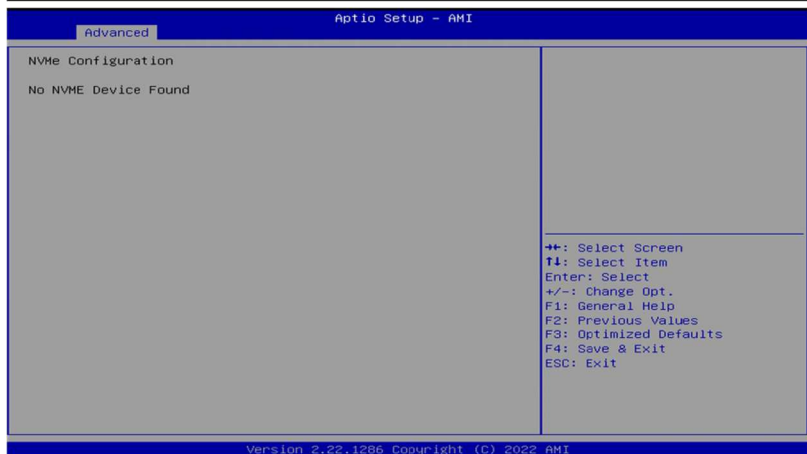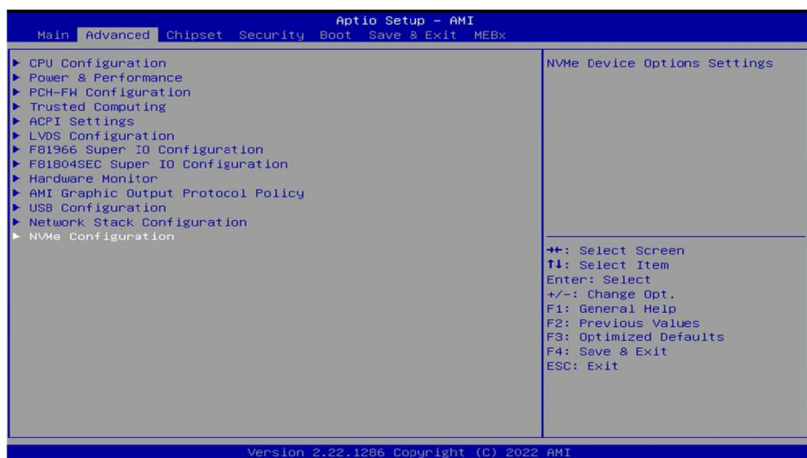

4.5 Chipset Settings


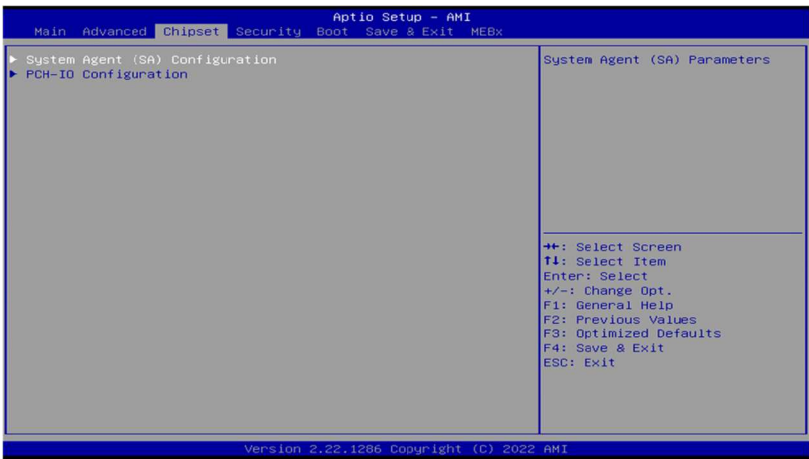


4.5.1 System Agent (SA) Configuration

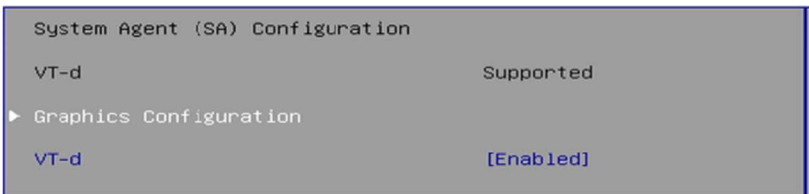

BIOS Setting	Description
Memory Configuration	Memory Configuration Parameters
VT-d	Enables / Disables VT-d capability.


Graphics Configuration		Graphics turbo IMON current values supported (14-31)
Graphics Turbo IMON Current	31	
GTT Size	[8MB]	
Aperture Size	[256MB]	
DVMT Pre-Allocated	[60M]	
DVMT Total Gfx Mem	[256M]	

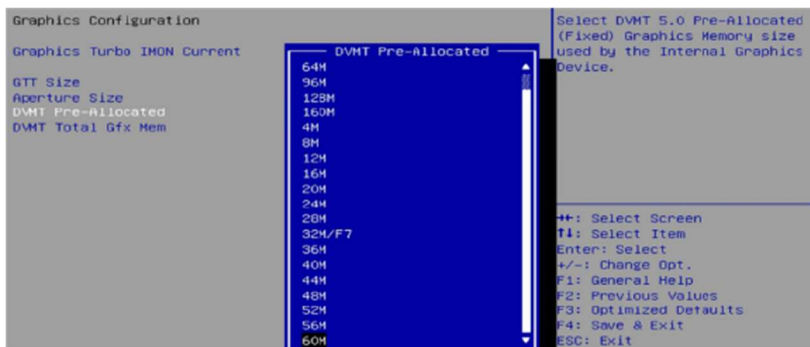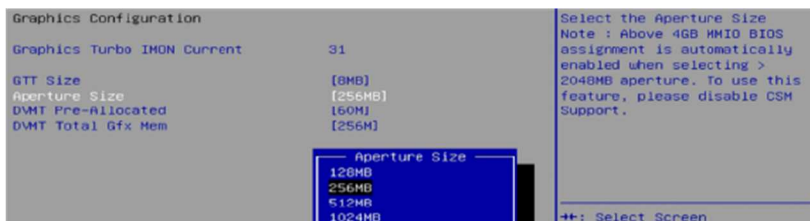

4.5.2 PCH-IO Configuration

Aptio Setup - AMI		
Main	Advanced	Chipset
▶ System Agent (SA) Configuration ▶ PCH-IO Configuration		PCH Parameters
SATA Configuration SATA Controller(s) [Enabled] Serial ATA Port 0 Empty Software Preserve Unknown Hot Plug [Disabled] Serial ATA Port 1 TS64GSSD420KI (64.0GB) Software Preserve SUPPORTED Hot Plug [Disabled] Serial ATA Port 2 Empty Software Preserve Unknown Hot Plug [Disabled]		Enable/Disable SATA Device. +*: Select Screen
Aptio Setup - AMI		
Chipset		
PCH-IO Configuration ▶ SATA Configuration M.2 B-Key USB3.0 Control [Enabled] PCH LAN Controller No GbE Region State After G3 [S5 State]		Enable/Disable this USB Physical Connector (physical port). Once disabled, any USB devices plug into the connector will not be detected by BIOS or OS. +*: Select Screen
M.2 B-Key USB3.0 Control Disabled Enabled		
Aptio Setup - AMI		
Chipset		
PCH-IO Configuration ▶ SATA Configuration M.2 B-Key USB3.0 Control [Enabled] PCH LAN Controller No GbE Region State After G3 [S5 State]		Specify what state to go to when power is re-applied after a power failure (G3 state). +*: Select Screen
State After G3 S0 State S5 State		

4.6 Security Settings

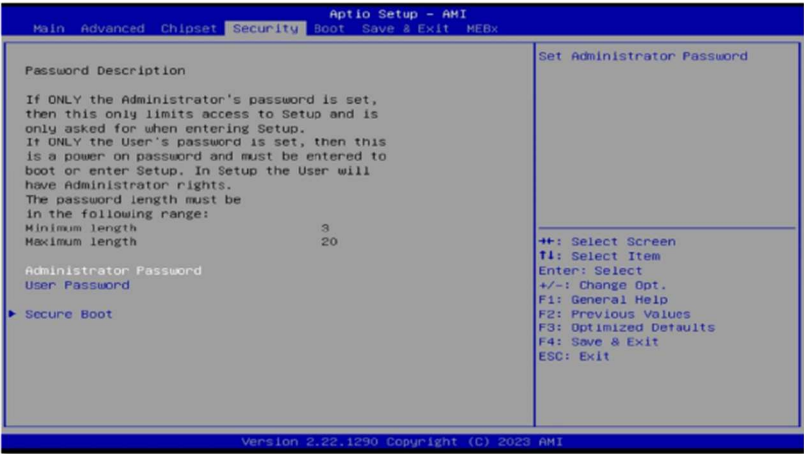


BIOS Setting	Description
Administrator Password	Sets an administrator password for the setup utility.
User Password	Sets a user password.
Secure Boot	Secure boot feature is Active if Secure Boot is enabled. Platform Key(PK) is enrolled and the system is in user mode. The mode change requires platform reset.


Secure Boot Configuration




4.7 Boot Settings

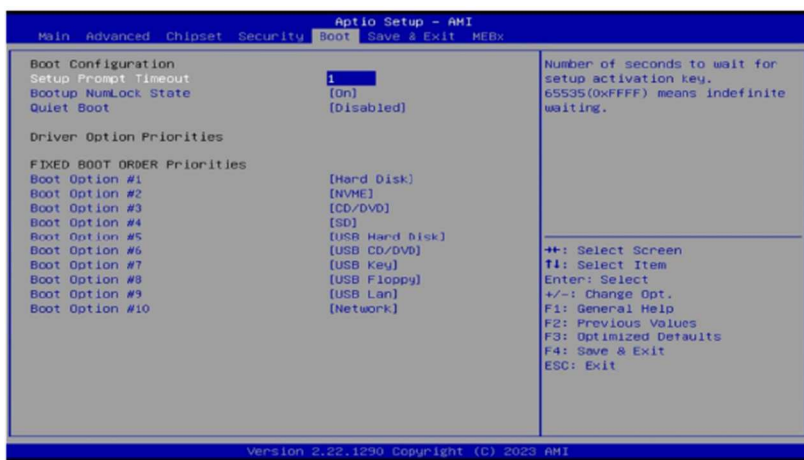

BIOS Setting	Description
Setup Prompt Timeout	Number of seconds to wait for setup activation key. 65535 (0xFFFF) means indefinite waiting.
Bootup NumLock State	Selects the keyboard NumLock state.
Quiet Boot	Enables / Disables Quiet Boot option.
Boot Option Priorities	Sets the system boot order priorities.

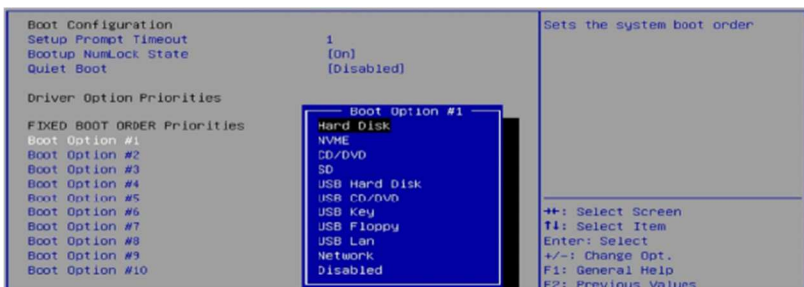

4.8 Save & Exit Settings

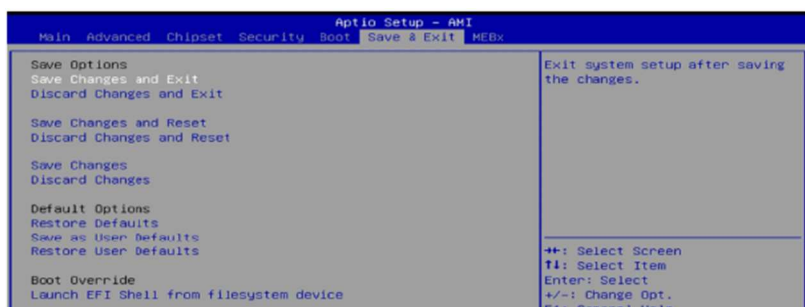

BIOS Setting	Description
Save Changes and Exit	Exits system setup after saving the changes.
Discard Changes and Exit	Exits system setup without saving any changes.
Save Changes and Reset	Resets the system after saving the changes.
Discard Changes and Reset	Resets system setup without saving any changes.
Save Changes	Saves changes done so far to any of the setup options.
Discard Changes	Discards changes done so far to any of the setup options.
Restore Defaults	Restores / Loads defaults values for all the setup options.
Save as User Defaults	Saves the changes done so far as User Defaults.
Restore User Defaults	Restores the user defaults to all the setup options.
Launch EFI Shell from filesystem device	Attempts to Launch EFI Shell application (Shell.efi) from one of the available filesystem devices.

Appendix

This section covers the following topics:

- A. I/O Port Address Map
- B. Interrupt Request Lines (IRQ)
- C. Watchdog Timer Configuration

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
0x00000A00-0x00000A0F	Motherboard resources
0x00000A10-0x00000A1F	Motherboard resources
0x00000A20-0x00000A2F	Motherboard resources
0x0000002E-0x0000002F	Motherboard resources
0x0000004E-0x0000004F	Motherboard resources
0x00000061-0x00000061	Motherboard resources
0x00000063-0x00000063	Motherboard resources
0x00000065-0x00000065	Motherboard resources
0x00000067-0x00000067	Motherboard resources
0x00000070-0x00000070	Motherboard resources
0x00000080-0x00000080	Motherboard resources
0x00000092-0x00000092	Motherboard resources
0x000000B2-0x000000B3	Motherboard resources
0x00000680-0x0000069F	Motherboard resources
0x0000164E-0x0000164F	Motherboard resources
0x00000020-0x00000021	Programmable interrupt controller
0x00000024-0x00000025	Programmable interrupt controller
0x00000028-0x00000029	Programmable interrupt controller
0x0000002C-0x0000002D	Programmable interrupt controller
0x00000030-0x00000031	Programmable interrupt controller
0x00000034-0x00000035	Programmable interrupt controller
0x00000038-0x00000039	Programmable interrupt controller
0x0000003C-0x0000003D	Programmable interrupt controller
0x000000A0-0x000000A1	Programmable interrupt controller
0x000000A4-0x000000A5	Programmable interrupt controller
0x000000A8-0x000000A9	Programmable interrupt controller
0x000000AC-0x000000AD	Programmable interrupt controller
0x000000B0-0x000000B1	Programmable interrupt controller
0x000000B4-0x000000B5	Programmable interrupt controller
0x000000B8-0x000000B9	Programmable interrupt controller
0x000000BC-0x000000BD	Programmable interrupt controller
0x000004D0-0x000004D1	Programmable interrupt controller

0x0000FFF8-0x0000FFFF	Intel(R) Active Management Technology - SOL (COM5)
0x000003F8-0x000003FF	Communications Port (COM1)
0x000002F8-0x000002FF	Communications Port (COM2)
0x00000240-0x00000247	Communications Port (COM3)
0x00000248-0x0000024F	Communications Port (COM4)
0x00001854-0x00001857	Motherboard resources
0x00000000-0x00000CF7	PCI Express Root Complex
0x00000D00-0x0000FFFF	PCI Express Root Complex
0x0000EFA0-0x0000EFBF	Intel(R) SMBus - 51A3
0x00000040-0x00000043	System timer
0x00000050-0x00000053	System timer
0x00002000-0x000020FE	Motherboard resources
0x00003090-0x00003097	Standard SATA AHCI Controller
0x00003080-0x00003083	Standard SATA AHCI Controller
0x00003060-0x0000307F	Standard SATA AHCI Controller
0x00003000-0x0000303F	Intel(R) Iris(R) Xe Graphics

B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

Level	Function
IRQ 0	System timer
IRQ 3	Communications Port (COM2)
IRQ 4	Communications Port (COM1)
IRQ 10	Communications Port (COM3)
IRQ 11	Communications Port (COM4)
IRQ 14	Intel(R) Serial IO GPIO Host Controller - INTC1055
IRQ 16	High Definition Audio Controller
IRQ 19	Intel(R) Active Management Technology - SOL (COM5)
IRQ 27	Intel(R) Serial IO I2C Host Controller - 51E8
IRQ 29	Intel(R) Serial IO I2C Host Controller - 51EA
IRQ 41	Trusted Platform Module 2.0
IRQ 55 ~ 204	Microsoft ACPI-Compliant System
IRQ 256 ~ 511	Microsoft ACPI-Compliant System
IRQ 4294967294	Intel(R) PCI Express Root Port #9 - 51B0
IRQ 4294967293	PCI Express Root Port
IRQ 4294967292	Intel(R) PCIe RC 060 (x4) G4 - A74D
IRQ 4294967291	Intel(R) PCI Express Root Port #10 - 51B1
IRQ 4294967290	Standard SATA AHCI Controller
IRQ 4294967281 ~ 89	Standard NVM Express Controller
IRQ 4294967280	Intel(R) USB 3.10 eXtensible Host Controller - 1.20 (Microsoft)
IRQ 4294967279	Intel(R) USB 3.20 eXtensible Host Controller - 1.20 (Microsoft)
IRQ 4294967278	Intel(R) Iris(R) Xe Graphics
IRQ 4294967263 ~ 77	Intel(R) Ethernet Controller I226-IT
IRQ 4294967262	Intel(R) Management Engine Interface #1

C. Watchdog Timer Configuration

The Watchdog Timer (WDT) is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven.

Under normal circumstances, you will need to restart the WDT at regular intervals before the timer counts to zero.

1. Sample Code:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "F81804.H"
//-----
int main (int argc, char *argv[]);
void EnableWDT(int);
void DisableWDT(void);
//-----
int main (int argc, char *argv[])
{
    unsigned char bBuf;
    unsigned char bTime;
    char **endptr;

    char SIO;

    printf("Fintek 81804 watch dog program\n");
    SIO = Init_F81804();
    if (SIO == 0)
    {
        printf("Can not detect Fintek 81804, program abort.\n");
        return(1);
    }
    if (SIO == 0)

    if (argc != 2)
    {
        printf("Parameter incorrect!\n");
        return (1);
    }

    bTime = strtol (argv[1], endptr, 10);
    printf("System will reset after %d seconds\n", bTime);

    if (bTime)
    {
        EnableWDT(bTime);
    }
    else
    {
        DisableWDT();
    }
    return 0;
}
```

```

}
//-----
void EnableWDT(int interval)
{
    unsigned char bBuf;

    bBuf = Get_F81804_Reg(0x2B);
    bBuf &= (~0x20);
    Set_F81804_Reg(0x2B, bBuf);    //Enable WDTO

    Set_F81804_LD(0x07);          //switch to logic device 7
    Set_F81804_Reg(0x30, 0x01);    //enable timer

    bBuf = Get_F81804_Reg(0xF5);
    bBuf &= (~0x0F);
    bBuf |= 0x52;
    Set_F81804_Reg(0xF5, bBuf);    //count mode is second

    Set_F81804_Reg(0xF6, interval); //set timer

    bBuf = Get_F81804_Reg(0xFA);
    bBuf |= 0x01;
    Set_F81804_Reg(0xFA, bBuf);    //enable WDTO output

    bBuf = Get_F81804_Reg(0xF5);
    bBuf |= 0x20;
    Set_F81804_Reg(0xF5, bBuf);    //start counting
}
//-----
void DisableWDT(void)
{
    unsigned char bBuf;

    Set_F81804_LD(0x07);          //switch to logic device 7

    bBuf = Get_F81804_Reg(0xFA);
    bBuf &= ~0x01;
    Set_F81804_Reg(0xFA, bBuf);    //disable WDTO output

    bBuf = Get_F81804_Reg(0xF5);
    bBuf &= ~0x20;
    bBuf |= 0x40;
    Set_F81804_Reg(0xF5, bBuf);    //disable WDT
}
//-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "F81804.H"
#include <dos.h>
//-----
unsigned int F81804_BASE;
void Unlock_F81804 (void);
void Lock_F81804 (void);
//-----
unsigned int Init_F81804(void)
{
    unsigned int result;

```

```

        unsigned char ucDid;

        F81804_BASE = 0x4E;
        result = F81804_BASE;

        ucDid = Get_F81804_Reg(0x20);
        if (ucDid == 0x07)           //Fintek 81804
        {
            goto Init_Finish;
        }

        F81804_BASE = 0x2E;
        result = F81804_BASE;

        ucDid = Get_F81804_Reg(0x20);
        if (ucDid == 0x07)           //Fintek 81804
        {
            goto Init_Finish;
        }

        F81804_BASE = 0x00;
        result = F81804_BASE;

Init_Finish:
        return (result);
    }
    //-----
    void Unlock_F81804 (void)
    {
        outputb(F81804_INDEX_PORT, F81804_UNLOCK);
        outputb(F81804_INDEX_PORT, F81804_UNLOCK);
    }
    //-----
    void Lock_F81804 (void)
    {
        outputb(F81804_INDEX_PORT, F81804_LOCK);
    }
    //-----
    void Set_F81804_LD( unsigned char LD)
    {
        Unlock_F81804();
        outputb(F81804_INDEX_PORT, F81804_REG_LD);
        outputb(F81804_DATA_PORT, LD);
        Lock_F81804();
    }
    //-----
    void Set_F81804_Reg( unsigned char REG, unsigned char DATA)
    {
        Unlock_F81804();
        outputb(F81804_INDEX_PORT, REG);
        outputb(F81804_DATA_PORT, DATA);
        Lock_F81804();
    }
    //-----
    unsigned char Get_F81804_Reg(unsigned char REG)
    {
        unsigned char Result;
        Unlock_F81804();
        outputb(F81804_INDEX_PORT, REG);
        Result = inportb(F81804_DATA_PORT);
        Lock_F81804();
        return Result;
    }
    //-----

    //-----

```

```
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#ifndef F81804_H
#define F81804_H                1
//-----
#define F81804_INDEX_PORT (F81804_BASE)
#define F81804_DATA_PORT (F81804_BASE+1)
//-----
#define F81804_REG_LD      0x07
//-----
#define F81804_UNLOCK      0x87
#define F81804_LOCK        0xAA
//-----
unsigned int Init_F81804(void);
void Set_F81804_LD( unsigned char);
void Set_F81804_Reg( unsigned char,
unsigned char); unsigned char
Get_F81804_Reg( unsigned char);
//-----
#endif // F81804_H
```