

SP-63ER

**8th Gen Intel® Core™
Video Wall Player with
RTX A2000 Graphics**

User's Manual

Version 1.0b
(July 2024)



Copyright

© 2024 IBASE Technology, Inc. All rights reserved.

No part of this publication may be reproduced, copied, stored in a retrieval system, translated into any language or transmitted in any form or by any means, electronic, mechanical, photocopying, or otherwise, without the prior written consent of IBASE Technology, Inc. (hereinafter referred to as "IBASE").

Disclaimer

IBASE reserves the right to make changes and improvements to the products described in this document without prior notice. Every effort has been made to ensure the information in the document is correct; however, IBASE does not guarantee that this document is error-free. IBASE assumes no liability for incidental or consequential damages arising from misapplication or inability to use the product or the information contained herein, nor for any infringements of rights of third parties, which may result from its use.

Trademarks

All the trademarks, registrations and brands mentioned herein are used for identification purposes only and may be trademarks and/or registered trademarks of their respective owners.

Compliance

CE

In a domestic environment, this product may cause radio interference in which case users may be required to take adequate measures.

FCC

This product has been tested and found to comply with the limits for a Class B device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with manufacturer's instructions, may cause harmful interference to radio communications.

WEEE



This product must not be disposed of as normal household waste, in accordance with the EU directive of for waste electrical and electronic equipment (WEEE - 2012/19/EU). Instead, it should be disposed of by returning it to a municipal recycling collection point. Check local regulations for disposal of electronic products.

Green IBASE



This product is compliant with the current RoHS restrictions and prohibits use of the following substances in concentrations exceeding 0.1% by weight (1000 ppm) except for cadmium, limited to 0.01% by weight (100 ppm).

- Lead (Pb)
- Mercury (Hg)
- Cadmium (Cd)
- Hexavalent chromium (Cr6+)
- Polybrominated biphenyls (PBB)
- Polybrominated diphenyl ether (PBDE)

Important Safety Information

Carefully read the precautions before using the device.

Environmental conditions:

- Lay the device horizontally on a stable and solid surface to prevent it from falling and causing serious damage.
- Leave plenty of space around the device and do not block the openings for ventilation. **NEVER DROP OR INSERT ANY OBJECTS OF ANY KIND INTO THE VENTILATION OPENINGS.**
- Use this product in environments with ambient temperatures between 0°C and 45°C.
- **DO NOT LEAVE THIS DEVICE IN AN ENVIRONMENT WHERE THE STORAGE TEMPERATURE MAY IS BELOW -20° C OR ABOVE 80° C.** This could damage the device. The device must be used in a controlled environment.

Care for your IBASE products:

- Before cleaning the device, turn it off and unplug all cables such as power, as a small amount of electrical current may still flow.
- Use neutral cleaning agents or diluted alcohol to clean the device chassis with a cloth. Then wipe the chassis with a dry cloth.
- Vacuum the dust with a computer vacuum cleaner to prevent the air vent or slots from being clogged.



WARNING

Attention during use:

- Do not place heavy objects on the top of the device.
- Operate this device from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your distributor or local power company.
- Do not walk on the power cord or allow anything to rest on it.
- If you use an extension cord, make sure that the total ampere rating of the product plugged into the extension cord does not exceed its limits.

Avoid Disassembly

Do not disassemble, repair or make any modification to the device. Doing so could generate hazards and cause damage to the device, even bodily injury or property damage, and will void any warranty.



CAUTION

There is danger of explosion if internal lithium-ion battery is replaced by an incorrect type. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Warranty Policy

- **IBASE standard products:**

24-month (2-year) warranty from the date of shipment. If the date of shipment cannot be ascertained, the product serial numbers can be used to determine the approximate shipping date.
- **3rd-party parts:**

12-month (1-year) warranty from delivery for the 3rd-party parts that are not manufactured by IBASE, such as CPU, CPU cooler, memory, storage devices, power adapter, panel and touchscreen.
- * PRODUCTS THAT FAIL DUE TO MISUSE, ACCIDENT, IMPROPER INSTALLATION OR UNAUTHORIZED REPAIR SHALL BE TREATED AS OUT OF WARRANTY AND CUSTOMERS SHALL BE BILLED FOR REPAIR AND SHIPPING CHARGES.

Technical Support & Services

1. Visit the IBASE website at www.ibase.com.tw to find the latest information about the product.
2. If you need any further assistance from your distributor or sales representative, prepare the following information of your product and elaborate upon the problem.
 - Product model name
 - Product serial number
 - Detailed description of the problem
 - The error messages in text or in screenshots if there is any
 - The arrangement of the peripherals
 - Software in use (such as OS and application software, including the version numbers)
3. If repair service is required, you can download the RMA form at <http://www.ibase.com.tw/english/Supports/RMAService/>. Fill out the form and contact your distributor or sales representative.

Table of Contents

| | | |
|------------------|--|----------|
| Chapter 1 | General Information..... | 1 |
| 1.1 | Introduction | 2 |
| 1.2 | Features..... | 2 |
| 1.3 | Packing List | 3 |
| 1.4 | Specifications..... | 3 |
| 1.5 | Product View..... | 4 |
| 1.6 | Dimensions | 6 |
| Chapter 2 | Hardware Installation & Motherboard Information | 7 |
| 2.1 | Installation / Replacement..... | 8 |
| 2.1.1 | Wall Mounting Bracket..... | 8 |
| 2.1.2 | Rack Mounting Ears | 9 |
| 2.1.3 | Top Cover..... | 10 |
| 2.1.4 | SSD Storage | 11 |
| 2.1.5 | Graphics Card | 12 |
| 2.1.6 | Memory | 13 |
| 2.1.7 | WiFi 4G/5G Antenna..... | 13 |
| 2.1.8 | M.2 Devices..... | 14 |
| 2.2 | Setting the Jumpers | 15 |
| 2.3 | Jumper & Connector Locations on Motherboard | 16 |
| 2.4.6 | SW1 / J1 : ATX Power ON Switch..... | 17 |
| 2.4.7 | J2: M.2 B-key / SIM card slot | 18 |
| 2.4.8 | CN5 : SIM card Socket from J2 M.2 B-key | 18 |
| 2.4.9 | J3: M.2 E-key | 19 |
| 2.4.10 | J4: Digital I/O Connector (DF11-10S-PA66H) | 19 |
| 2.4.11 | J5: 80 Port | 20 |
| 2.4.12 | J7: For Debug Use | 20 |
| 2.4.13 | J8: Reset Button | 20 |
| 2.4.14 | J9: For SPI Debug Tools Pin Header | 20 |
| 2.4.15 | J10 / J11: DDR4 SO-DIMM Slots | 21 |
| 2.4.16 | J12 : ISMART MCU Program Header | 21 |
| 2.4.17 | J13 : ATX Connector..... | 22 |
| 2.4.18 | ATX_12V_2X1: ATX 12V Power Connector..... | 22 |

| | | |
|------------------|---|-----------|
| 2.4.19 | J14: Mini PCI-E Socket | 23 |
| 2.4.20 | CN7: SIM Card Socket..... | 23 |
| 2.4.21 | J15: MXM SRC Power | 23 |
| 2.4.22 | J16 : USB3.1 Connectors | 24 |
| 2.4.23 | J17 : USB 2.0 Connector | 25 |
| 2.4.24 | CN6: MXM Socket | 25 |
| 2.4.25 | CN8, CN9: SATA Connectors | 26 |
| 2.4.26 | CPU_FAN1: CPU Fan Power Connector | 26 |
| 2.4.27 | CN1: COM1 RS-232 Ports | 27 |
| 2.4.28 | CN2 / CN3: GbE LAN Port and Dual USB 3.1 Ports..... | 27 |
| 2.4.29 | CN4: Audio Connector | 28 |
| 2.4.30 | LED1: Power LED / HDD LED | 28 |
| Chapter 3 | Driver Installation | 29 |
| 3.1 | Introduction | 30 |
| 3.2 | Intel® Chipset Software Installation Utility..... | 30 |
| 3.3 | NVIDIA Graphics Driver Installation | 32 |
| 3.4 | Realtek High Definition Audio Driver Installation | 35 |
| 3.5 | LAN Driver Installation | 37 |
| 3.6 | Intel® ME Drivers Installation..... | 39 |
| Chapter 4 | BIOS Setup..... | 41 |
| 4.1 | Introduction | 42 |
| 4.2 | BIOS Setup..... | 42 |
| 4.3 | Main Settings | 43 |
| 4.4 | Advanced Settings | 43 |
| 4.5 | Chipset Settings..... | 55 |
| 4.6 | Security Settings | 60 |
| 4.7 | Boot Settings..... | 62 |
| 4.8 | Save & Exit Settings..... | 63 |
| Appendix | | 64 |
| A. | I/O Port Address Map..... | 65 |
| B. | Interrupt Request Lines (IRQ) | 67 |
| C. | UMCC Quick Guide..... | 68 |

Chapter 1

General Information

The information provided in this chapter includes:

- Features
- Packing List
- Accessories
- Specifications
- Product View
- Dimensions

1.1 Introduction

The SP-63ER is an 8th Gen Intel® Core™ Desktop Processor Video Wall Player with Nvidia (RTX A2000) MXM module and 16 HDMI outputs. It is the perfect system for displaying 8K/12K video wall or menu boards. The platform comes with built-in an MXM slot for installing the RTX A2000 graphics module to power 16x HDMI 1.3 outputs. Its rugged design features Intel® vPro™ and MARS technologies and advanced iSMART intelligent energy-saving & Observer remote monitoring technologies.



1.2 Features

- Perfect for displaying 8K/12K video wall or menu board contents
- Supports 8th Gen Intel® Core™ desktop processors
- Up to 16 x HDMI 1.3 (w/o audio) with built-in hardware EDID emulation function
- 1x MXM slot supports MXM RTX A2000 16x HDMI 1.3
- Rugged design with Intel® vPro™ and MARS technologies
- iSMART intelligent energy-saving & Observer remote monitoring technologies
- Supports display monitoring functions

1.3 Packing List

Your product package should include the items listed below.


- SP-63ER Digital Signage Player
 - Intel® Core™ i7-8700 Processor (12M cache, up to 3.2GHz), 1x MXM Nvidia RTX A2000 8G GDDR5X GPU card, 16x HDMI, 2x 8GB DDR4-2666/2400 SO-DIMM memory, 2x 128GB SATA III 2.5" HDD Dock, 850W PSU
- Power Cord

1.4 Specifications

| | |
|-------------------------------|---|
| Product | SP-63ER |
| Mainboard | MBD63E |
| Operating System | Windows 10 IoT Enterprise 64-bit |
| CPU | Intel® Core™ i7-8700 Processor (12M cache, up to 3.2GHz) |
| Chipset | Intel® Q370PCH or Nvidia MXM Graphics card |
| Memory | 2x 8GB DDR4-2666/2400 SO-DIMM memory |
| Graphics | MXM Nvidia RTX A2000 8G GDDR5X GPU card, |
| LAN Controller | 1x Intel® I219LM GbE, 1x Intel® I210AT GbE |
| Expansion Slots | 1x Mini PCI-E socket 1x M.2 B-Key socket 1x M.2 E-Key socket 1x MXM slot (for NVIDIA module) |
| I/O Interface | 16x HDMI 1.3 with hardware EDID emulation 4x USB 3.1 ports; 2x RJ45 for Gigabit LAN; 1x D-Sub for RS232 2x Audio connectors for Line-out/Mic-in Power LED for power on/off & HDD 1x Power button 1x AC power inlet |
| Power Supply | AC 110V~220V |
| Operating Temperature | 0°C~ 45°C (32°F~113°F) |
| Storage Temperature | -20°C ~ 80°C (-4°F~176°F) |
| Relative Humidity | 5~90% @ 45°C, (non-condensing) |
| Vibration | mSATA: 5 grms / 5~500Hz / random operation |
| Certification | CE, FCC Class B, cULus, |
| Dimensions (W x H x D) | 395mm(W) x 438mm(D) x 88mm(H) 15.5" (W) x 17.2" (D) x 3.46" (H) |

1.5 Product View

Front View

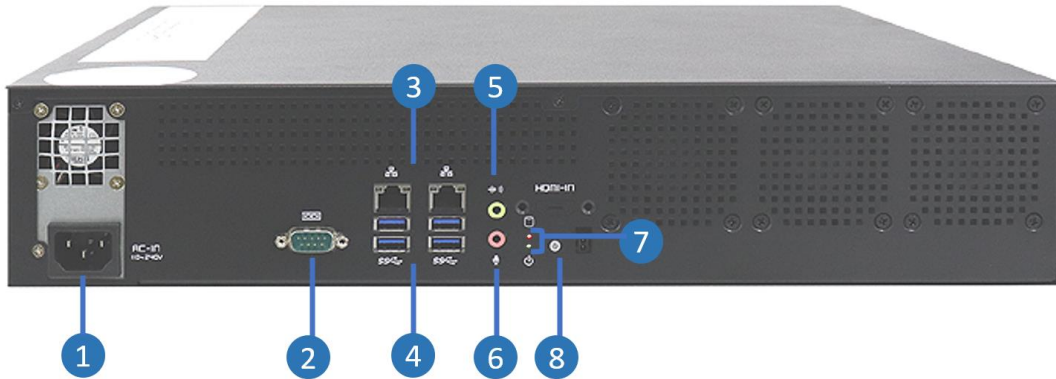

| No. | Function | No. | Function |
|-----|----------------------|-----|----------------------------|
| 1 | AC inlet (110V~220V) | 5 | Lin-out |
| 2 | 1x D-Sub for RS232 | 6 | Mic |
| 3 | 2x GbE ports | 7 | HDD Activity and Power LED |
| 4 | 4x USB 3.1 ports | 8 | Power button |


* Listed from left to right.

Rear View



* The number of HDMI ports will depend on the number of HDMI module tray installed. This picture is for reference only.


Rear View

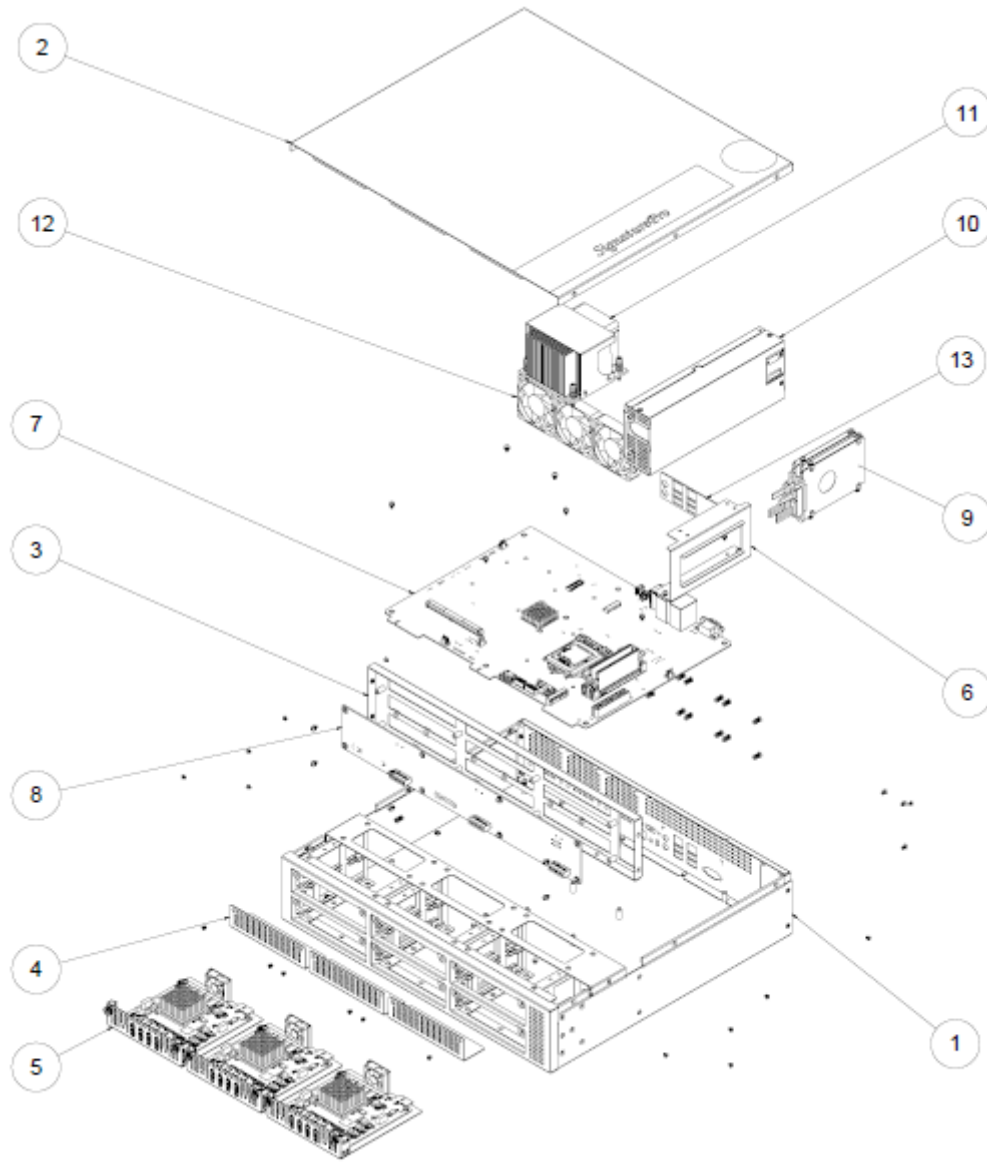

| No. | Part | No. | Part |
|-----|----------------------|-----|------------------------|
| 1 | Chassis Base | 8 | Backplane |
| 2 | Top Cover | 9 | 2.5" SATA / HDD |
| 3 | Backplane Bracket | 10 | Power Supply |
| 4 | Base Cover Bracket | 11 | CPU Heatsink + Fan |
| 5 | 4x HDMI Module Tray | 12 | 12V Fan 60 x 60 x 15mm |
| 6 | 2x 2.5" SATA Bracket | 13 | I/O Connector Gasket |
| 7 | Motherboard | | |

1.6 Dimensions

Unit: mm

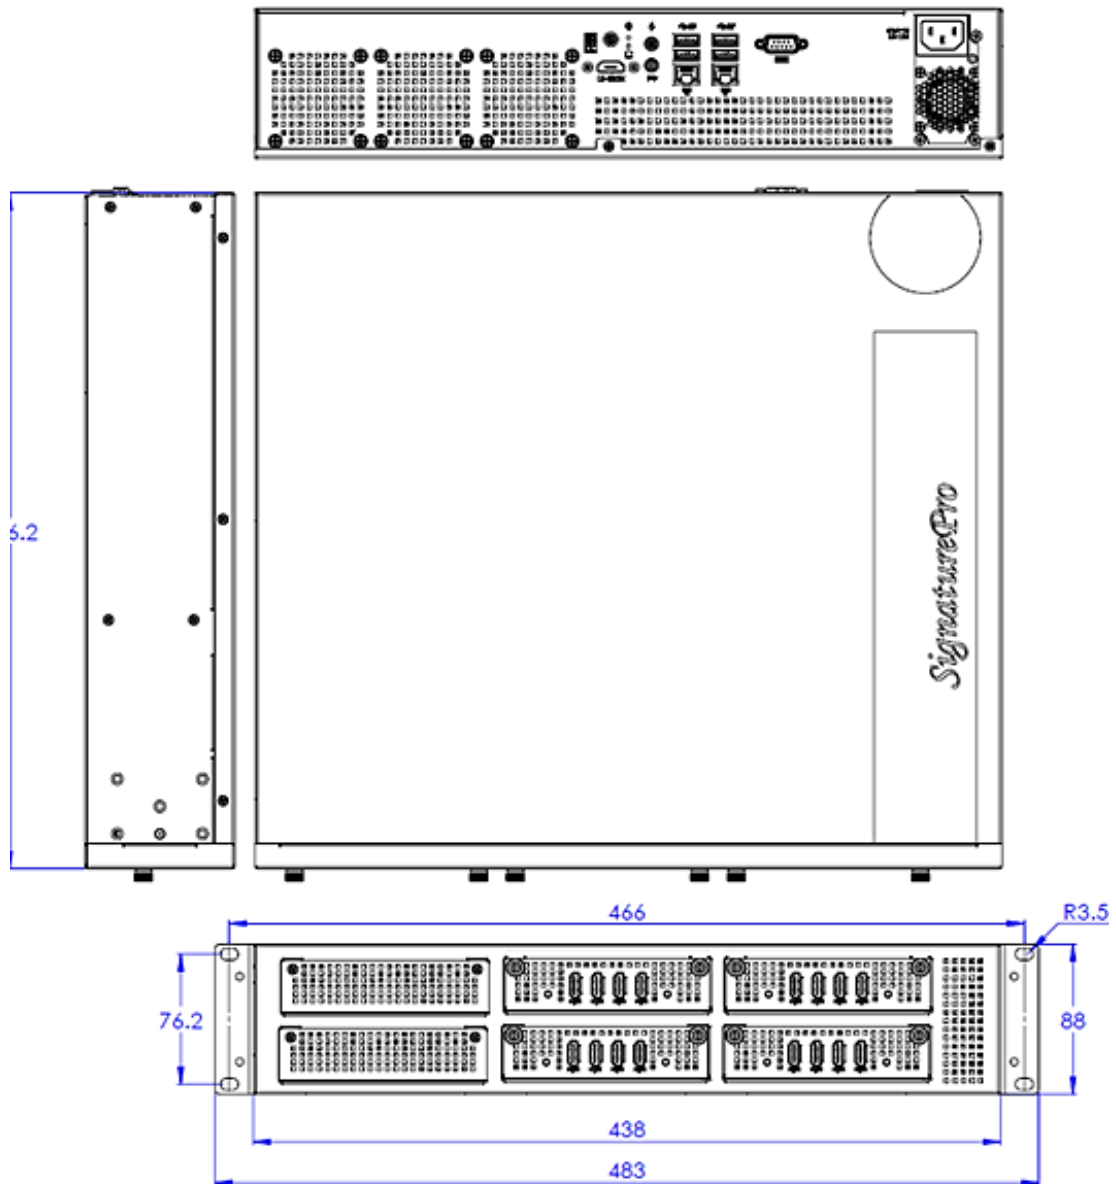

Chapter 2

Hardware Installation & Motherboard Information

The information provided in this chapter includes:


- Installations
 - Wall Mounting Bracket
 - Rack Mounting Ears
 - Top Cover
 - SSD Storage
 - Graphics Card
 - Memory
 - M.2 Cards
- Information and locations of connectors

2.1 Installation / Replacement

To install or replace internal parts or external accessories, follow the instructions in the next pages.


2.1.1 Wall Mounting Bracket

Use the eight (8) screws shown below to install/ remove the **wall mounting bracket**. The screw holes are located at the bottom of the system.

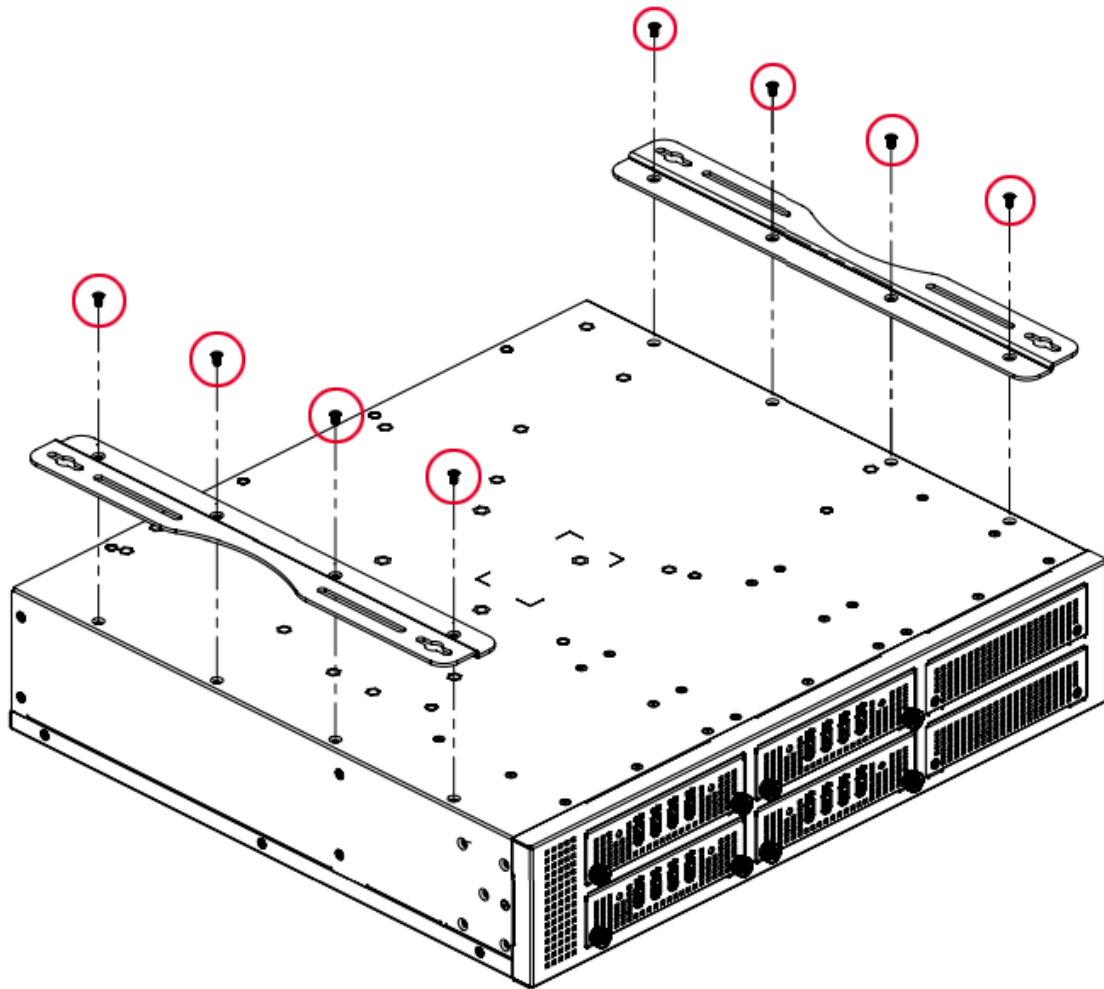


2.1.2 Rack Mounting Ears

Use the ten (10) screws shown below to install/ remove the **rack mounting ears**.

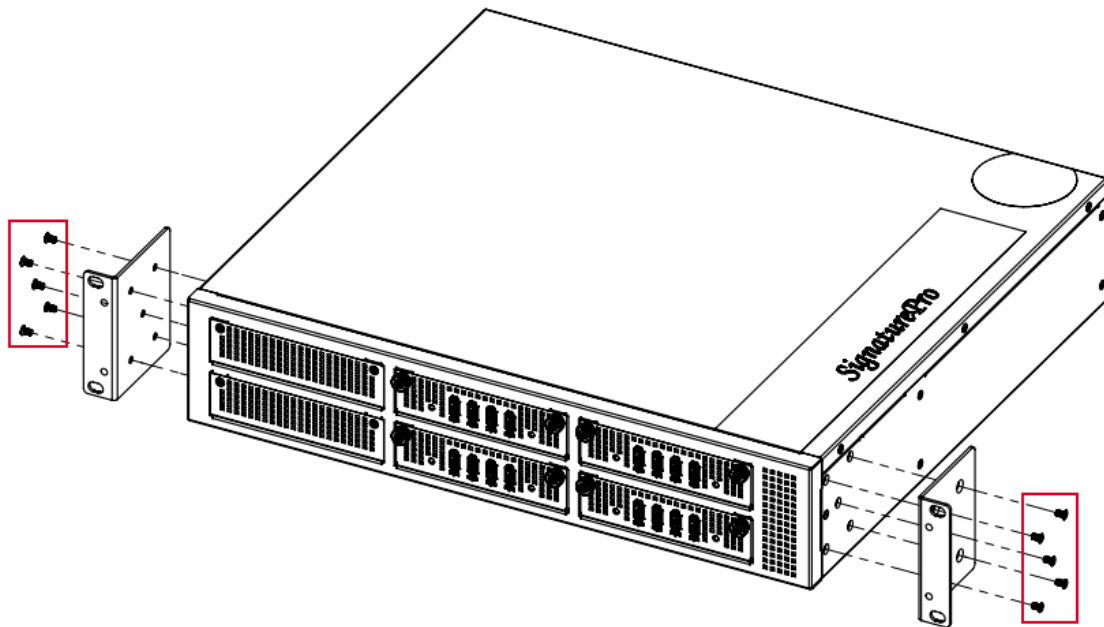


2.1.3 Top Cover

To remove the **top cover**, remove the eight (8) screws shown below. The top cover has to be removed when installing/replacing internal parts such as the SSD storage or graphics card.

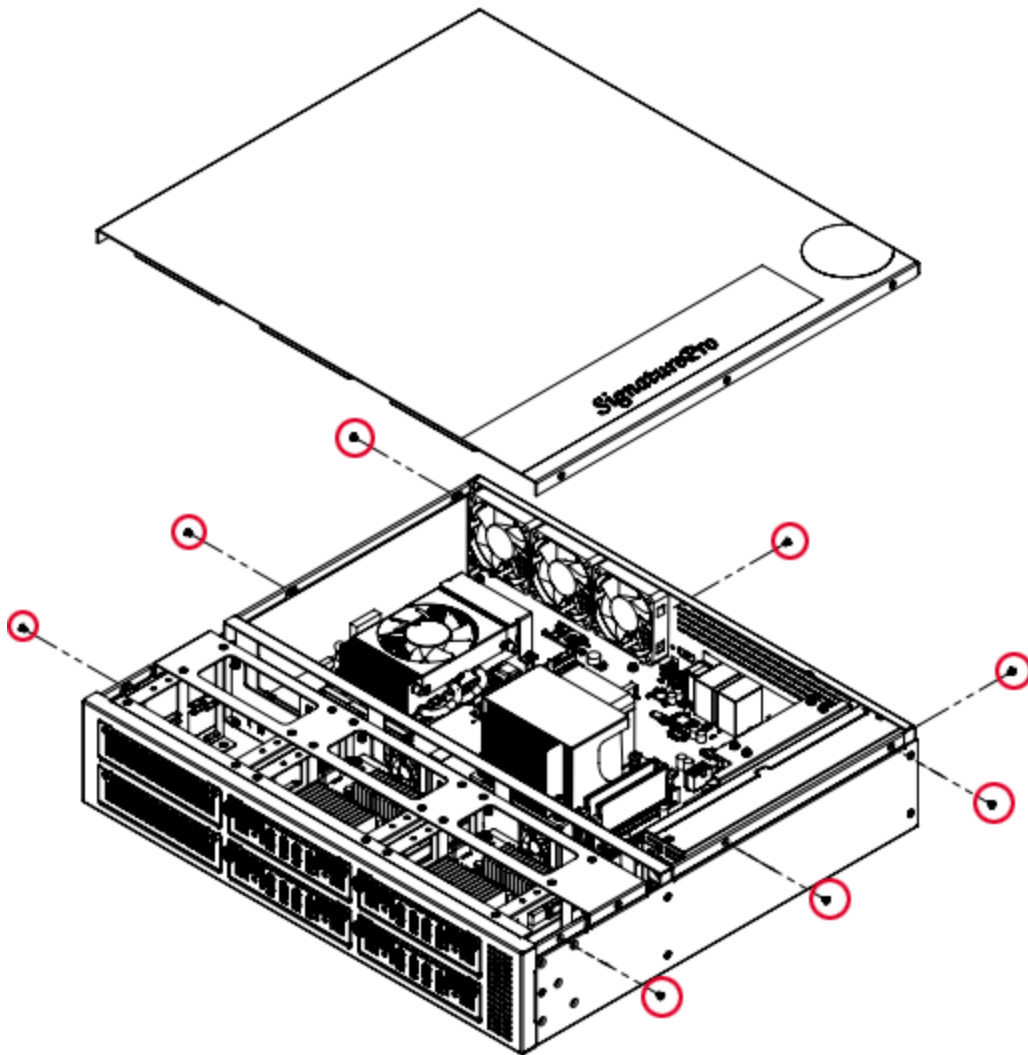


2.1.4 SSD Storage

To replace or install the **SSD storage**, remove the top cover as shown in the previous page and then remove the two (2) screws holding the SSD storage kit.

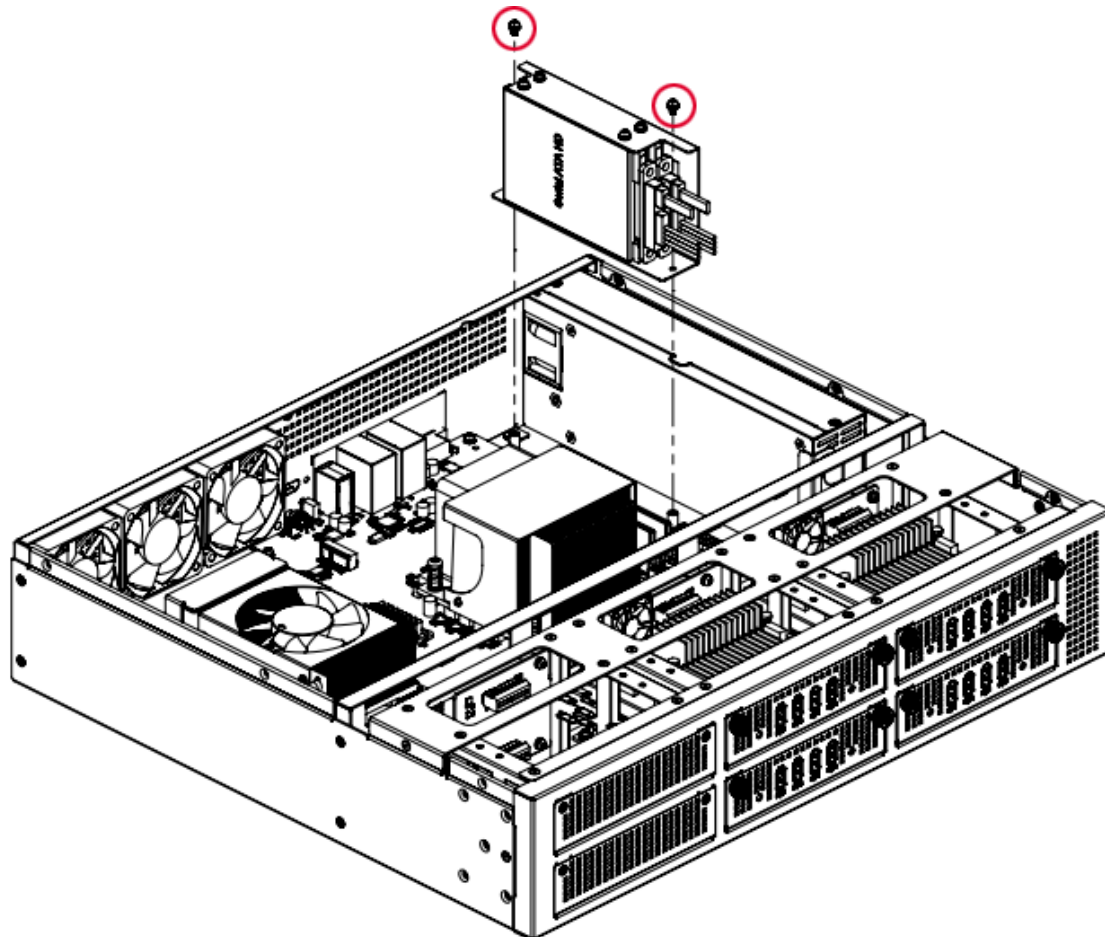


2.1.5 Graphics Card

To replace or install the **graphics card**, remove the top cover as shown in the previous page and then remove the four (4) screws holding the graphics card kit as shown below.

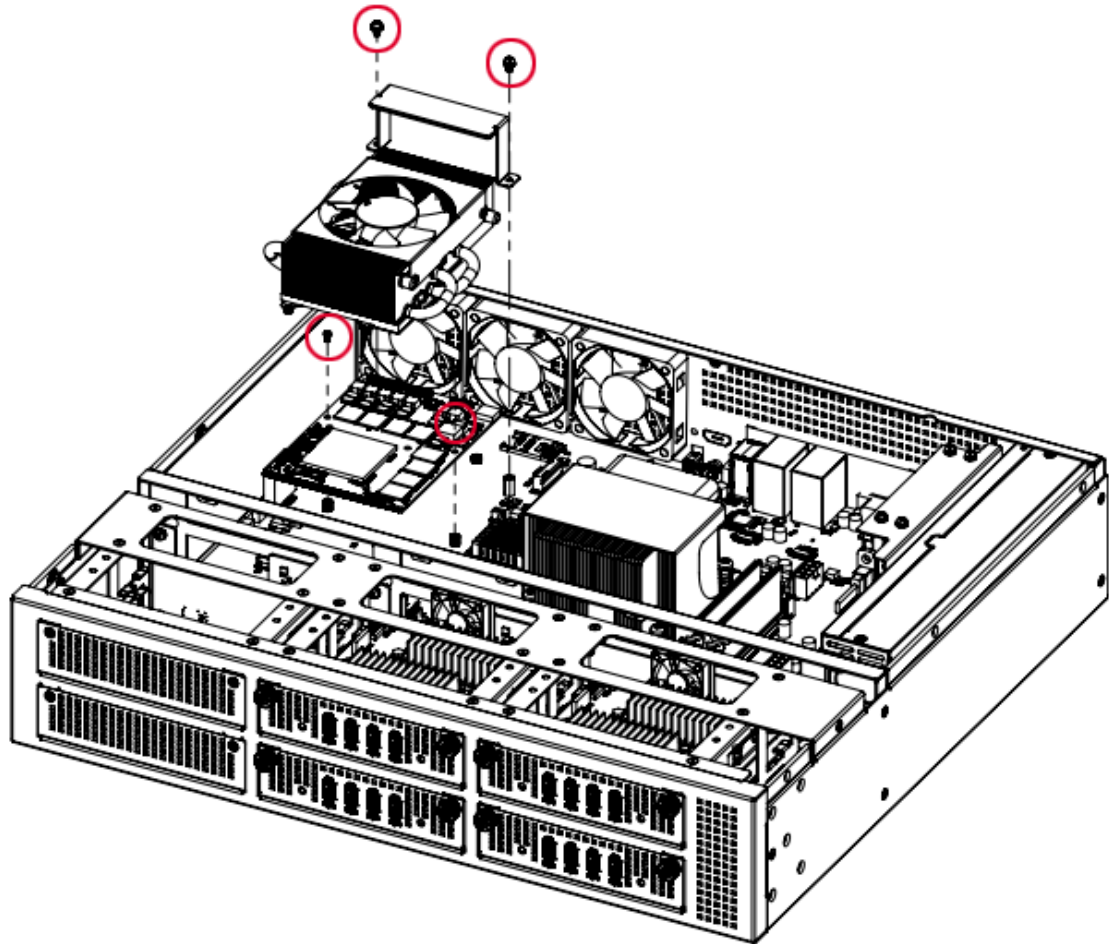

2.1.6 Memory

The MBD63E motherboard housed in the SP-63ER supports two DDR4 memory sockets situated right beside the processor. To install the memory modules, locate the memory slot on the board and perform the following steps:

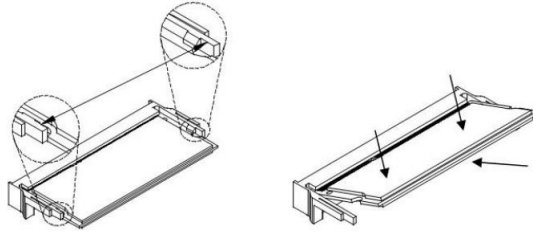


1. Align the key of the memory module with that on the memory slot and insert the module slantwise.
2. Gently push the module in an upright position until the clips of the slot close to hold the module in place when the module touches the bottom of the slot.

To remove the module, press the ejector tabs outwards with your fingertips to eject the module.

2.1.7 WiFi 4G/5G Antenna

Thread the WiFi / 4G / 5G antenna extension cable through an antenna hole of the front I/O cover and fasten the antenna as shown below. Then apply adhesive to the edge of the hex nut behind the front I/O cover to prevent the extension cable from falling if the cable becomes loose.


1. Thread and fasten the hex nut and the washer. Then install the antenna.
2. Apply adhesive around here.

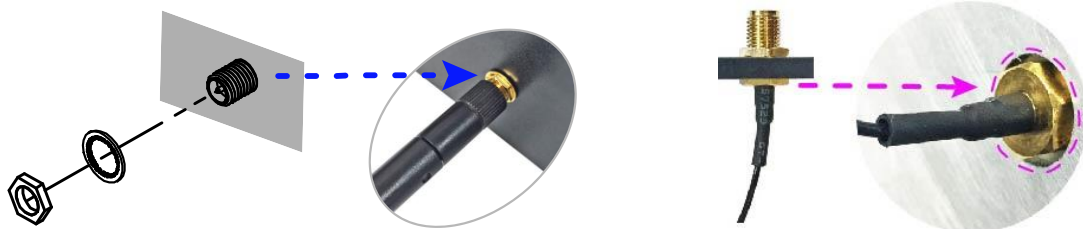

Info: The diameter of the nut is around 6.35 mm (0.25"-36UNC).

2.1.8 M.2 Devices

1. After removing the cover, locate the M.2 sockets for installation or replacement of M.2 devices.
2. To install or replace a card, align the key of the card to the interface, and insert the card slantwise. Push the card down and fix it with a flat head screw.

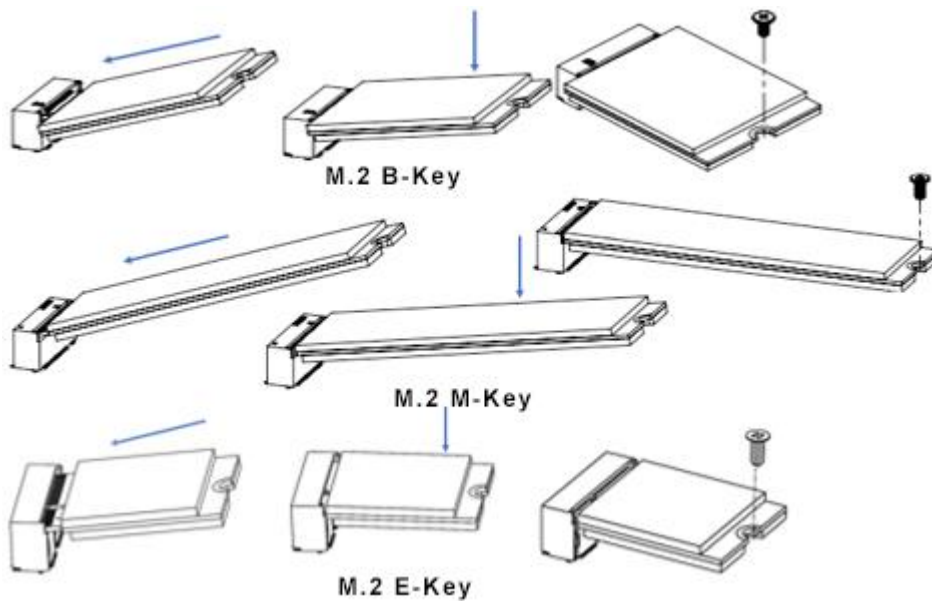


2.2 Setting the Jumpers

Set up and configure your SP-63ER by using jumpers for various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration.

2.3.1 How to Set Jumpers

Jumpers are short-length conductors consisting of several metal pins with a non-conductive base mounted on the circuit board. Jumper caps are used to have the functions and features enabled or disabled. If a jumper has 3 pins, you can connect either PIN1 to PIN2 or PIN2 to PIN3 by shorting.

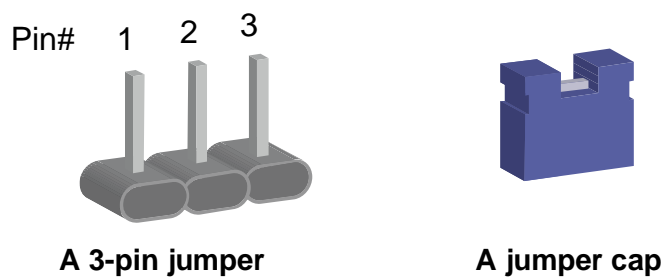

Refer to the illustration below to set jumpers.


| Pin closed | Oblique view | Illustration |
|------------|--------------|--------------|
| Open | | |
| 1-2 | | |
| 2-3 | | |

When two pins of a jumper are encased in a jumper cap, this jumper is **closed**, i.e. turned **On**.



When a jumper cap is removed from two jumper pins, this jumper is **open**, i.e. turned **Off**.

2.3 Jumper & Connector Locations on Motherboard

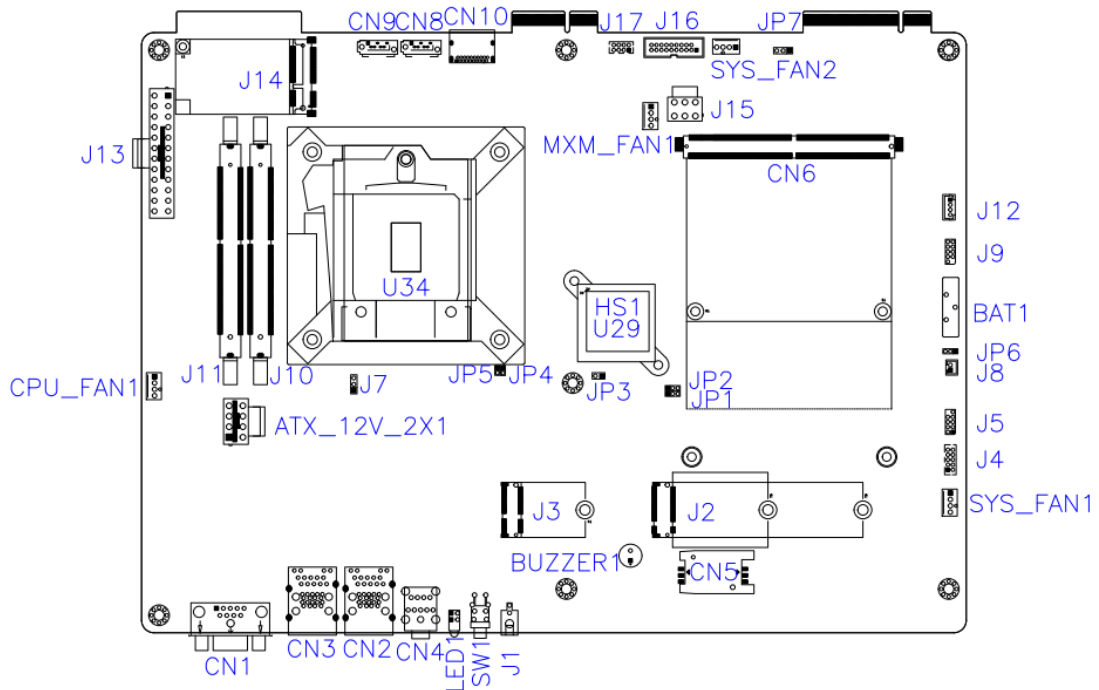

Motherboard: MBD63E





2.4.1 JP1: Clear CMOS

| JP1 | Function | Pin closed |
|---|------------------|------------|
|  1 | Normal (Default) | 1-2 |
|  1 | Clear CMOS | 2-3 |



2.4.2 JP2: ME Contents

| JP2 | Function | Pin closed |
|---|-------------------|------------|
|  1 | Normal (Default) | 1-2 |
|  1 | Clear ME Contents | 2-3 |


2.4.3 JP3: Flash Descriptor Security Override (Factory use only)

| JP3 | Pin | Function |
|---|----------------|--------------------|
|  1 | Open | Disabled (Default) |
|  1 | Pin 1-2 Closed | Enabled |


2.4.4 JP6: AT/ATX Mode Selection

| JP6 | Function | Pin closed |
|---|----------|------------|
|  1 | ATX | 1-2 |
|  1 | AT | 2-3 |

2.4.5 JP7: MXM GPU Selection

| JP7 | Function | Pin closed |
|---|--------------------------------------|------------|
|  1 | NVIDIA 2080 / NVIDIA A2000 (default) | 1-2 |


2.4.6 SW1 / J1 : ATX Power ON Switch

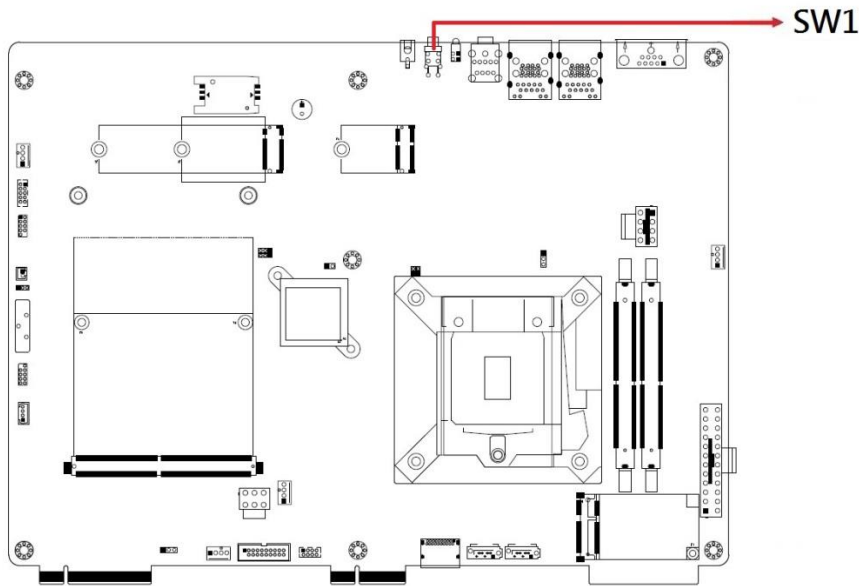


| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|------------|
| Power BTN- | 1 | 2 | Power BTN+ |

2.4.7 J2: M.2 B-key / SIM card slot


***Supports PCIe (1x), USB 2.0 and 3.0) default Sierra EM7455**

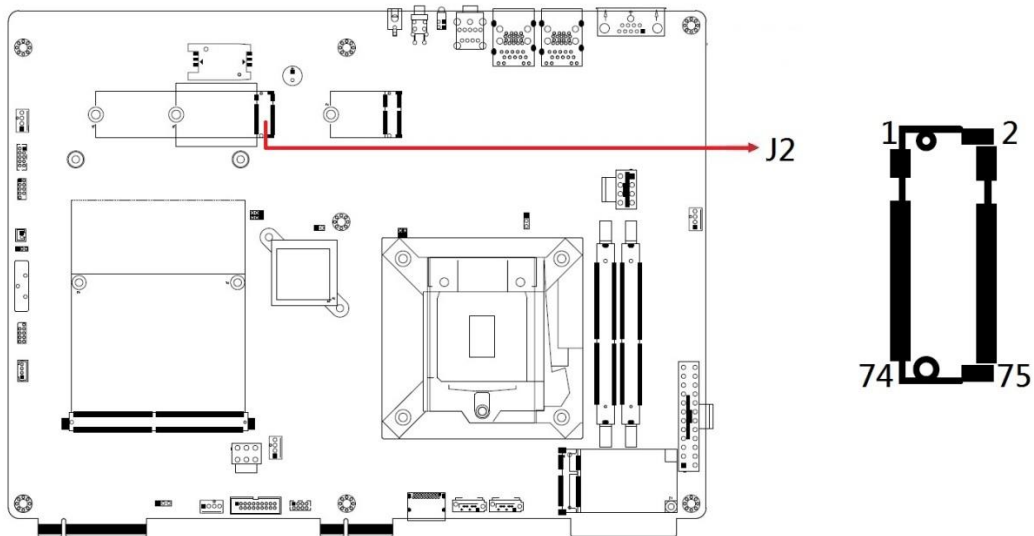


2.4.8 CN5 : SIM card Socket from J2 M.2 B-key

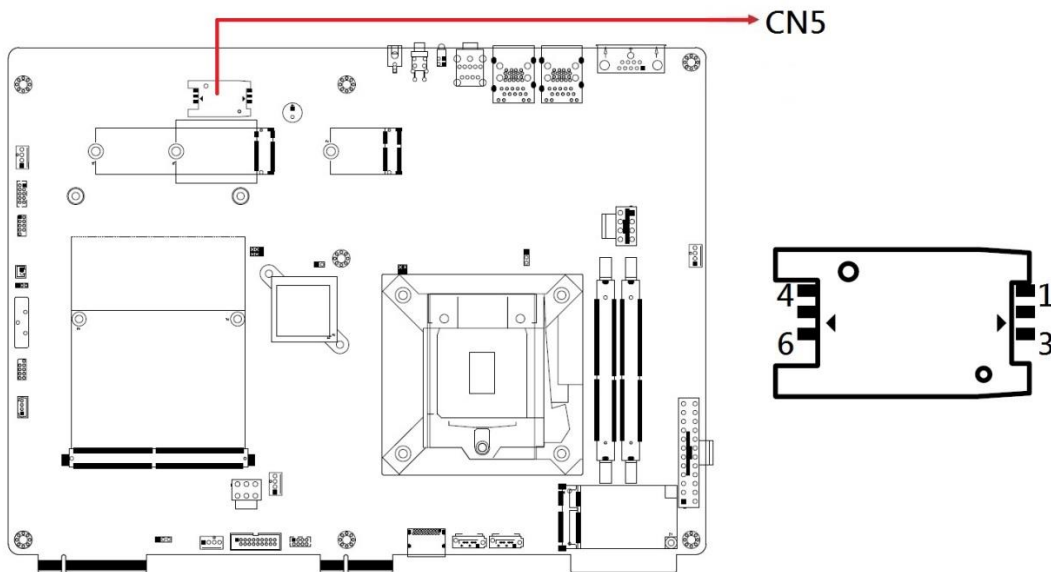

2.4.9 J3: M.2 E-key

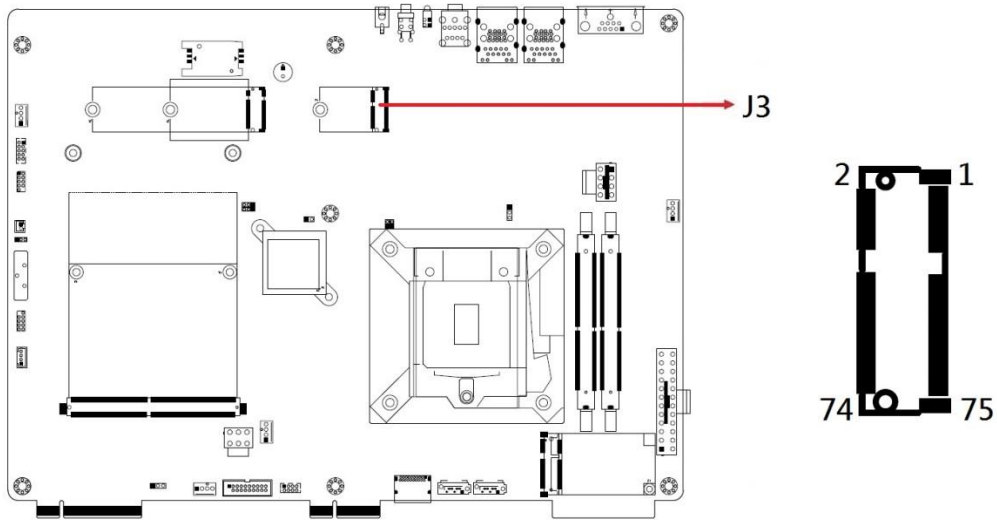


2.4.10 J4: Digital I/O Connector (DF11-10S-PA66H)

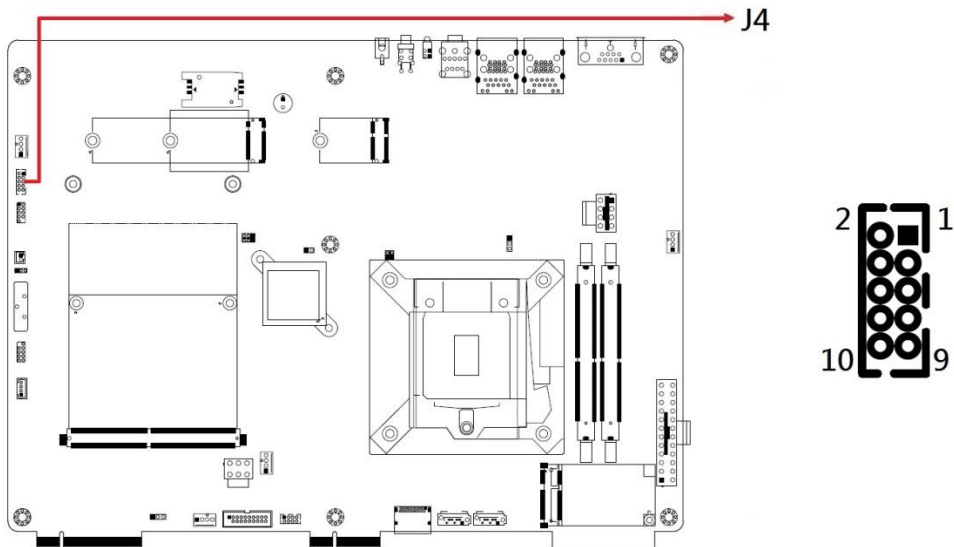

| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|----------|
| Ground | 1 | 2 | +5V(1A) |
| OUT3 | 3 | 4 | OUT1 |
| OUT2 | 5 | 6 | OUT0 |
| IN3 | 7 | 8 | IN1 |
| IN2 | 9 | 10 | IN0 |

2.4.11 J5: 80 Port

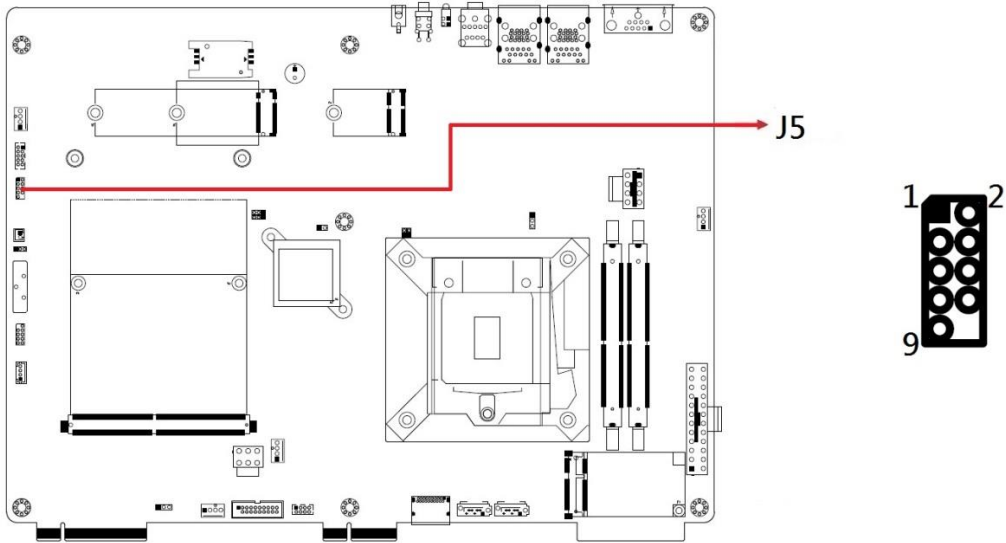


2.4.12 J7: For Debug Use


2.4.13 J8: Reset Button

| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|------------|
| Reset BTN- | 1 | 2 | Reset BTN+ |


2.4.14 J9: For SPI Debug Tools Pin Header

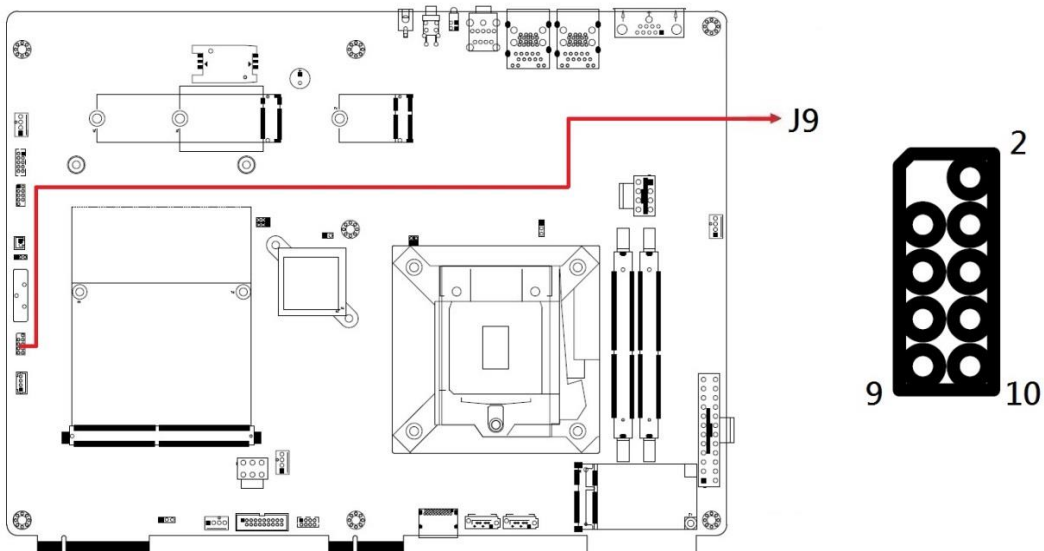


2.4.15 J10 / J11: DDR4 SO-DIMM Slots

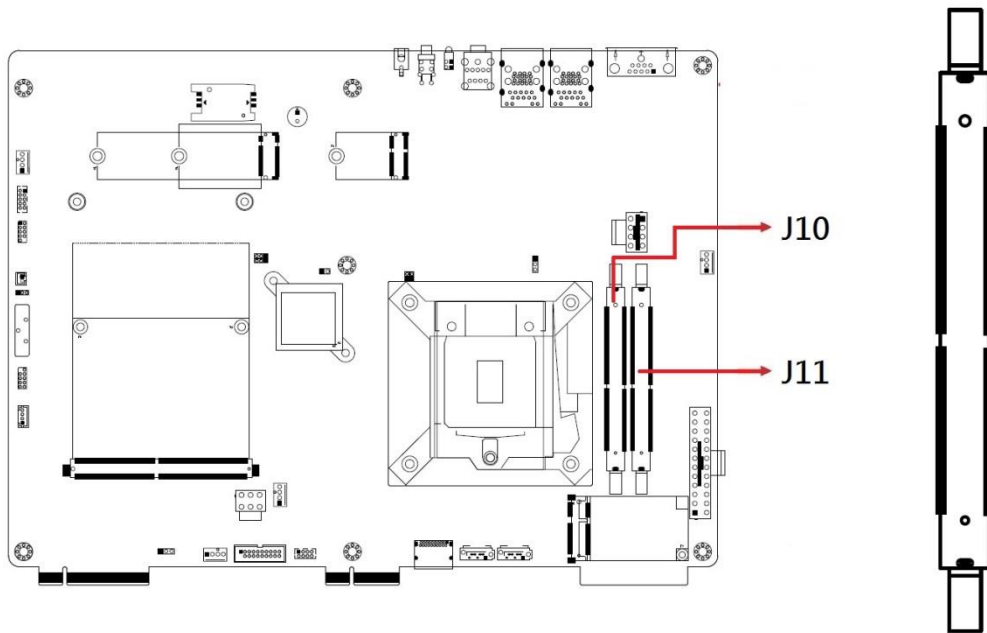


2.4.16 J12 : ISMART MCU Program Header

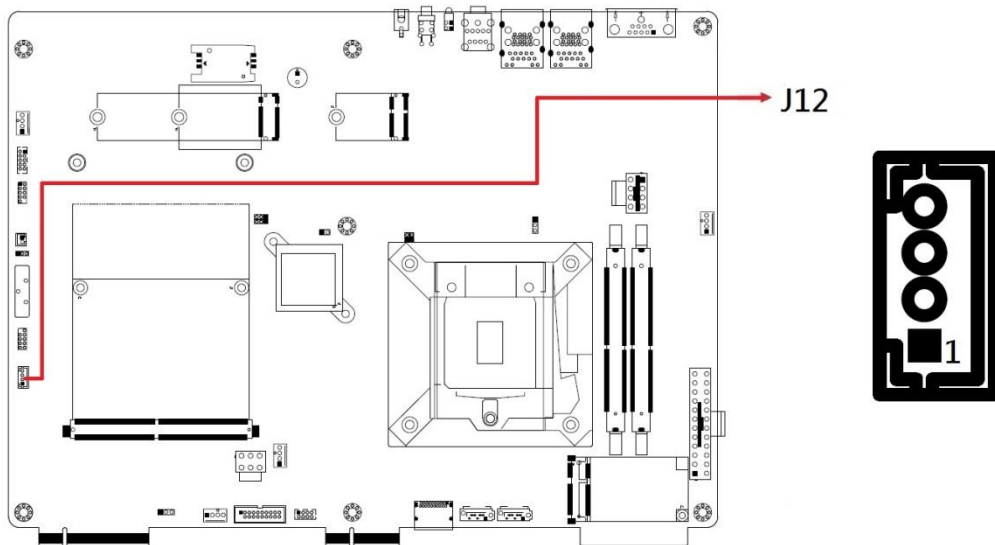

2.4.17 J13 : ATX Connector

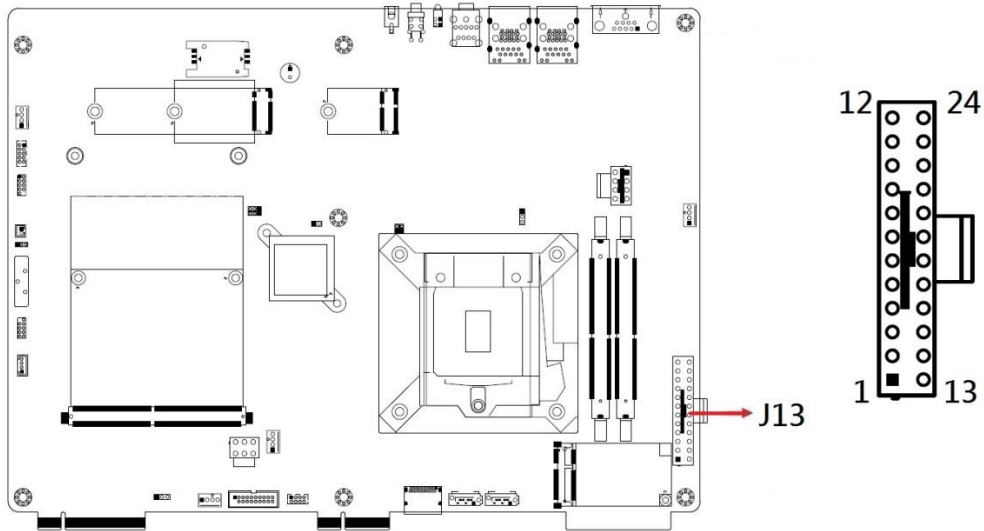


2.4.18 ATX_12V_2X1: ATX 12V Power Connector

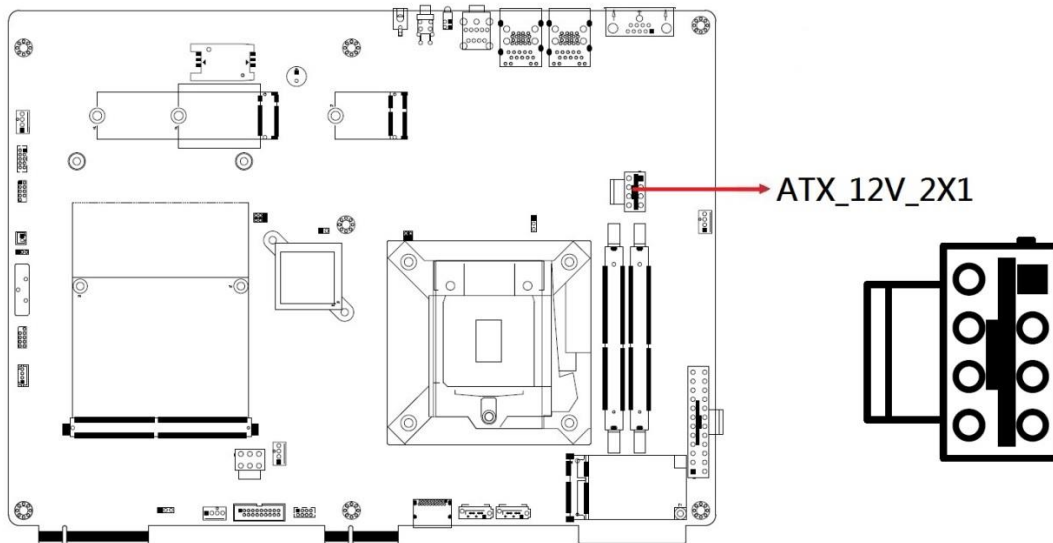

*** This connector supplies the CPU operating voltage.**

| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|----------|
| Ground | 1 | 5 | +12V |
| Ground | 2 | 6 | +12V |
| Ground | 3 | 7 | +12V |
| Ground | 4 | 8 | +12V |


2.4.19 J14: Mini PCI-E Socket

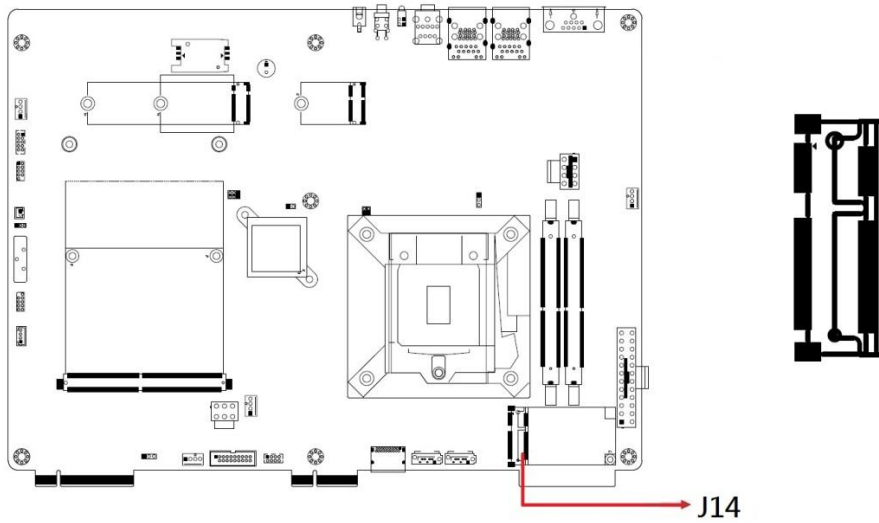

2.4.20 CN7: SIM Card Socket


*Signal from J14 Mini PCI-E

2.4.21 J15: MXM SRC Power (YIMTEX_576MWA2*03STR)

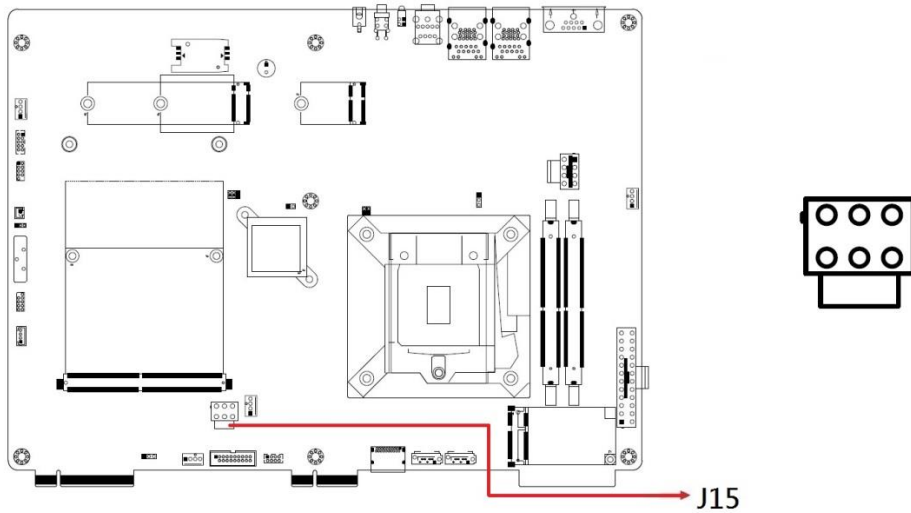


| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|----------|
| Ground | 1 | 4 | +12V |
| Ground | 2 | 5 | +12V |
| Ground | 3 | 6 | +12V |

2.4.22 J16 : USB3.1 Connectors (PINREX_52X-40-20GU52)

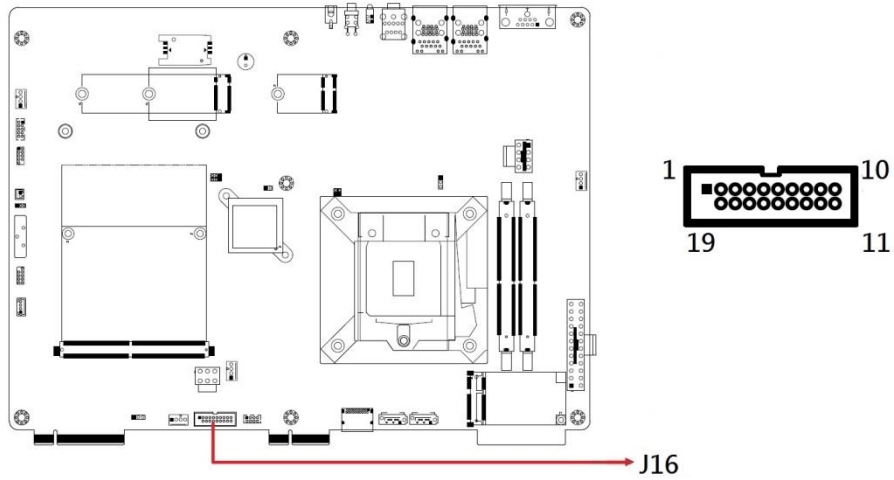


| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|------------|
| VCC(900mA) | 1 | X | |
| P1_SSRX- | 2 | 19 | VCC(900mA) |
| P1_SSRX+ | 3 | 18 | P2_SSRX- |
| GND | 4 | 17 | P2_SSRX+ |
| P1_SSTX- | 5 | 16 | GND |
| P1_SSTX+ | 6 | 15 | P2_SSTX- |
| GND | 7 | 14 | P2_SSTX+ |
| P1_U2_D- | 8 | 13 | GND |
| P1_U2_D+ | 9 | 12 | P2_U2_D- |
| NC | 10 | 11 | P2_U2_D+ |

2.4.23 J17 : USB 2.0 Connector (DF11-8S-PA66H)

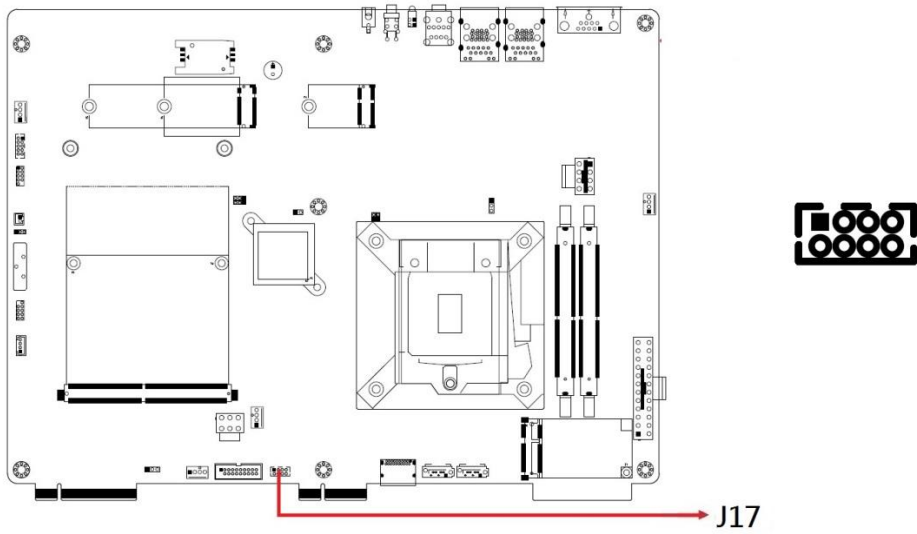


| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|-----------|
| Vcc(0.5A) | 1 | 2 | Ground |
| D0- | 3 | 4 | D1+ |
| D0+ | 5 | 6 | D1- |
| Ground | 7 | 8 | Vcc(0.5A) |


2.4.24 CN6: MXM Socket

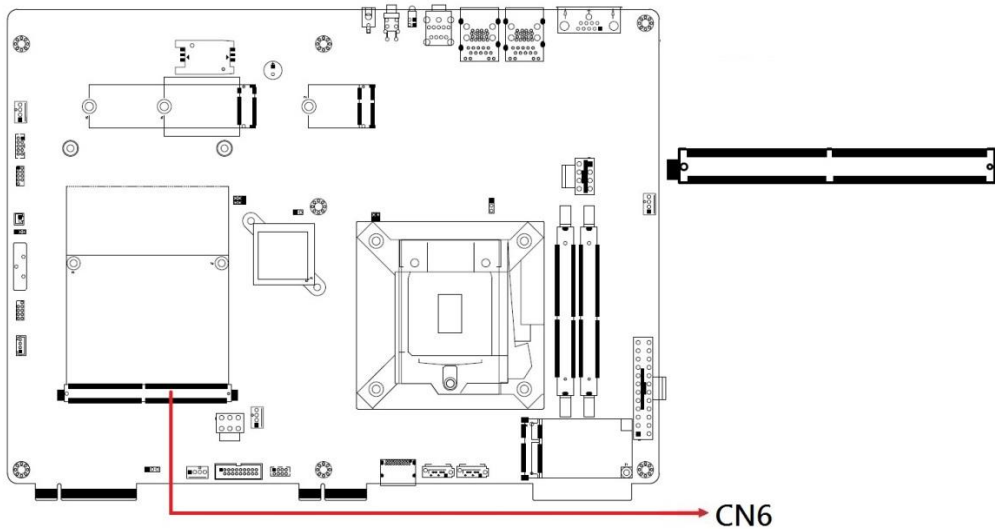

2.4.25 CN8, CN9: SATA Connectors

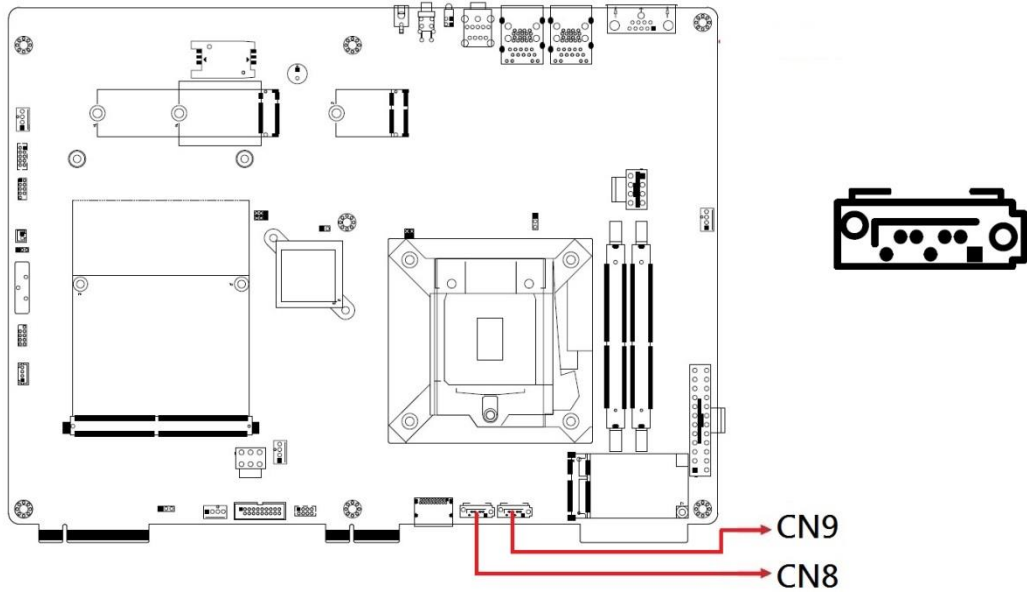


2.4.26 CPU_FAN1: CPU Fan Power Connector

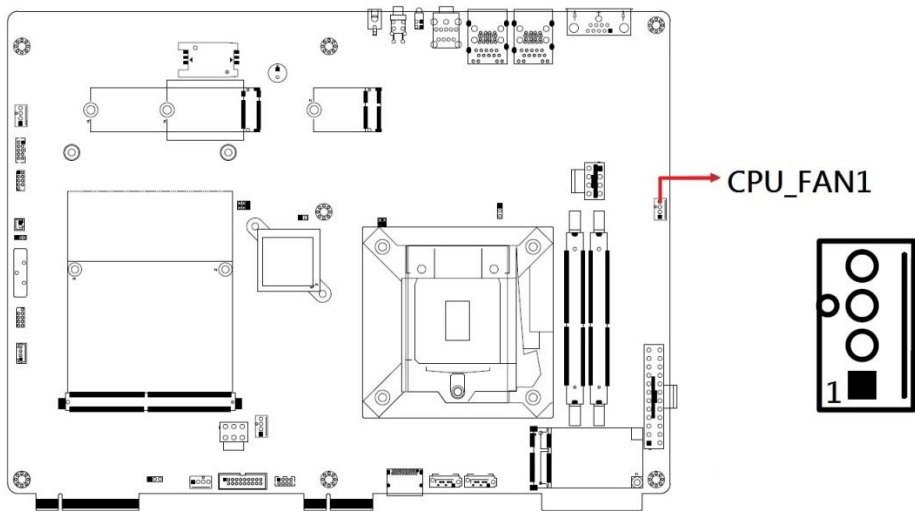

| Signal Name | Pin # | Pin# | Function |
|-------------|-------|------|--------------------|
| Ground | 1 | 3 | Rotation detection |
| +12V | 2 | 4 | Control |


2.4.27 CN1: COM1 RS-232 Ports

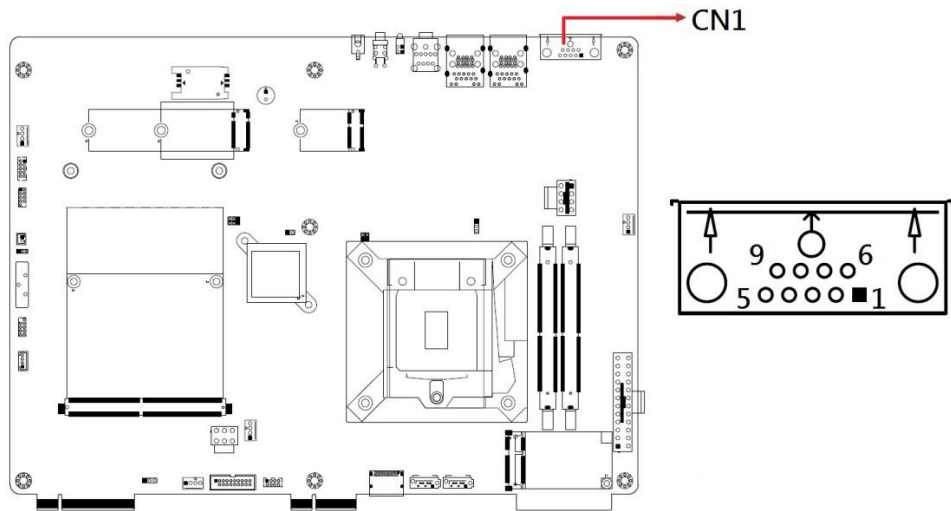


| Signal Name | Pin # | Pin# | Function |
|--------------------------|-------|------|----------------------|
| DCD, Data carrier detect | 1 | 6 | DSR, Data set ready |
| RXD, Receive data | 2 | 7 | RTS, Request to send |
| TXD, Transmit data | 3 | 8 | CTS, Clear to send |
| DTR, Data terminal ready | 4 | 9 | RI, Ring indicator |
| Ground | 5 | | |

2.4.28 CN2 / CN3: GbE LAN Port and Dual USB 3.1 Ports

*CN3: Intel WGI219LM / CN2: Intel WGI211AT

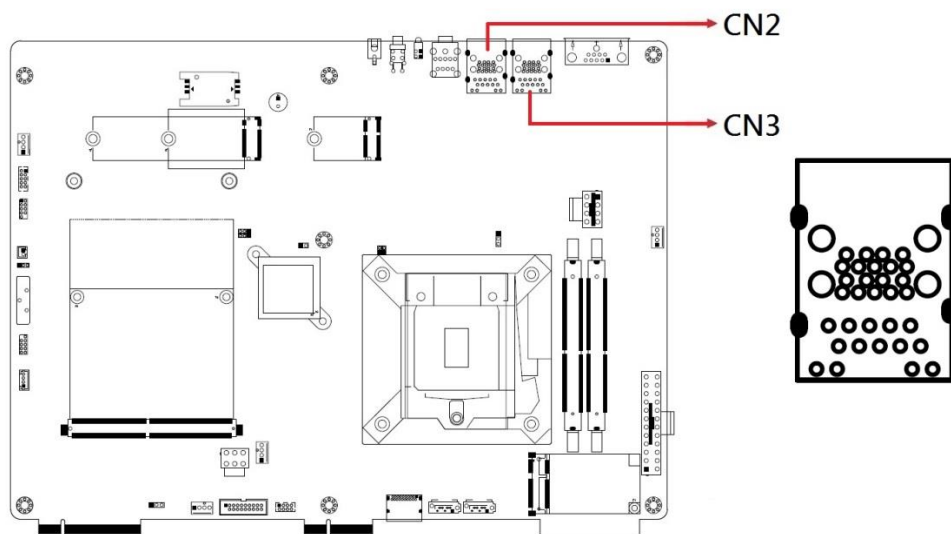


2.4.29 CN4: Audio Connector

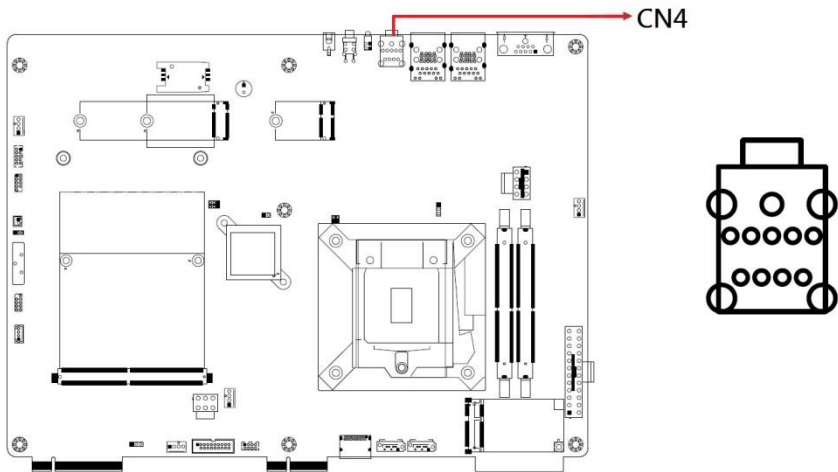

2.4.30 LED1: Power LED / HDD LED

***Green for Power LED / Red for HDD LED**

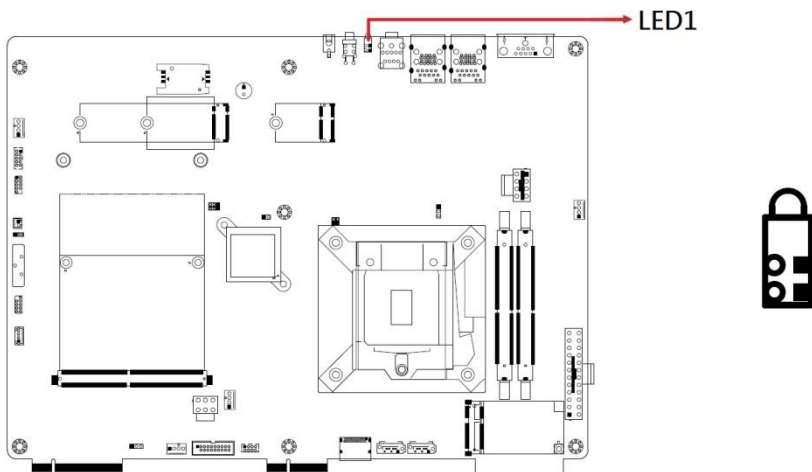

Chapter 3

Driver Installation

The information provided in this chapter includes:

- Intel® Chipset Software Installation Utility
- HD Audio Driver
- LAN Driver
- Intel® Management Engine Drivers Installation

3.1 Introduction

This section describes the installation procedures for software drivers. The software drivers are available on IBASE website www.ibase.com.tw. Go to the download page of the product. Copy the compressed drivers file to your computer. Double click the file to decompress it. Run "CDGuide" to go to the main drivers page.

Note: After installing your Windows operating system, you must install the Intel® Chipset Software Installation Utility first before proceeding with the drivers installation.

3.2 Intel® Chipset Software Installation Utility

The Intel® Chipset drivers should be installed first before the software drivers to install INF files for Plug & Play function for the chipset components. Follow the instructions below to complete the installation.

1. Click **Intel** on the left pane and then **Intel(R) Coffeelake Chipset Drivers** on the right pane.





2. Click **Intel(R) Chipset Software Installation Utility**.



3. When the *Welcome* screen to the Intel® Chipset Device Software appears, click **Next** to continue.
4. Accept the software license agreement and proceed with the installation process.
5. On the *Readme File Information* screen, click **Install**.
6. After the installation, click **Finish** to complete the setup process.

3.3 NVIDIA Graphics Driver Installation


1. Extract the NVIDIA Graphics Driver files. After extraction, the installation shall check the system compatibility.

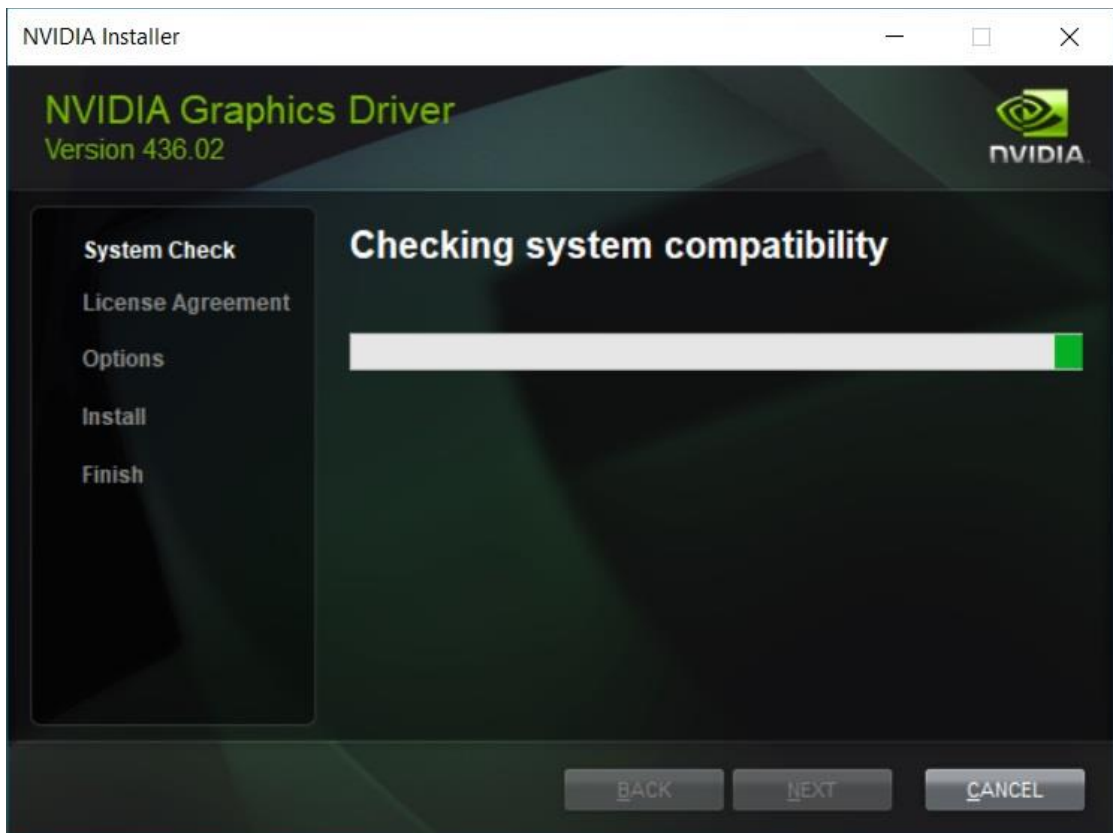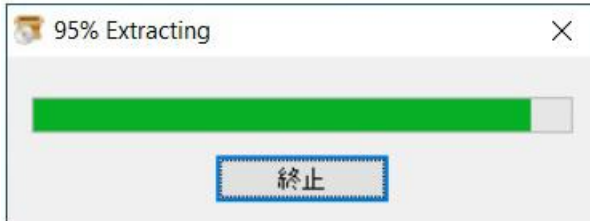


2. After System Check is done, click **AGREE AND CONTINUE**.



3. On the next screen, choose **Express (Recommended)** and click **NEXT**.

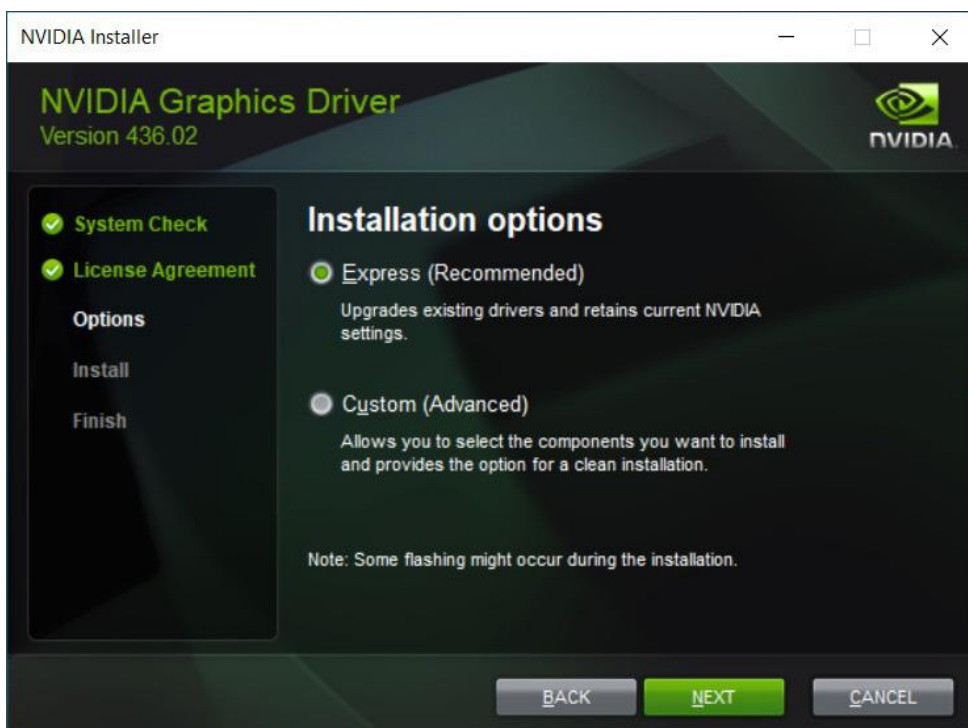

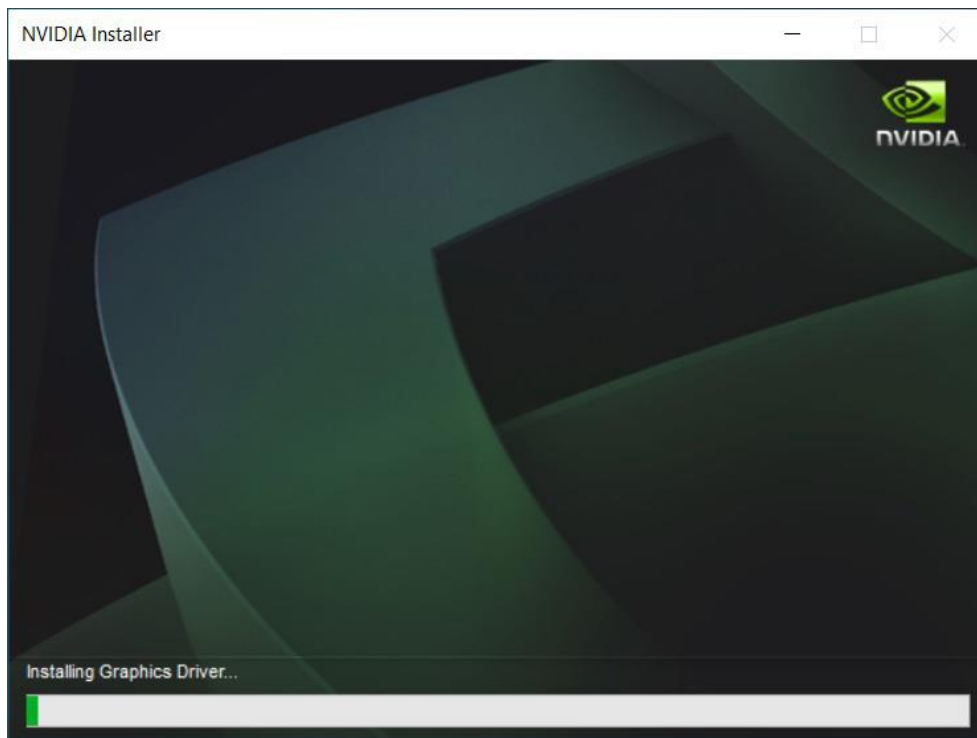


4. When the NVIDIA Installer has finished, click **RESTART NOW**.



3.4 Realtek High Definition Audio Driver Installation


1. Click **Intel** on the left pane and then **Intel(R) Coffelake Chipset Drivers** on the right pane.

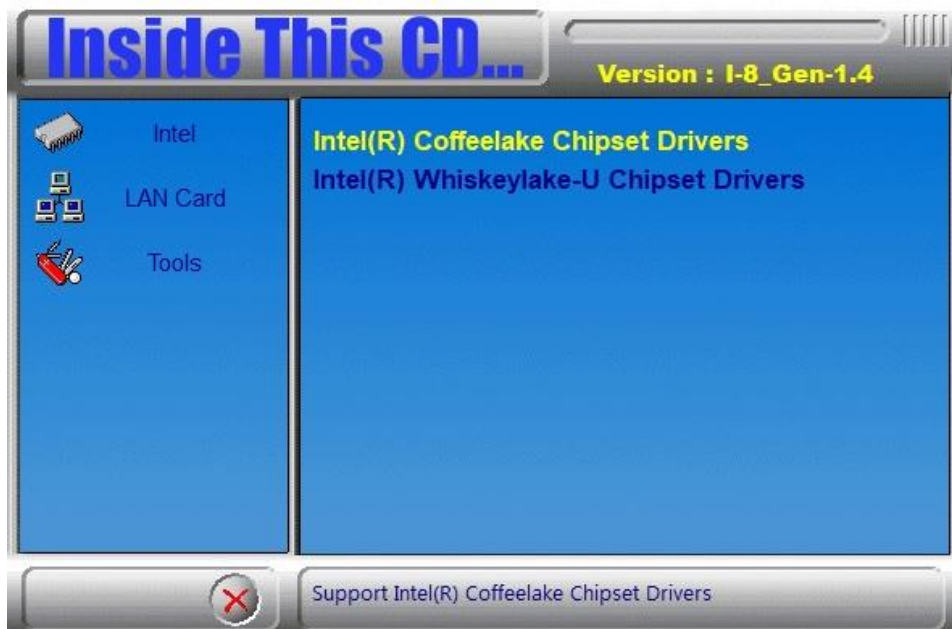


2. Click **Realtek High Definition Audio Driver**.



3. On the *Welcome* screen of the InstallShield Wizard, click **Next**. The InstallShield Wizard will install Realtek High Definition Audio Driver on your computer.

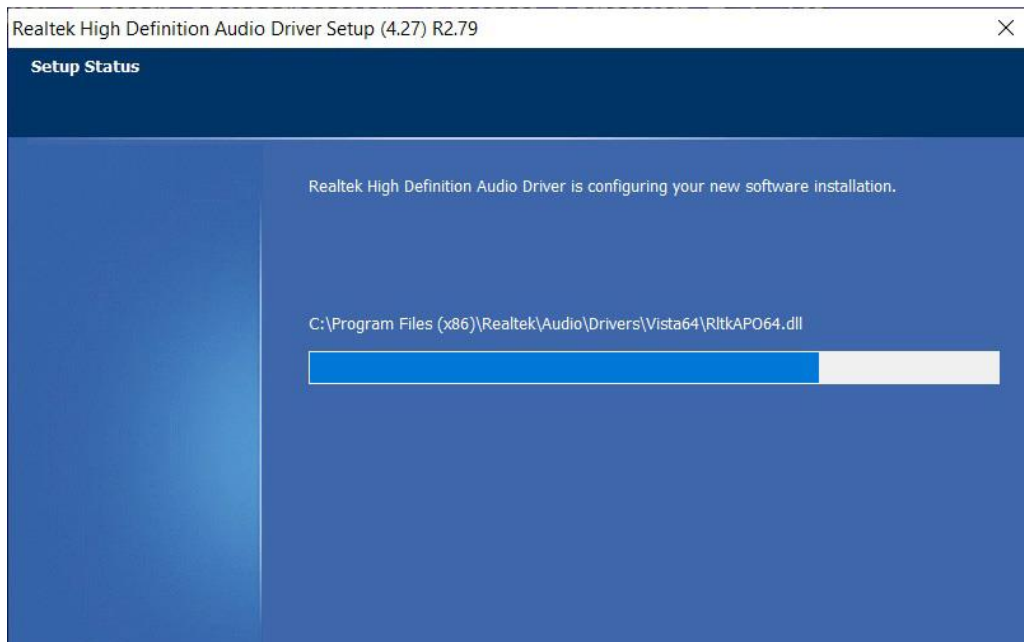

4. When the driver is completely installed, restart the computer for changes to take effect.

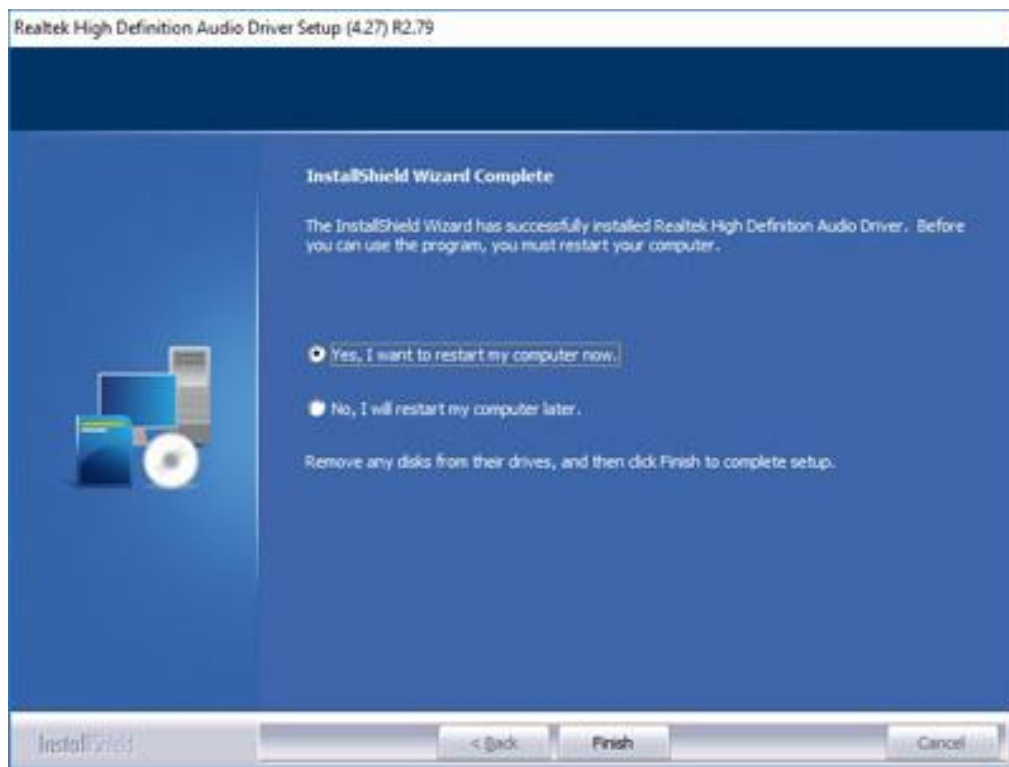


3.5 LAN Driver Installation


1. Click **LAN Card** on the left pane and then **Intel LAN Controller Drivers** on the right pane.




2. On the next screen, choose **Intel(R) 121x Gigabit Network Drivers**.

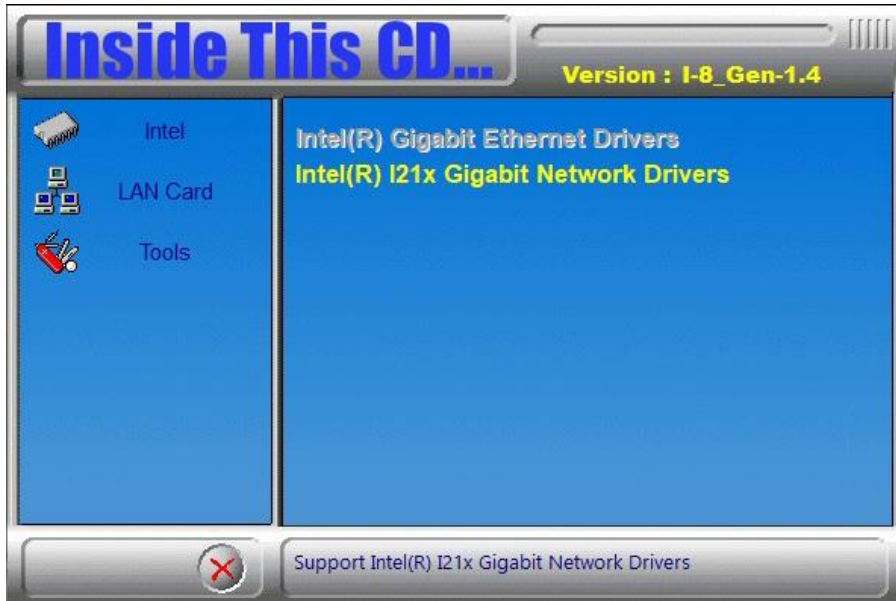

3. The next screen will show the files are being extracted to a temporary folder. When the *Welcome* screen appears, click **Next**.
4. Accept the license agreement and click **Next**.
5. On the *Setup Options* screen, select the desired features you want installed. Then click **Next** to continue.

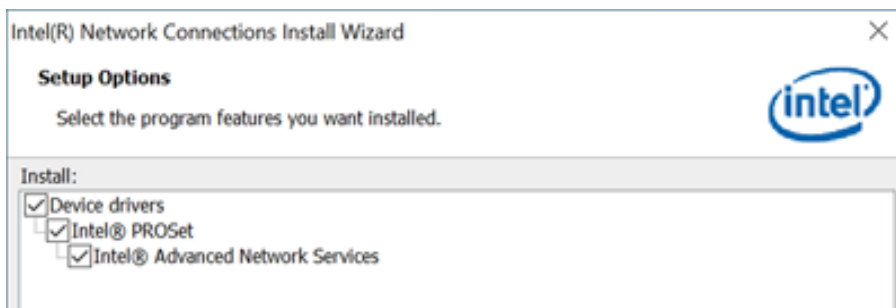

6. On the *Ready to Install the Program* screen, click **Next** to start.

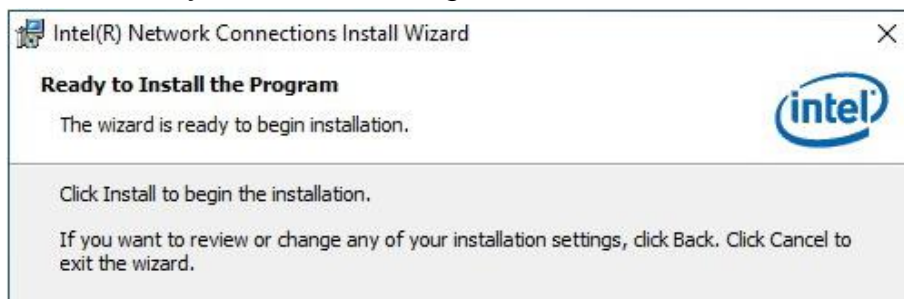

7. When the Install wizard has completed the installation, click **Finish**.

3.6 Intel® ME Drivers Installation


1. Click **Intel** on the left pane and then **Intel(R) Coffelake Chipset Drivers** on the right pane.




2. Click **Intel(R) ME 12.x Drivers**.



3. When the *Welcome* screen appears, click **Next**.

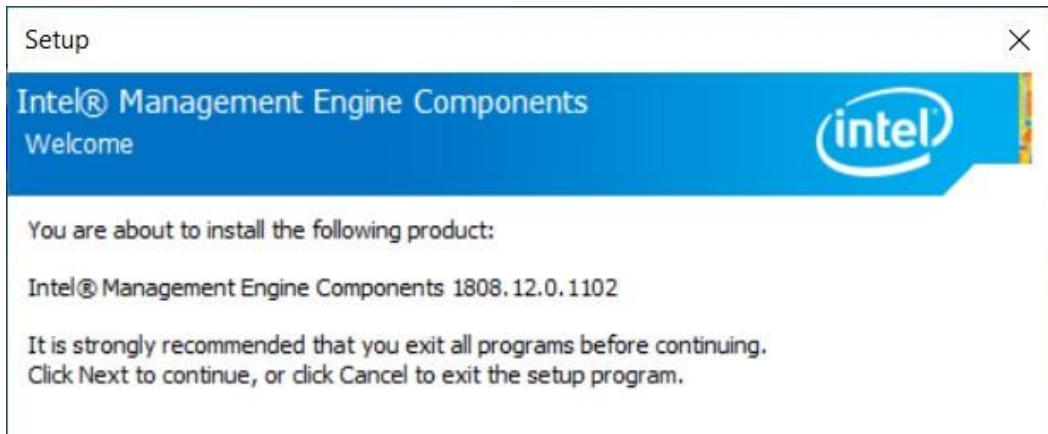

4. Accept the license agreement and click **Next**.
5. On the next screen, click **Next** to accept the destination folder. Installation shall begin.
6. After Intel Management Engine Components have been installed, click **Finish**.

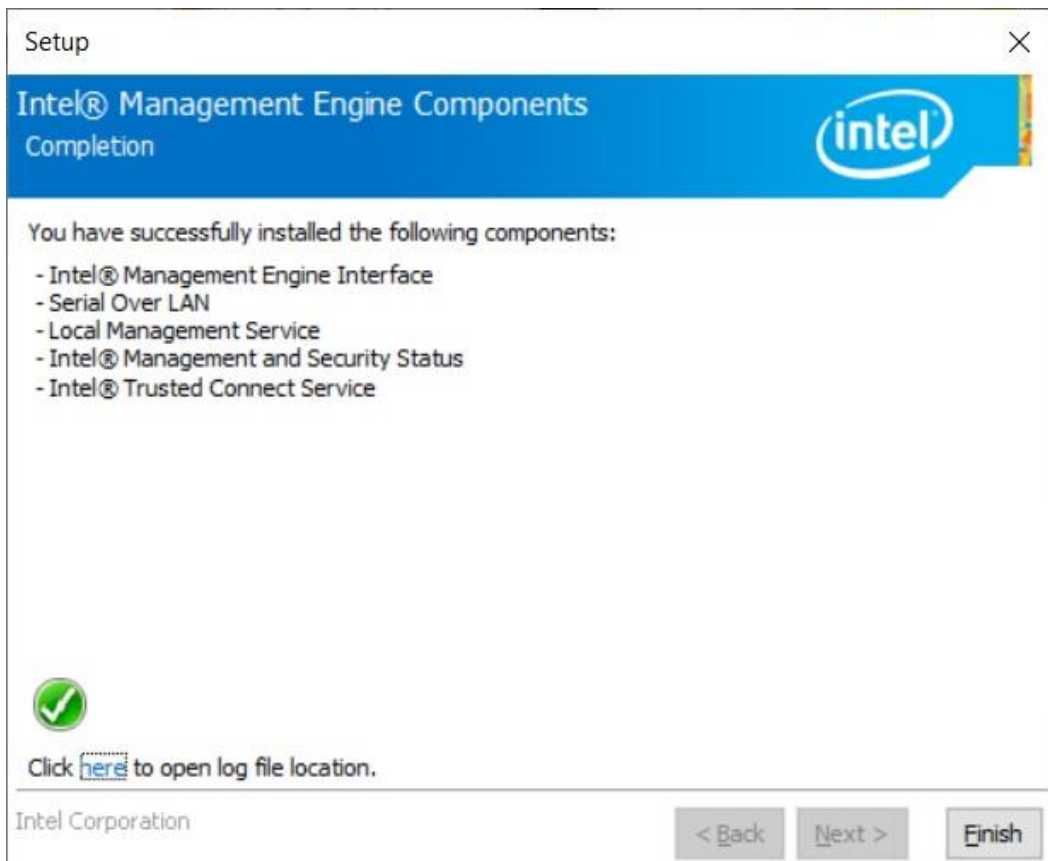

Chapter 4

BIOS Setup

This chapter describes the different settings available in the AMI BIOS that comes with the board. The topics covered in this chapter are as follows:

- Main Settings
- Advanced Settings
- Chipset Settings
- Security Settings
- Boot Settings
- Save & Exit

4.1 Introduction

The BIOS (Basic Input/Output System) installed in the ROM of your computer system supports Intel® processors. The BIOS provides critical low-level support for standard devices such as disk drives, serial ports and parallel ports. It also provides password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

4.2 BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Press the key immediately allows you to enter the Setup utility. If you are a little bit late pressing the key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup.

If you still need to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again.

The following message will appear on the screen:

```
Press <DEL> to Enter Setup
```

In general, press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help, and <Esc> to quit.

When you enter the BIOS Setup utility, the *Main Menu* screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

Warning: It is strongly recommended that you avoid making any changes to the chipset defaults.

These defaults have been carefully chosen by both AMI and your system manufacturer to provide the absolute maximum performance and reliability. Changing the defaults could make the system unstable and crash in some cases.


4.3 Main Settings




| BIOS Setting | Description |
|--------------|--|
| System Date | Sets the date. Use the <Tab> key to switch between the date elements. |
| System Time | Set the time. Use the <Tab> key to switch between the time elements. |

4.4 Advanced Settings

This section allows you to configure, improve your system and allows you to set up some system features according to your preference.


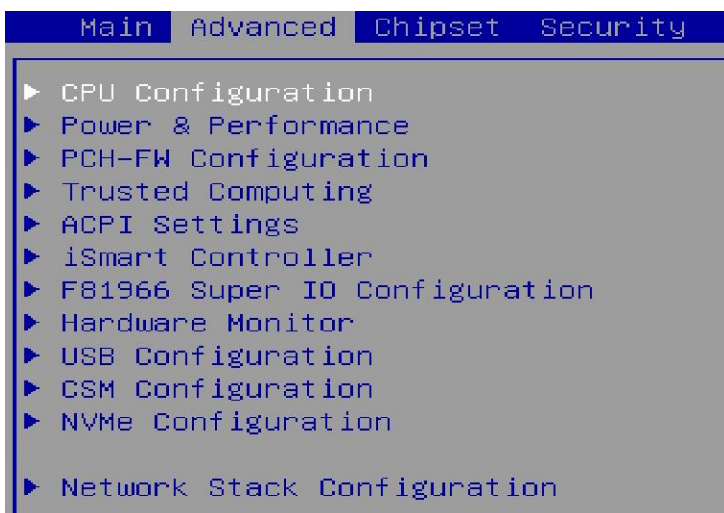


4.4.1 CPU Configuration

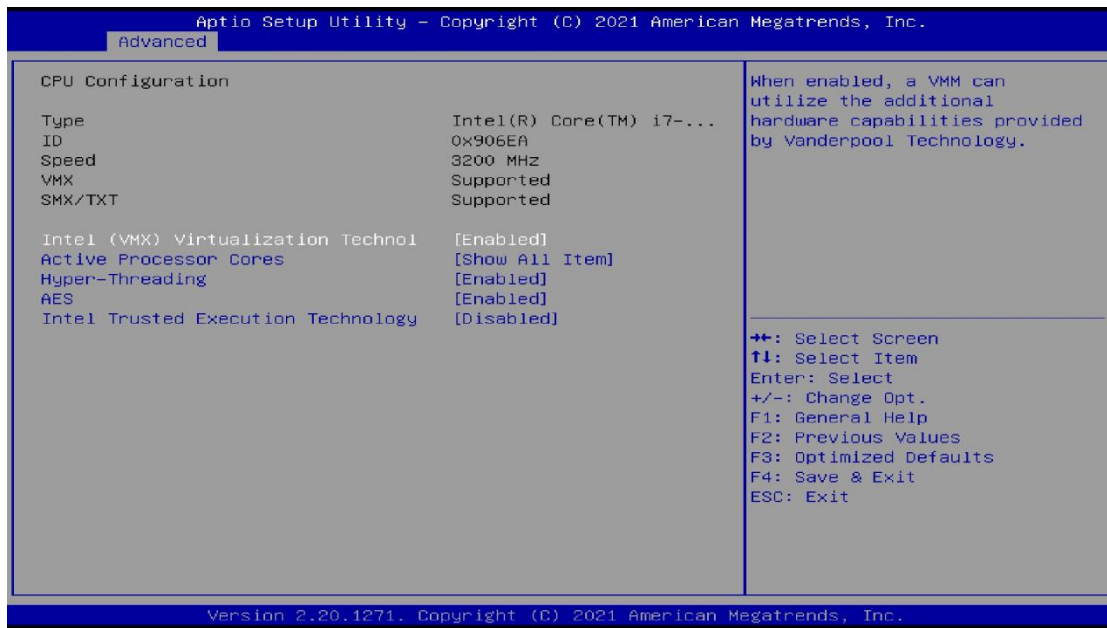


| BIOS Setting | Description |
|---------------------------------------|--|
| Intel (VMX) Virtualization Technology | When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology. |
| Active Processor Cores | Number of cores to enable in each processor package. |
| Hyper-Threading | Enabled or Disabled |
| AES | Enable/Disable AES (Advanced Encryption Standard) |
| Intel Trusted Execution Technology | Enables / Disables utilization of additional hardware capabilities provided by Intel(R) Trusted Execution Technology. Changes require a full power cycle to take effect. |

4.4.2 Power & Performance

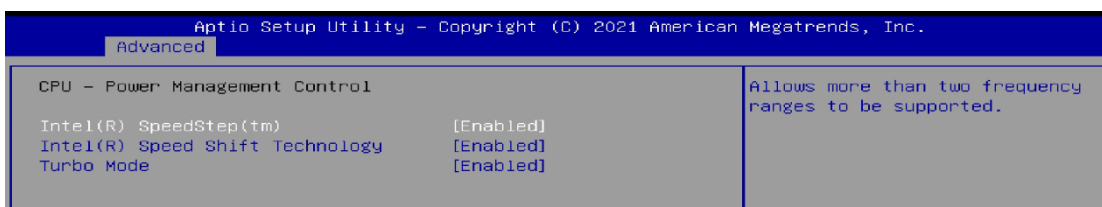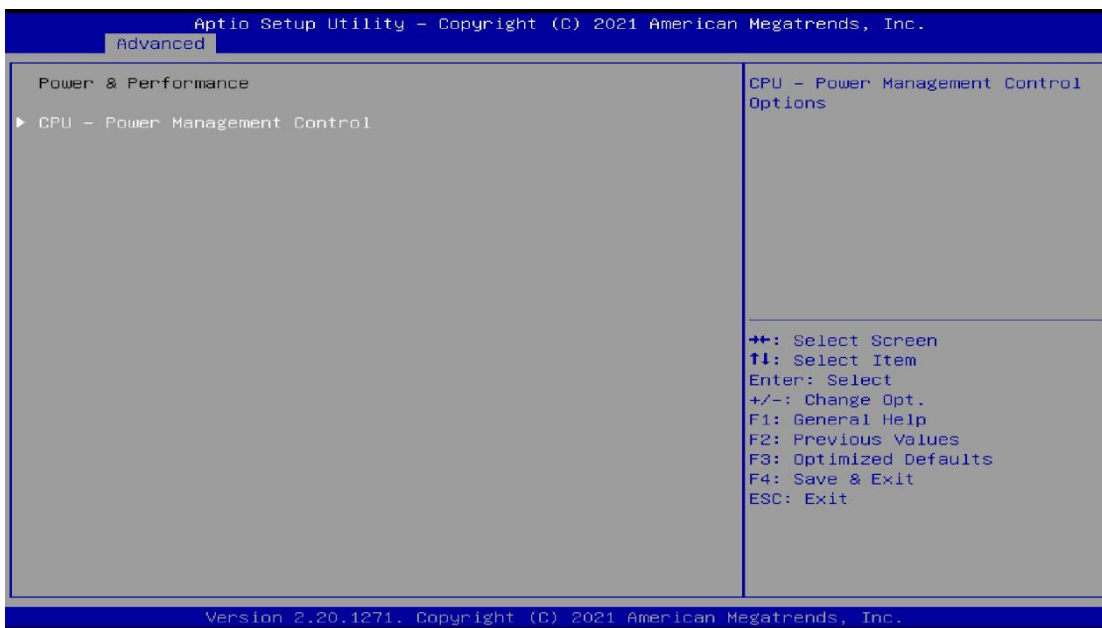


| BIOS Setting | Description |
|---------------------------------|---|
| CPU – Power Management Control | CPU power management control options. |
| Intel(R) SpeedStep(tm) | Allows more than two frequency ranges to be supported. |
| Intel(R) Speed Shift Technology | Enable/Disable Intel(R) Speed Shift Technology support. Enabling will expose the CPPC V2 interface to allow for hardware to allow for hardware controlled P states. |
| Turbo Mode | Enables/Disables processor Turbo Mode (requires Intel Speed Step or Intel Speed Shift to be available and enabled). |

4.4.3 PCH-FW Configuration

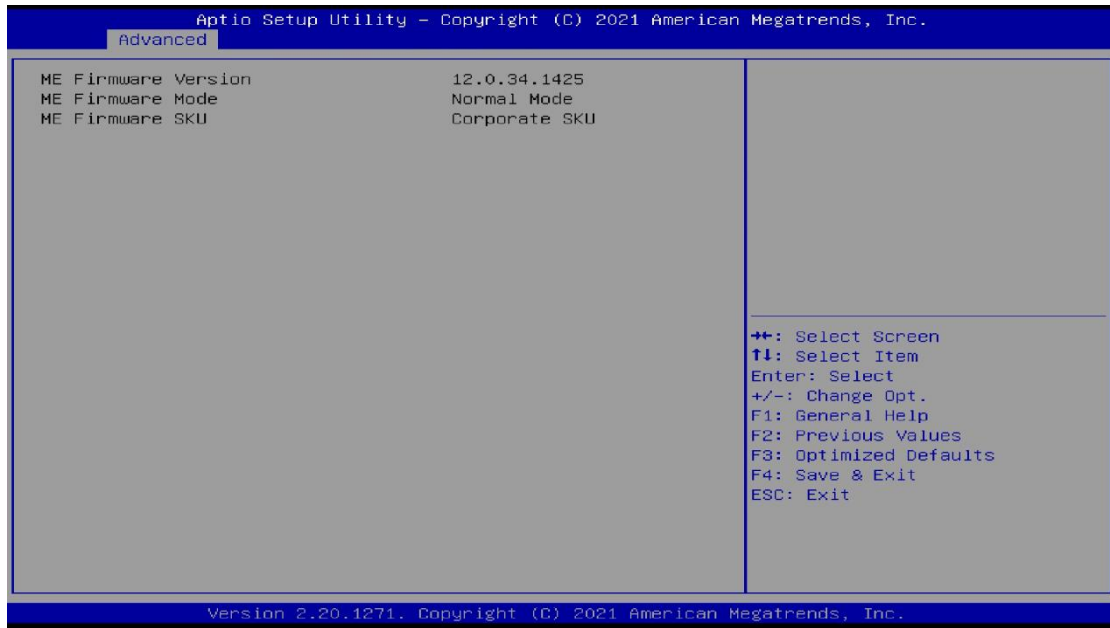


| BIOS Setting | Description |
|--------------|---|
| ME State | When disable, ME will be put into ME Temporarily Disabled Mode. |

4.4.4 ACPI Settings

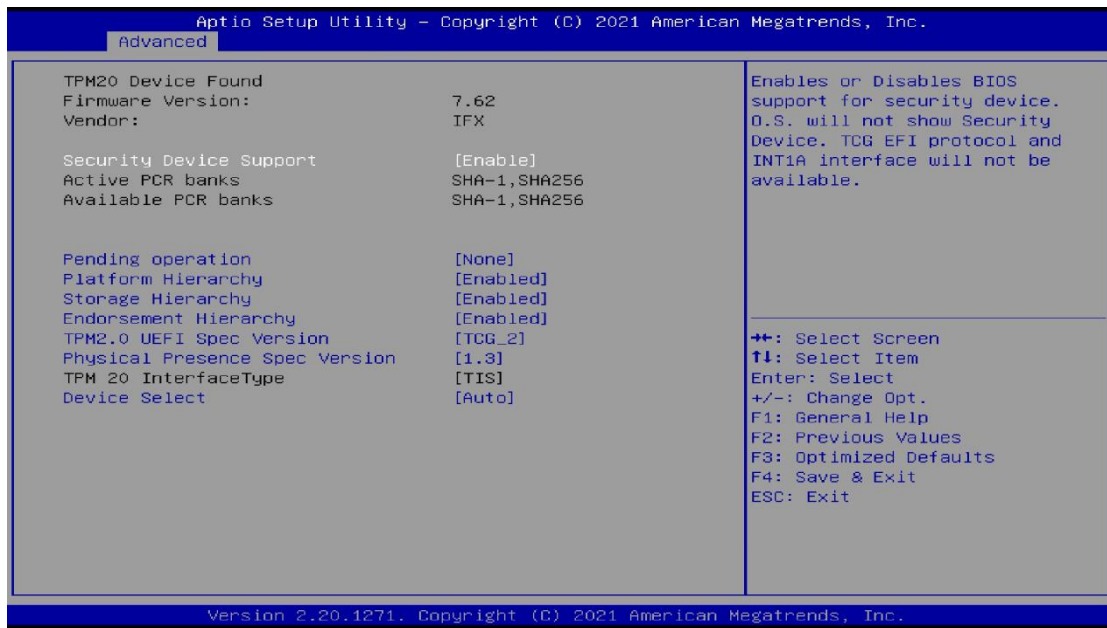

| BIOS Setting | Description |
|---|---|
| Security Device Support | Enables / Disables BIOS support for security device. OS will not show security device. TCG EFI protocol and INT1A interface will not be available. |
| Pending operation | Schedule an operation for the security device. Note: Your computer will reboot during restart in order to change state of security device. |
| Platform Hierarchy Storage Hierarchy Enorsement Hierarchy | Options: Enable or Disable |
| TPM2.0 UEFI Spec Version | Select the TCG2 Spec Version Support. TCG_1_2: the compatible mode for Win8/Win10 TCG_2: Support new TCG2 protocol and event format for Win10 or later |
| Physical Presence Spec Version | Select to tell OS to support PPI Spect Version 1.2 or 1.3. Some HCK tests might not support 1.3. |
| Device Select | TPM 1.2 will restrict support to TPM 1.2 devices. TPM 2.0 will restrict support to TPM 2.0 devices. Auto will support both with the default set to TPM 2.0 devices. If not found, TPM 1.2 devices will be enumerated. |

4.4.5 ACPI Settings

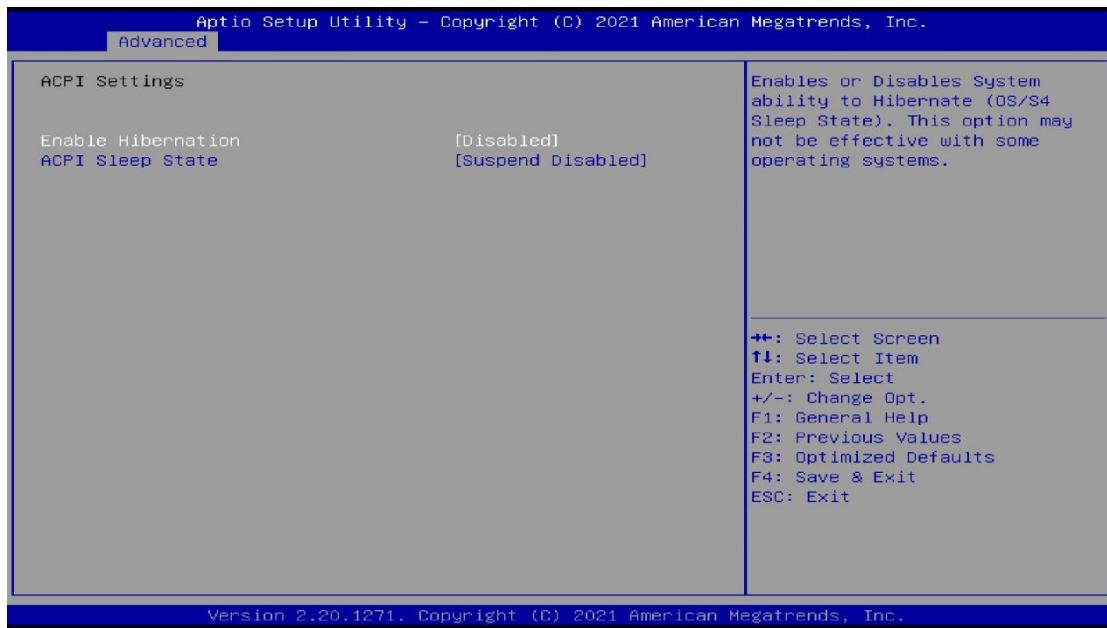


| BIOS Setting | Description |
|--------------------|---|
| Enable Hibernation | Enables / Disables system ability to hibernate (OS/S4 Sleep State). This option may not be effective with some operating systems. |
| ACPI Sleep State | Selects the highest ACPI sleep state the system will enter when the SUSPEND button is pressed. |

4.4.6 iSmart Controller




| BIOS Setting | Description |
|------------------------------|--|
| Power-On after Power failure | Enables / Disables the system to be turned on automatically after a power failure. |
| PWR Resume Delay | Enabled or Disabled Power on resume delay |
| Temperature Guardian | Enabled or Disabled |
| Schedule Slot 1 / 2 | <p>Sets up the hour / minute for system powe-on.</p> <p>Important: If you would like to set up a schedule between adjacent days, configure two schedule slots.</p> <p>For example, if setting up a schedule from Wednesday 5 p.m. to Thursday 2 a.m., configure two schedule slots. But if setting up a schedule from 3 p.m to 5 p.m. on Wednesday, configure only a schedule slot.</p> |

4.4.7 F81966 Super IO Configuration

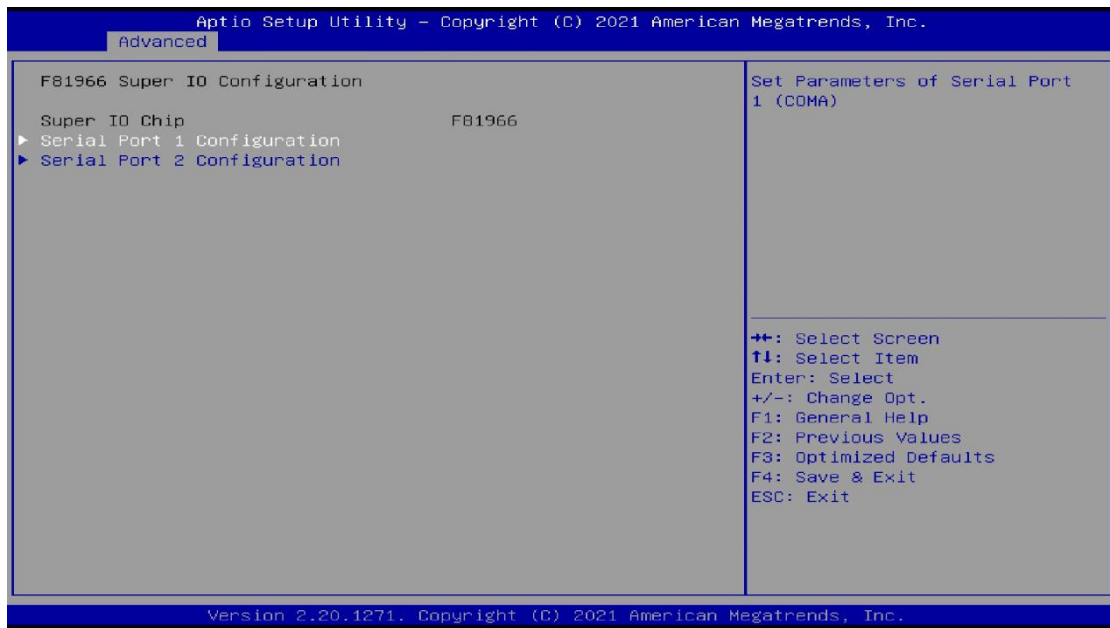


| BIOS Setting | Description |
|-----------------------------|--|
| Serial Port 1 Configuration | Sets parameters of Serial Port 1 (COMA). |
| Serial Port | Enable / Disable the serial port. |
| Change Settings | Select an optimal setting for the Super IO device. |

4.4.8 Hardware Monitor

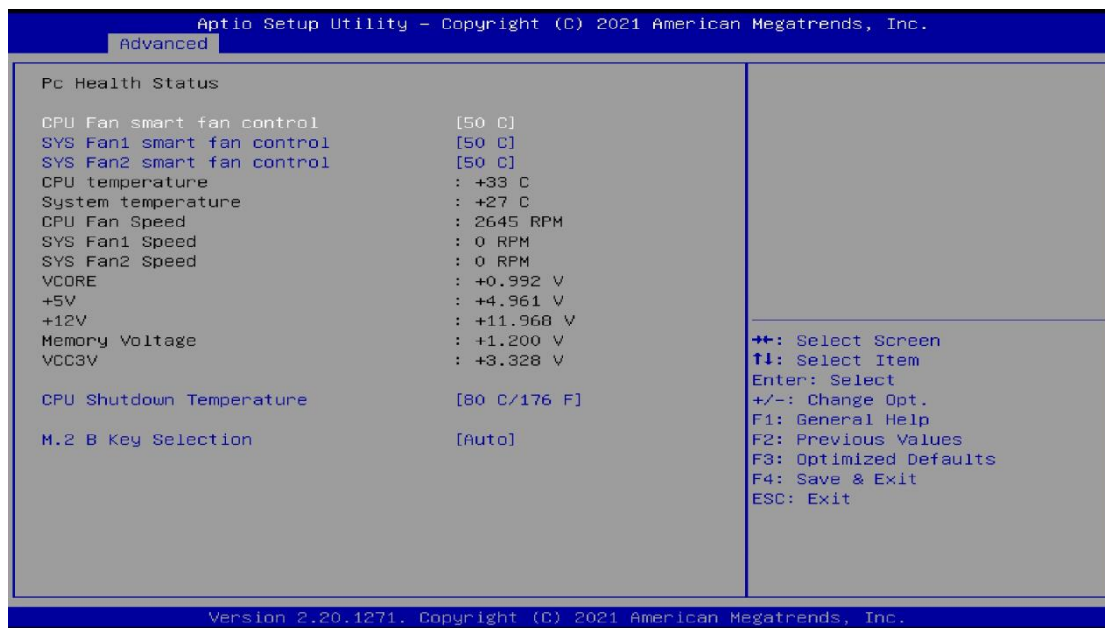

| BIOS Setting | Description |
|--------------------------|---|
| Temperatures / Voltages | These fields are the parameters of the hardware monitoring function feature of the motherboard. The values are read-only values as monitored by the system and show the PC health status. |
| CPU Shutdown Temperature | Options: Disabled 70C / 158F 75C / 167F 80C / 176 F 85C / 185F 90C / 194F 95C / 203F |
| M.2 B Key Selection | Options: Auto Sata / USB 3.0 PCIe |

4.4.9 USB Configuration

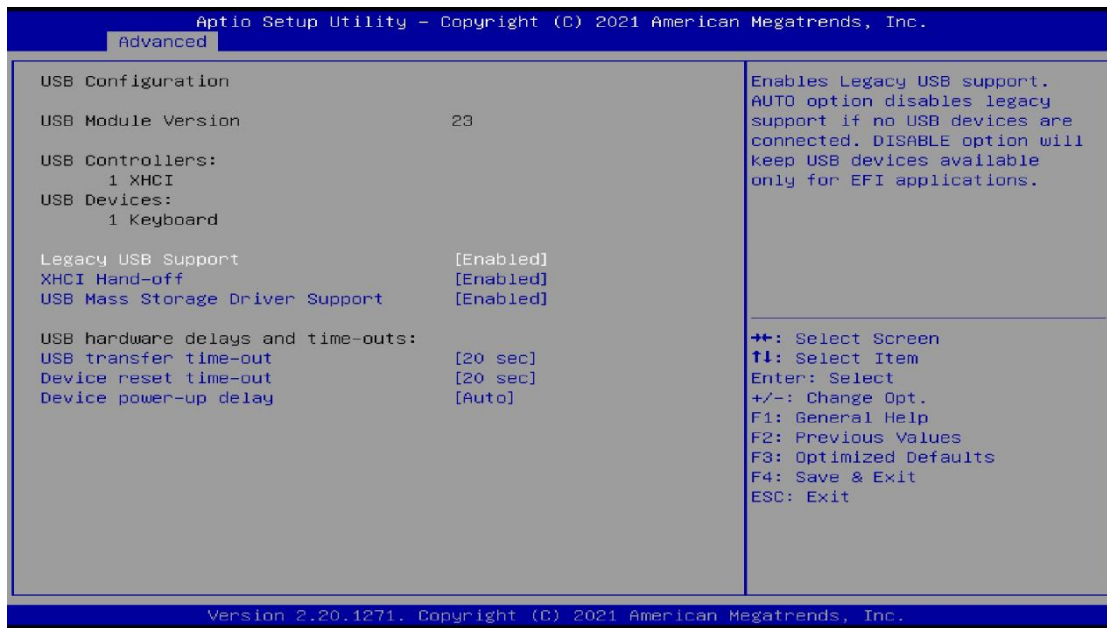


| BIOS Setting | Description |
|---------------------------------|---|
| Legacy USB Support | <ul style="list-style-type: none"> • Enable: Enables Legacy USB Support. • Auto: Disables legacy support if no USB devices are connected. • Disable: Keeps USB devices available only for EFI applications. |
| XHCI Hand-off | This is a workaround for OSEs without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver. |
| USB Mass Storage Driver Support | Enables / Disables the support for USB mass storage driver. |
| USB Transfer time-out | The time-out value for Control, Bulk, and Interrupt transfers. |
| Device reset time-out | USB mass storage device Start Unit command time-out. Options: 10/20/30/40 sec |
| Device power-up delay | The maximum time the device will take before it properly reports itself to the Host Controller. "Auto" uses default value for a Root port it is 100ms. But for a Hub port, the delay is taken from Hub descriptor. |

4.4.10 CSM Configuration




| BIOS Setting | Description |
|--------------|--|
| CSM Support | Enables/Disables CSM Support. |
| Network | Controls the execution of UEFI and Legacy PXE OpROM. |

4.4.11 NVMe Configuration

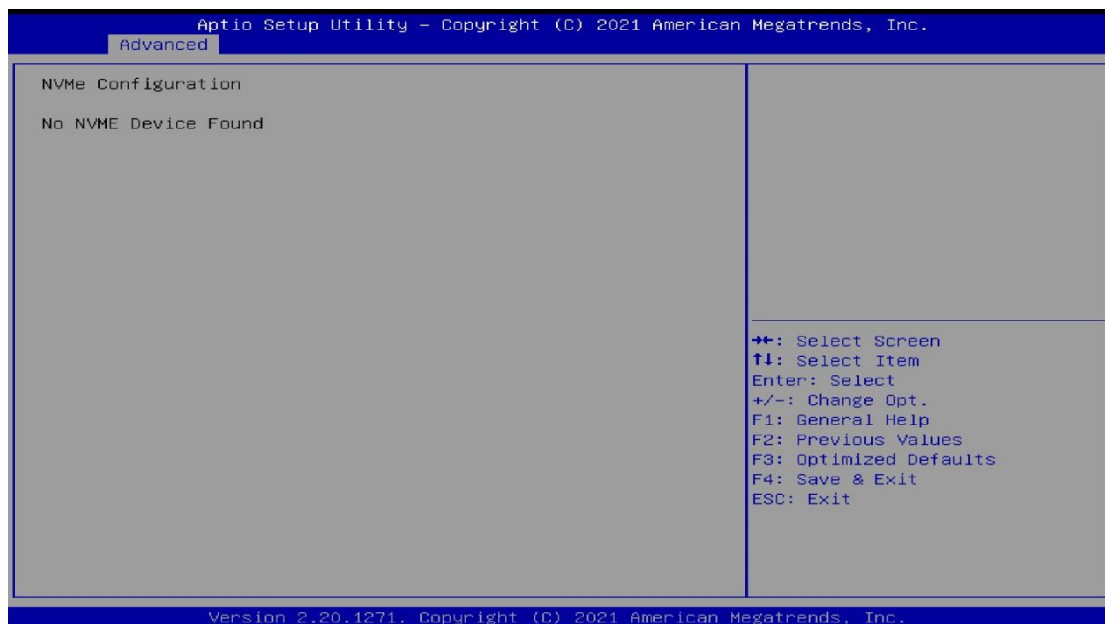


4.4.12 Network Stack Configuration

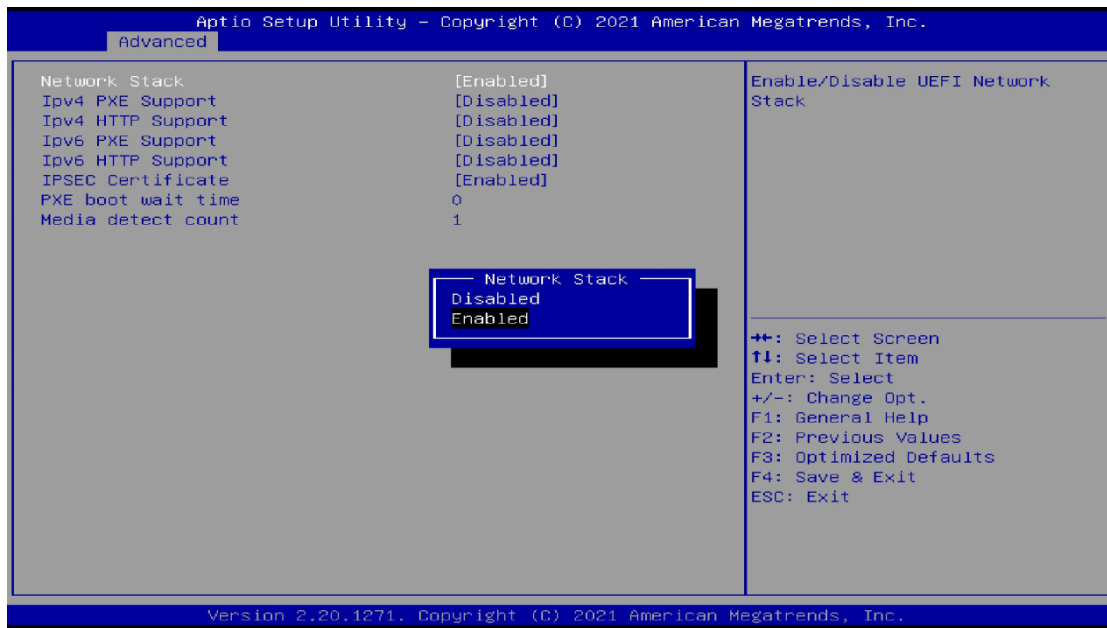


| BIOS Setting | Description |
|--------------------|---|
| Network Stack | Enables / Disables UEFI Network Stack. |
| Ipv4 PXE Support | Enable / Disable IPv4 PXE boot support. If disaabled, IPv4 PXE boot support will not be available. |
| Ipv4 HTTP Support | Enable / Disable IPv4 HTTP support. If disaabled, IPv4 HTTP boot support will not be available. |
| Ipv6 PXE Support | Enable / Disable IPv6 PXE boot support. If disaabled, IPv6 PXE boot support will not be available. |
| Ipv6 HTTP Support | Enable / Disable IPv6 HTTP boot support. If disaabled, IPv6 HTTP boot support will not be available. |
| IPSEC Certificate | Support to Enable/Disable IPSEC certificate for Ikev. |
| PXE boot wait time | Wait time in seconds to press ESC key to abort the PXE boot. Use either +/- or numeric keys to set the value. |
| Media detect count | Number of times the presence of media will be chcked. Use either +/- or numeric keys to set the value. |

4.5 Chipset Settings

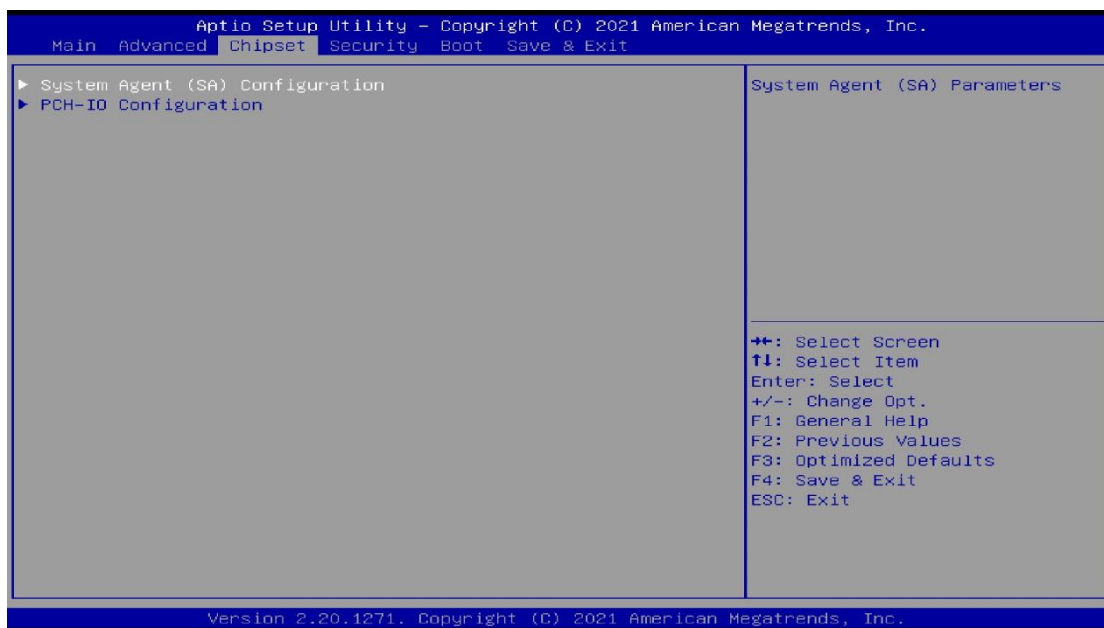

| BIOS Setting | Description |
|---------------------------------|------------------------------|
| System Agent (SA) Configuration | System Agent (SA) parameters |
| PCH-IO Configuration | PCH parameters |

4.5.1 System Agent (SA) Configuration

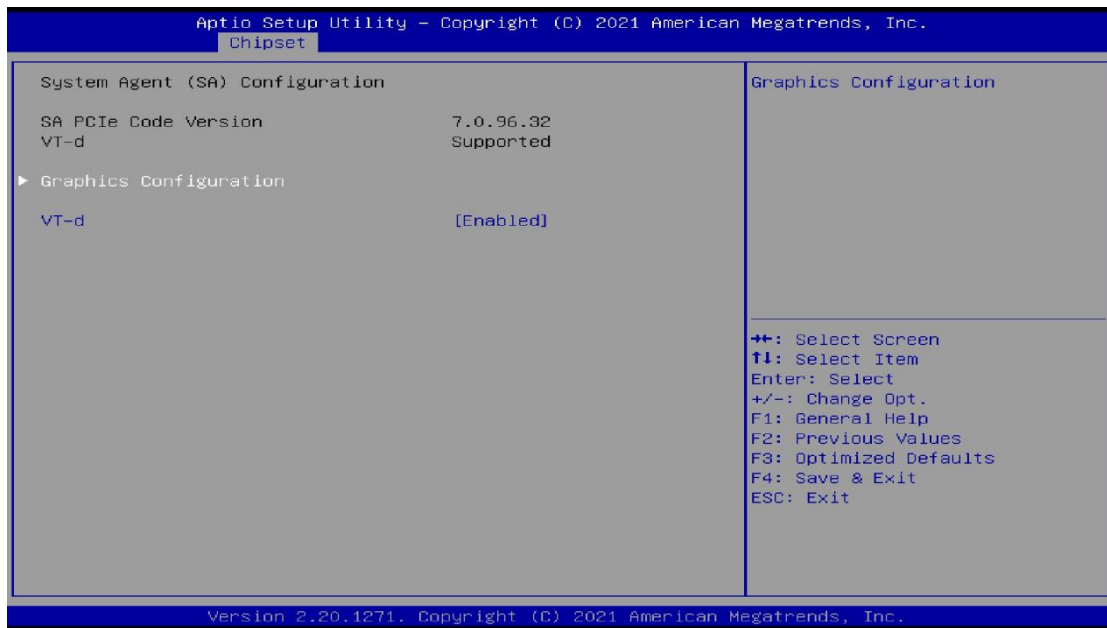


| BIOS Setting | Description |
|------------------------|--|
| Graphics Configuration | Configures the graphics settings. |
| VT-d | Checks if VT-d function on MCH is supported. |

4.5.1.1. Graphics Configuration

| Aptio Setup Utility - Copyright (C) 2021 American Chipset | |
|--|------------|
| Graphics Configuration | |
| Graphics Turbo IMON Current | 31 |
| Skip Scanning of External Gfx Card | [Disabled] |
| Primary Display | [Auto] |
| Select PCIE Card | [Auto] |
| ▶ External Gfx Card Primary Display Configuration | |
| Internal Graphics | [Auto] |
| GTT Size | [8MB] |
| Aperture Size | [256MB] |
| DVMT Pre-Allocated | [60M] |
| DVMT Total Gfx Mem | [MAX] |


| BIOS Setting | Description |
|---|---|
| Graphics Turbo IMON Current | Graphics turbo IMON current values supported (14-31) |
| Skip Scanning of External Gfx Card | If Enable, it will not scan for External Gfx Card on PEG and PCH PCIE Ports. |
| Primary Display | Select which of IGFX/PEG/PCI Graphics device should be primary display or select SG for switchable Gfx. Options: Auto, IGFX, PEG, PCI, SG |
| Select PCIE Card | Selects the card used on the platform. Auto skips GPIO based Power Enable to dGPU. E1k Creek 4: DGPU Power Enable = Active Low. PEG Eva1: DGPU Power Enable = Active High. |
| External Gfx Card Primary Display Configuration | Primary PEG: Select PEG0/PEG1/PEG2/PEG3 Graphics device should be Primary PEG. Primary PCIE: Select Auto / PCIE1~7 of D28: F0~FF7, PCIE8~15 of D29: F0!F7, PCIE16~19 of D27: F0~F3, Graphics device should be Primary PCIE. |
| Internal Graphics | Keep IGFX enabled based on the setup options. Options: Auto, Disabled, Enabled |
| GTT Size | Sets the GTT size as 2 MB, 4 MB, or 8 MB. |
| Aperture Size | Sets the aperture size as 128 MB, 256 MB, 512 MB, 1024 MB or 2048 MB. Note: Above 4 GB MMIO BIOS assignment is automatically enabled when selecting 2048 MB aperture. To use this feature, disable CSM support. |
| DVMT Pre-Allocated | 0M, 32M, 64M, 4M, 8M, 12M, 16M, 20M, 24M, 28M, 32M/F7, 36M, 40M, 44M, 48M, 52M, 56M, 60M |
| DVMT Total Gfx Mem | 128M, 256M, MAX |

4.5.2 PCH-IO Configuration

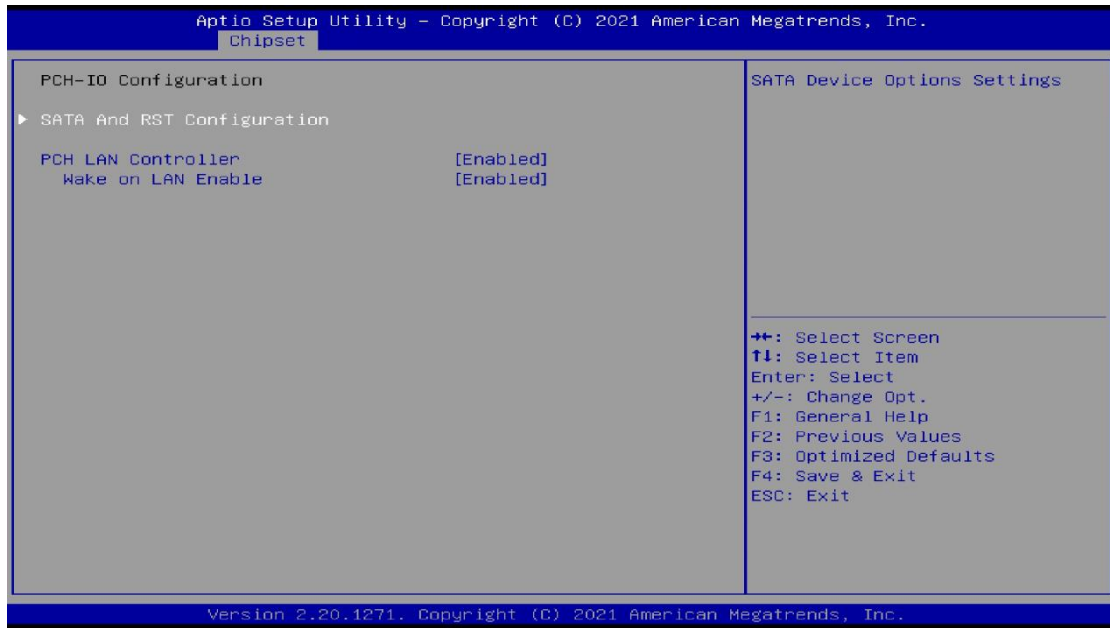


| BIOS Setting | Description |
|----------------------------|--|
| SATA and RST Configuration | Configures SATA devices. |
| PCH LAN Controller | Enables / Disables the onboard NIC. |
| Wake on LAN Enable | Enables / Disables the integrated LAN to wake up the system. |

4.5.2.1. SATA and RST Configuration:

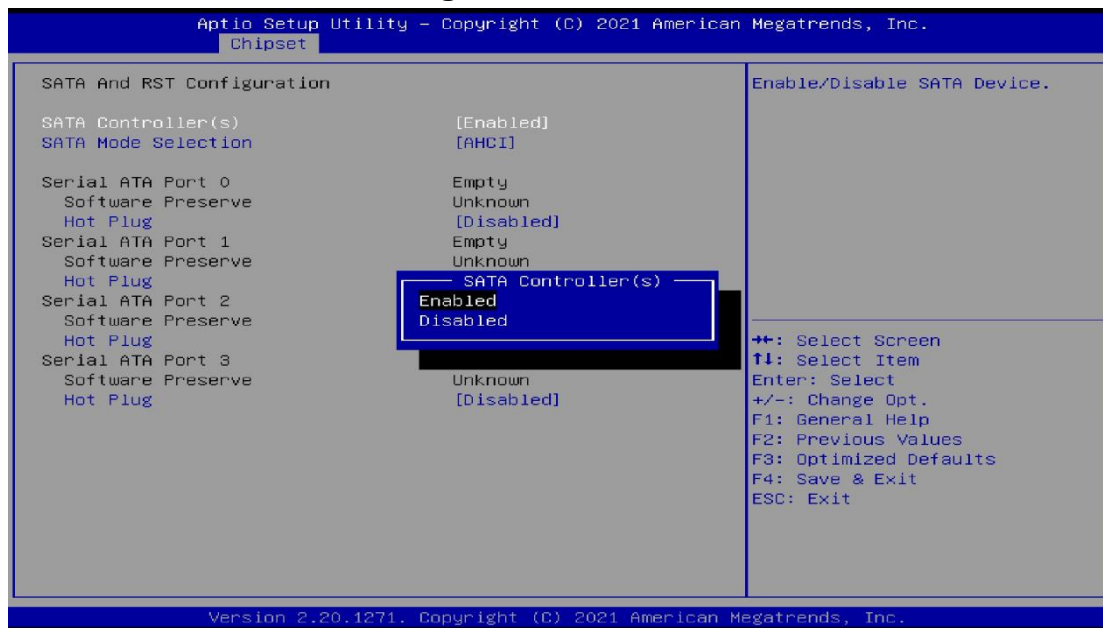


| BIOS Setting | Description |
|---------------------|--|
| SATA Controller(s) | Enables / Disables the SATA device. |
| SATA Mode Selection | Determines how SATA controller(s) operate. Options: AHCI / Intel RST Premium |
| Serial ATA Ports | Enables / Disables serial ports. |
| SATA Ports Hot Plug | Enables / Disables SATA Ports HotPlug. |

4.6 Security Settings

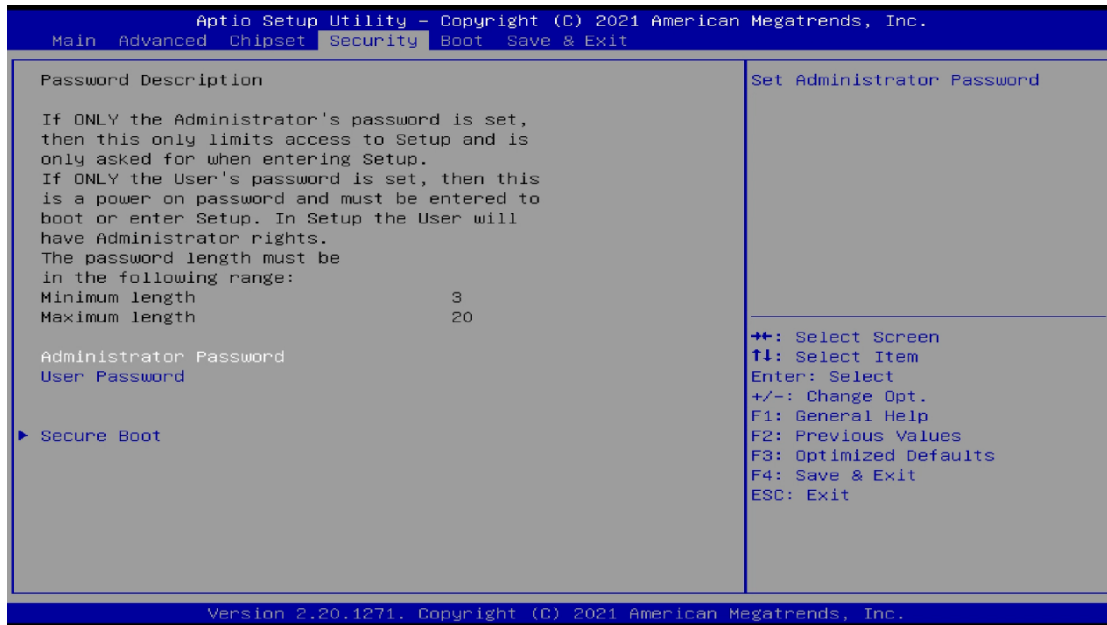


| BIOS Setting | Description |
|------------------------|---|
| Administrator Password | Sets an administrator password for the setup utility. |
| User Password | Sets a user password. |
| Secure Boot | Configures Secure Boot. |

4.6.1 Secure Boot

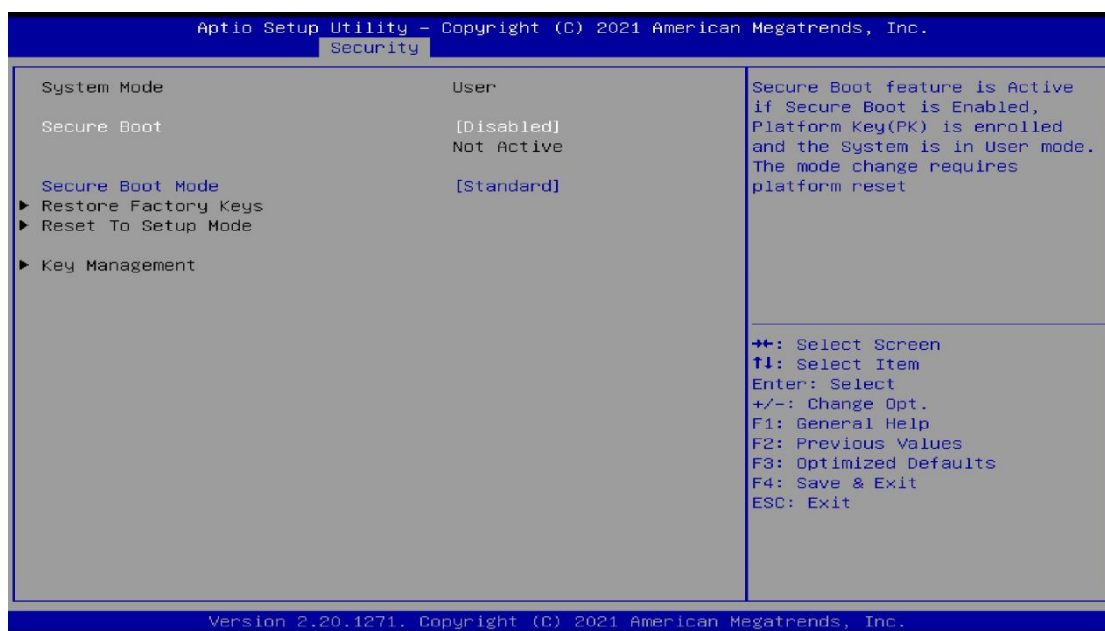

| BIOS Setting | Description |
|----------------------|--|
| Secure Boot | Secure Boot feature is Active if Secure Boot is enabled. Platform Key (PK) Is enrolled and the system is in User mode. The mode change requires platform reset. |
| Secure Boot Mode | Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication. |
| Restore Factory Keys | Forces system to user mode. Install factory default Secure Boot key databases. |
| Key Management | Enables expert users to modify Secure Boot Policy variables without full authentication. |

4.7 Boot Settings

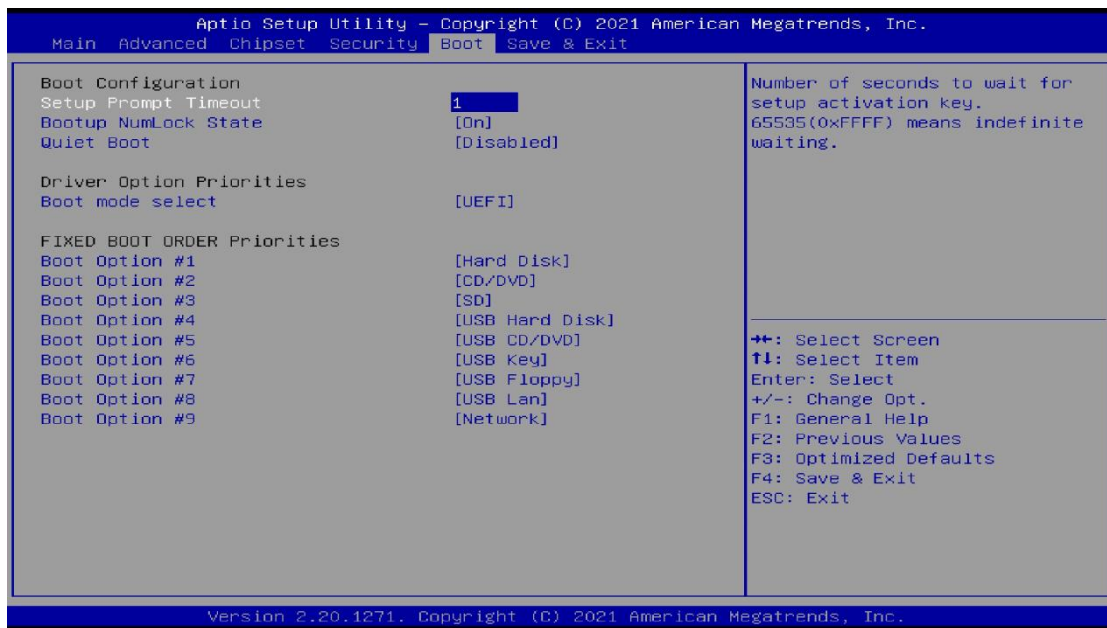

| BIOS Setting | Description |
|------------------------|---|
| Setup Prompt Timeout | Number of seconds to wait for setup activation key. 65535(0xFFFF) means indefinite waiting. |
| Bootup NumLock State | Selects the keyboard NumLock state. |
| Quiet Boot | Enables / Disables Quiet Boot option. |
| Boot mode select | Selects a Boot mode, Legacy / UEFI. |
| Boot Option Priorities | Sets the system boot order. |

4.8 Save & Exit Settings



| BIOS Setting | Description |
|---------------------------|---|
| Save Changes and Exit | Exits system setup after saving the changes. |
| Discard Changes and Exit | Exits system setup without saving any changes. |
| Save Changes and Reset | Resets the system after saving the changes. |
| Discard Changes and Reset | Resets system setup without saving any changes. |
| Save Changes | Saves changes done so far to any of the setup options. |
| Discard Changes | Discards changes done so far to any of the setup options. |
| Restore Defaults | Restores / Loads defaults values for all the setup options. |
| Save as User Defaults | Saves the changes done so far as User Defaults. |
| Restore User Defaults | Restores the user defaults to all the setup options. |

Appendix

This section provides the mapping addresses of peripheral devices and the sample code of watchdog timer configuration.

- I/O Port Address Map
- Interrupt Request Lines (IRQ)

A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

| Address | Device Description |
|-----------------------|-----------------------------------|
| 0x00000A00-0x00000A0F | Motherboard resources |
| 0x00000A10-0x00000A1F | Motherboard resources |
| 0x00000A10-0x00000A1F | Motherboard resources |
| 0x0000002E-0x0000002F | Motherboard resources |
| 0x0000004E-0x0000004F | Motherboard resources |
| 0x00000061-0x00000061 | Motherboard resources |
| 0x00000063-0x00000063 | Motherboard resources |
| 0x00000065-0x00000065 | Motherboard resources |
| 0x00000067-0x00000067 | Motherboard resources |
| 0x00000070-0x00000070 | Motherboard resources |
| 0x00000080-0x00000080 | Motherboard resources |
| 0x00000092-0x00000092 | Motherboard resources |
| 0x000000B2-0x000000B3 | Motherboard resources |
| 0x00000680-0x0000069F | Motherboard resources |
| 0x0000164E-0x0000164F | Motherboard resources |
| 0x00000020-0x00000021 | Programmable interrupt controller |
| 0x00000024-0x00000025 | Programmable interrupt controller |
| 0x00000028-0x00000029 | Programmable interrupt controller |
| 0x0000002C-0x0000002D | Programmable interrupt controller |
| 0x00000030-0x00000031 | Programmable interrupt controller |
| 0x00000034-0x00000035 | Programmable interrupt controller |
| 0x00000038-0x00000039 | Programmable interrupt controller |
| 0x0000003C-0x0000003D | Programmable interrupt controller |
| 0x000000A0-0x000000A1 | Programmable interrupt controller |
| 0x000000A4-0x000000A5 | Programmable interrupt controller |
| 0x000000A8-0x000000A9 | Programmable interrupt controller |
| 0x000000AC-0x000000AD | Programmable interrupt controller |
| 0x000000B0-0x000000B1 | Programmable interrupt controller |
| 0x000000B4-0x000000B5 | Programmable interrupt controller |
| 0x000000B8-0x000000B9 | Programmable interrupt controller |
| 0x000000BC-0x000000BD | Programmable interrupt controller |
| 0x000004D0-0x000004D1 | Programmable interrupt controller |
| 0x00001854-0x00001857 | Motherboard resources |
| 0x000003F8-0x000003FF | Communications Port (COM1) |
| 0x000002F8-0x000002FF | Communications Port (COM2) |
| 0x00001800-0x000018FE | Motherboard resources |


| | |
|-----------------------|--|
| 0x00000000-0x00000CF7 | PCI Express Root Complex |
| 0x00000D00-0x0000FFFF | PCI Express Root Complex |
| 0x000000F0-0x000000F0 | Numeric data processor |
| 0x00005050-0x00005057 | Standard SATA AHCI Controller |
| 0x00005040-0x00005043 | Standard SATA AHCI Controller |
| 0x00005020-0x0000503F | Standard SATA AHCI Controller |
| 0x0000FFF8-0x0000FFFF | Intel(R) Active Management Technology - SOL (COM3) |
| 0x00002000-0x000020FE | Motherboard resources |
| 0x00000040-0x00000043 | System timer |
| 0x00000050-0x00000053 | System timer |
| 0x00000060-0x00000060 | Standard PS/2 Keyboard |
| 0x00000064-0x00000064 | Standard PS/2 Keyboard |
| 0x00004000-0x0000407F | NVIDIA RTX A2000 |
| 0x00004000-0x0000407F | Intel(R) PCIe Controller (x16) - 1901 |
| 0x000003B0-0x000003BB | NVIDIA RTX A2000 |
| 0x000003B0-0x000003BB | Intel(R) PCIe Controller (x16) - 1901 |
| 0x000003C0-0x000003DF | NVIDIA RTX A2000 |
| 0x000003C0-0x000003DF | Intel(R) PCIe Controller (x16) - 1901 |
| 0x00003000-0x00003FFF | Intel(R) PCI Express Root Port #12 - A333 |
| 0x0000EFA0-0x0000EFBF | Intel(R) SMBus - A323 |

B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

| Level | | Function |
|-------|----------------|--|
| IRQ | 0 | System timer |
| IRQ | 1 | Standard PS/2 Keyboard |
| IRQ | 3 | Communications Port (COM2) |
| IRQ | 4 | Communications Port (COM1) |
| IRQ | 11 | Intel(R) SMBus - A323 |
| IRQ | 11 | Intel(R) Thermal Subsystem - A379 |
| IRQ | 12 | Microsoft PS/2 Mouse |
| IRQ | 13 | Numeric data processor |
| IRQ | 14 | Intel(R) Serial IO GPIO Host Controller - INT3450 |
| IRQ | 16 | High Definition Audio Controller |
| IRQ | 17 | High Definition Audio Controller |
| IRQ | 19 | Intel(R) Active Management Technology - SOL (COM3) |
| IRQ | 55-511 | Microsoft ACPI-Compliant System |
| IRQ | 4294967282 | Intel(R) Management Engine Interface |
| IRQ | 4294967283-290 | Intel(R) I211 Gigabit Network Connection |
| IRQ | 4294967291 | Intel(R) USB 3.1 eXtensible Host Controller - 1.10 (Microsoft) |
| IRQ | 4294967292 | NVIDIA RTX A2000 |
| IRQ | 4294967293 | Intel(R) Ethernet Connection (7) I219-LM |
| IRQ | 4294967294 | Standard SATA AHCI Controller |


C. UMCC Quick Guide

On the desktop, right-click the  icon and select **UMCC C** from the menu to control the panel.


After modifying SP-63ER resolution with the AP, modify the Windows display setting again. Since the Windows "Apply" default value is 15 seconds, the user needs to set the Windows display setting to more than 15 seconds. Press "Tab" and "Enter" keys to confirm the setting.




Turn On: Switch the button to turn on or off the UMCC function



Pattern Off: Switch the button to inspect the embedded color pattern



RGBW Off: Embedded RGBW Pattern: Switch the button to check the RGBW

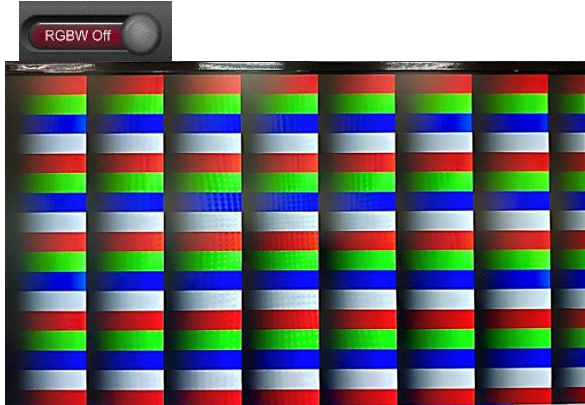


Identity: User can identify multiple devices by setting ID




HW Reset: User can reset all the [advanced settings to the factory settings](#).



Setting: User can set the display duration in UMCC setting window.

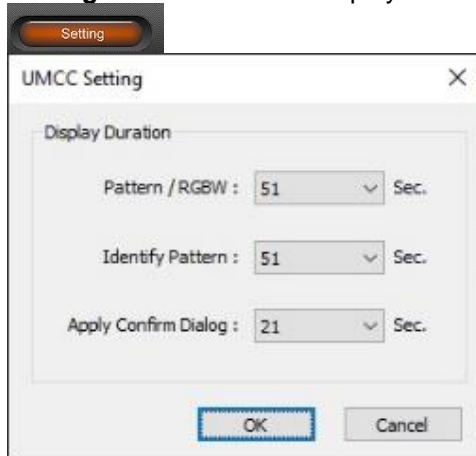

Apply: Click "Apply" to confirm the setting



Device information: This shows Software version, device No. and device ID.



Device Setting Sync: User can write multi-device parameter



Horizon Polarity: Set the H SYNC Polarity



Vertical Polarity: Set the V SYNC Polarity



Color Depth: Set display color depth



Audio Support: Set HDMI Audio On or off




EDID Version: Set the EDID version.



DP Port: Change the screen resolution by resolution table.



Vertical rate: Define the parameter for vertical rate.

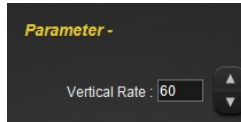


Horizon Display Parameter: Set the parameter for Horizon rate.



Vertical Display Parameter: Set the parameter for Vertical rate.



✕ Normal Setting

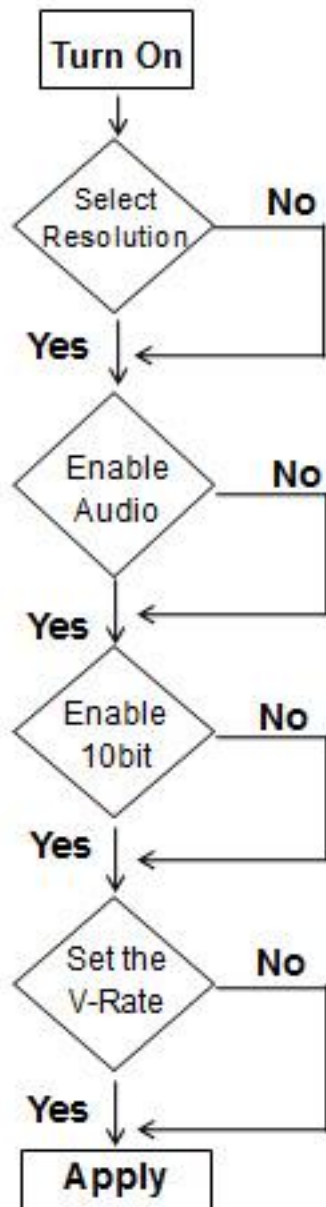

✕ Advanced Setting

